



G100 / R60

MONTAGEHANDLEIDING - ASSEMBLY MANUAL - MONTAGEANLEITUNG - MANUEL DE MONTAGE




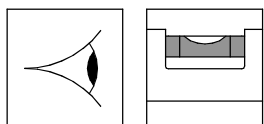


- ✓ EN 12604
- ✓ EN 12453
- ✓ EN 13241

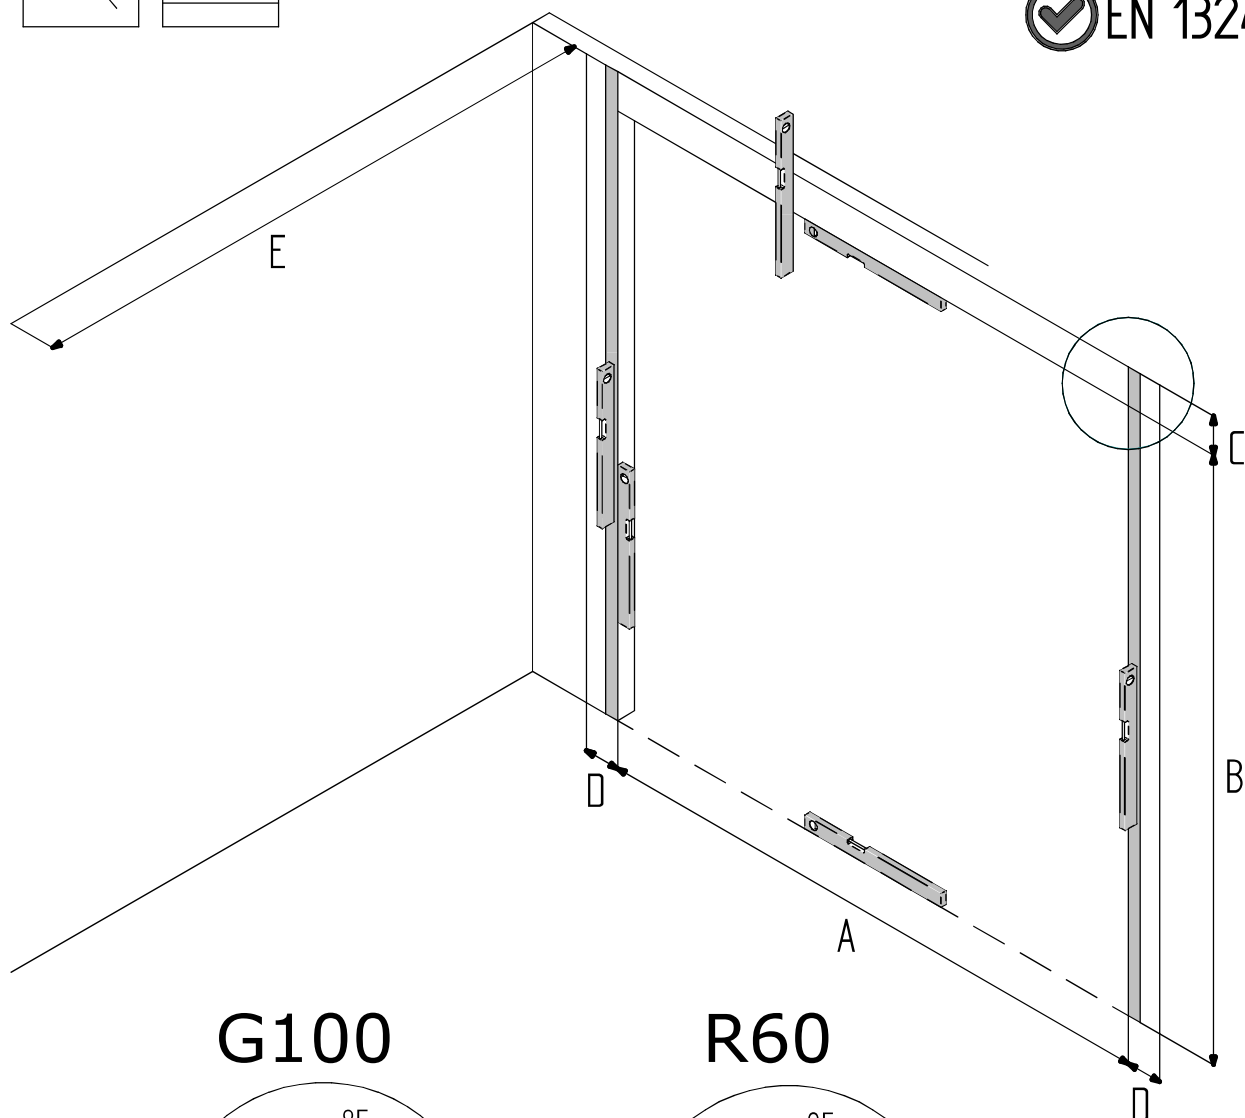



G100

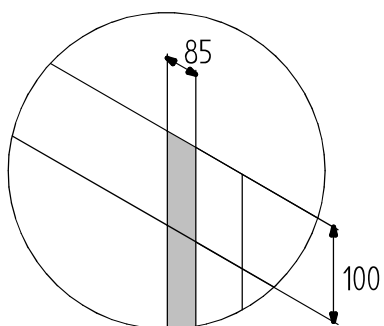



R60

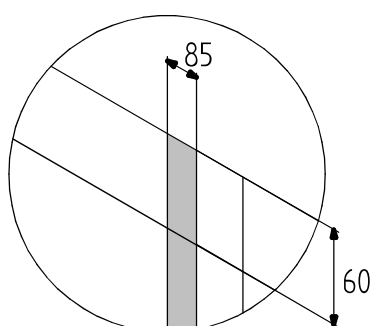


A	B	C	D	E
DLW	DLH	FHR	FSR	FMD
Dagmaat breedte	Dagmaat hoogte	Vrije bovenruimte	Vrije zijruimte	Inbouwdiepte
Day Light Width	Day Light Height	Free Head Room	Free Side Room	Free Mounting Dept
Tageslichtbreite	Tageslichthöhe	Sturzfreiraum	Freie Seitenraum	Freie Einbautiefe
Largeur de bai	Hauteur de baie	Linteau disponible	Ecoinçons Recuis	Recul
Lățime Gol	Înălțime Gol	Buiandrug Liber	Spațiul Liber Lateral	Spațiul Liber în Adâncime
Szélesség	Magasság	Szabad szemöldök magasság	Szabad hely oldalt	Szabad beépítési mélység





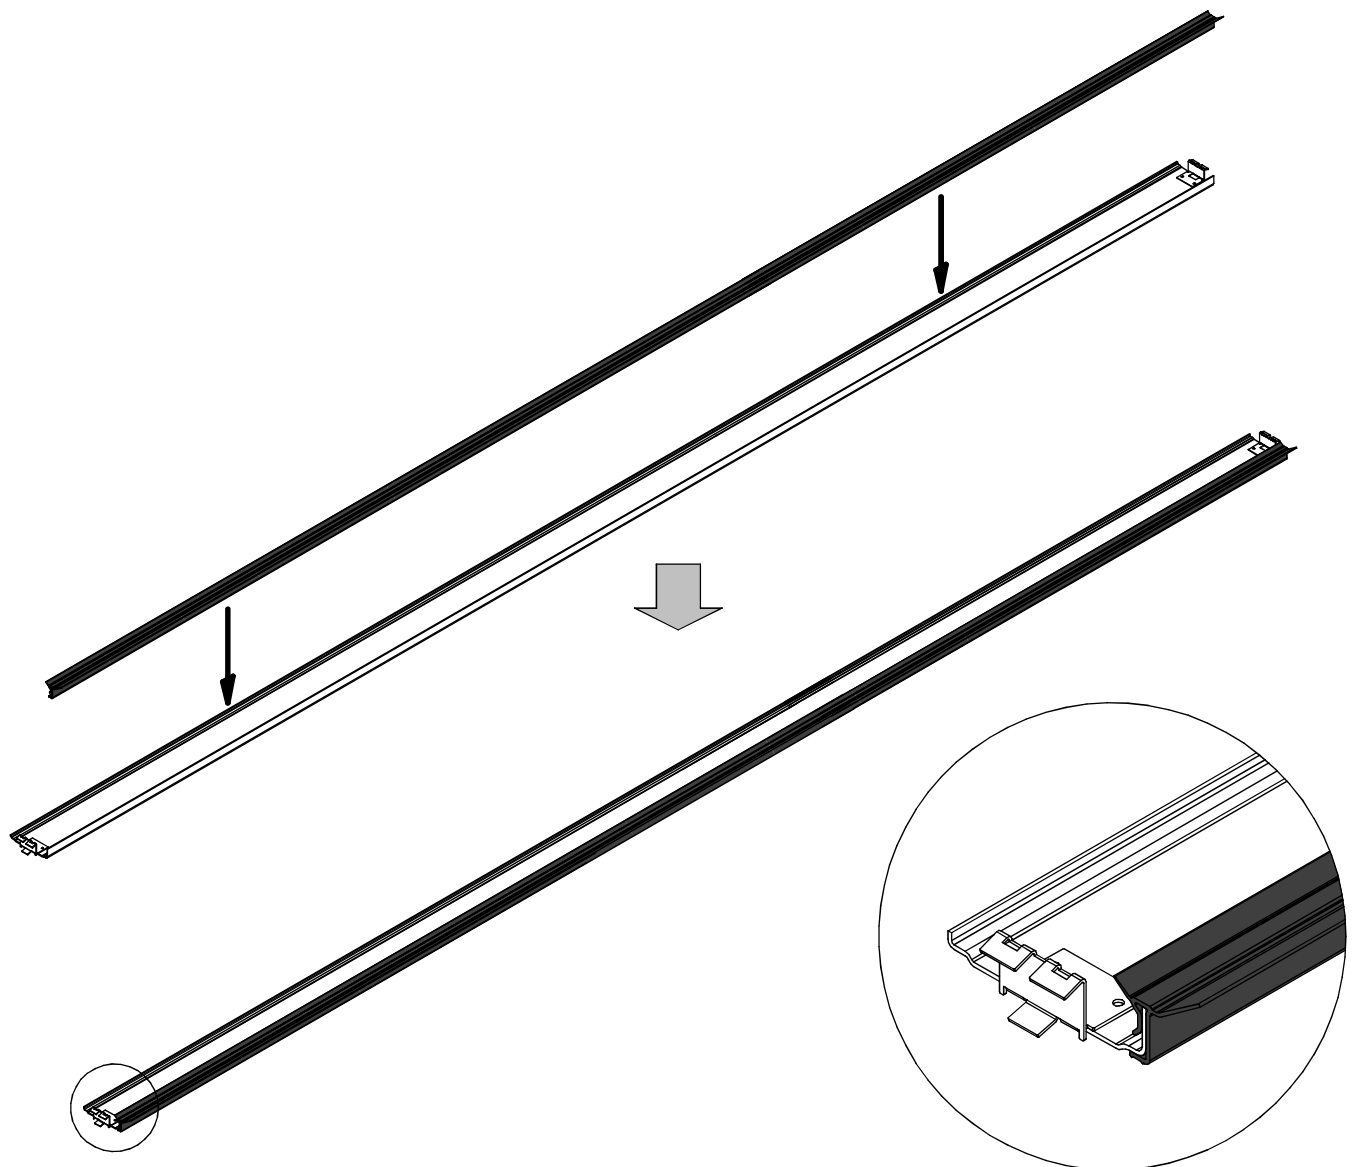
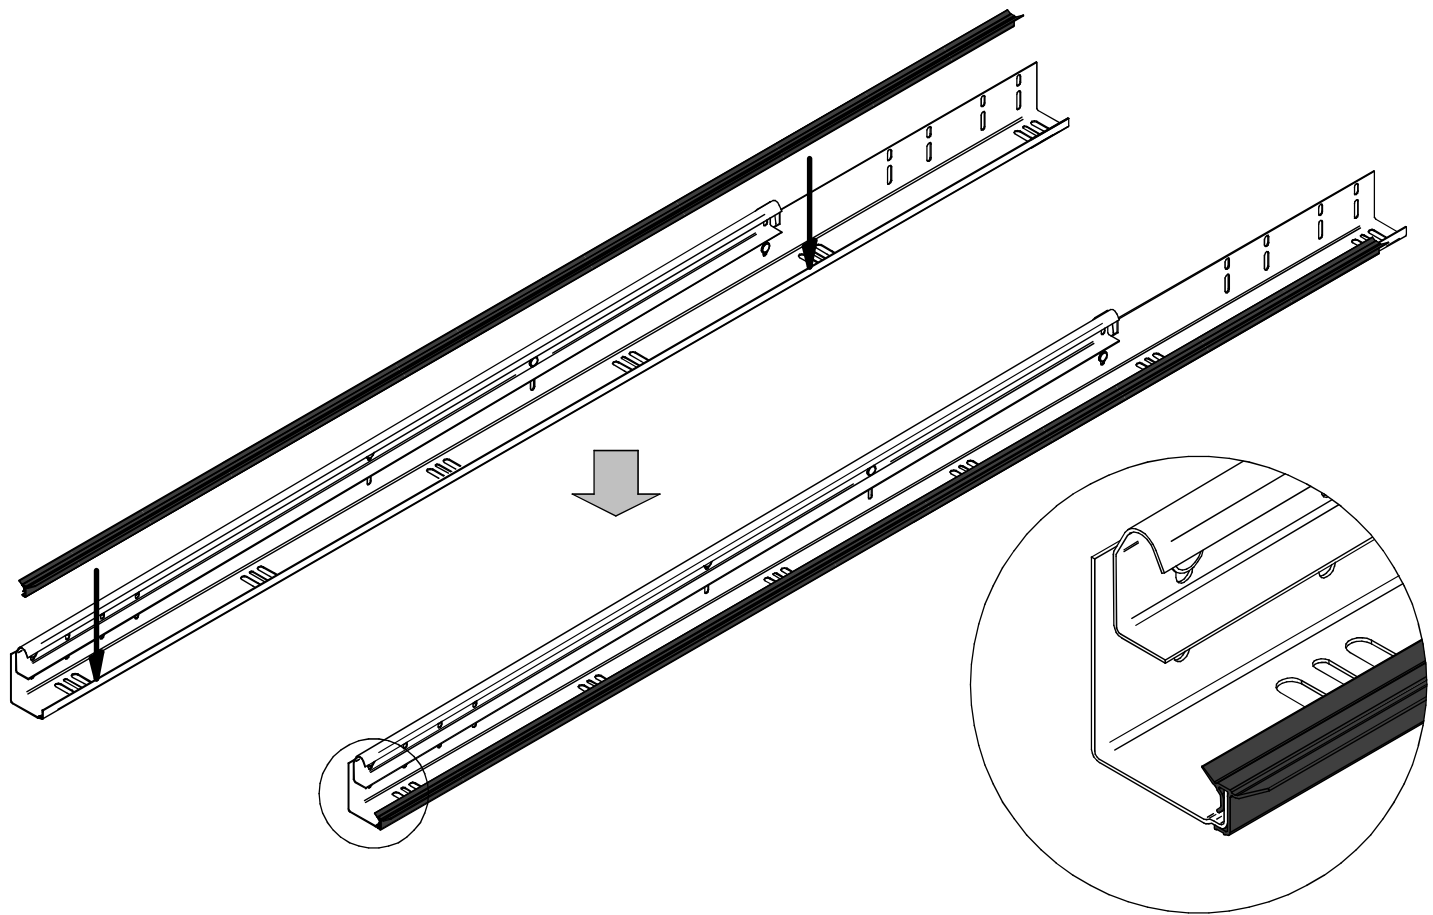


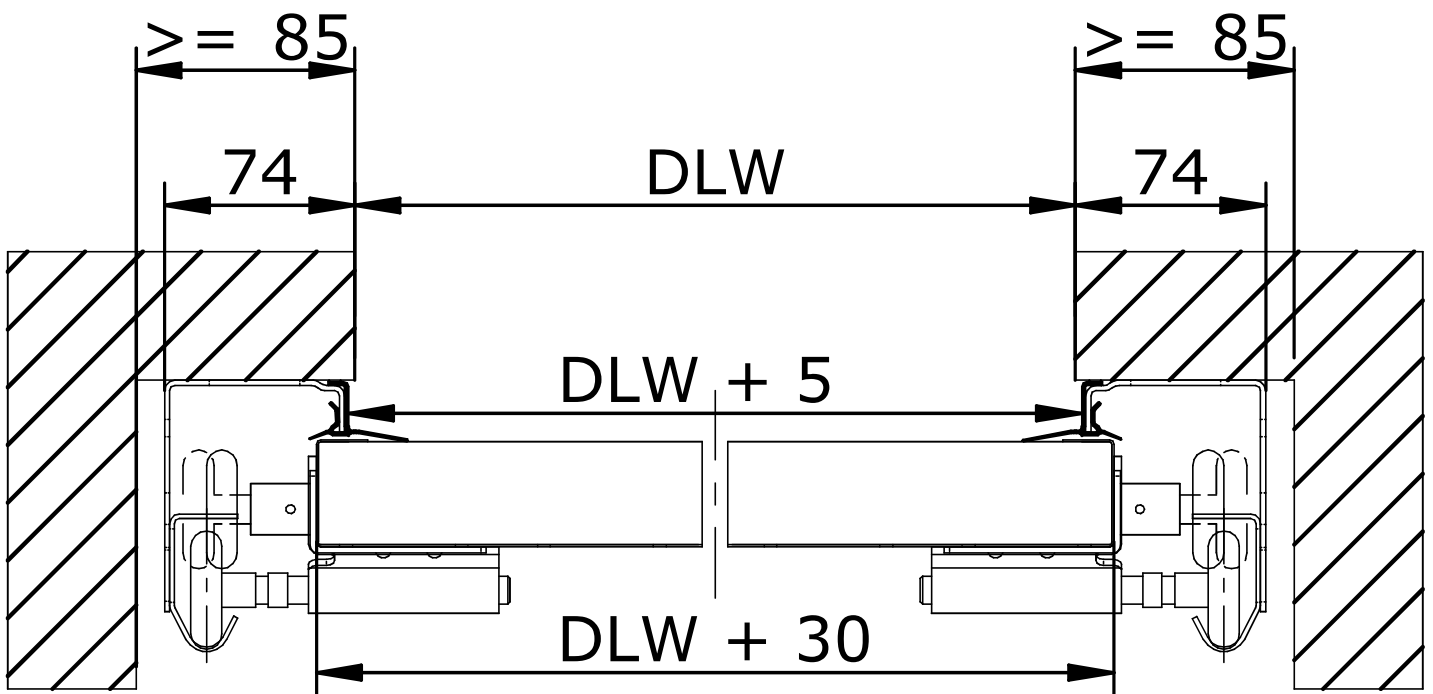






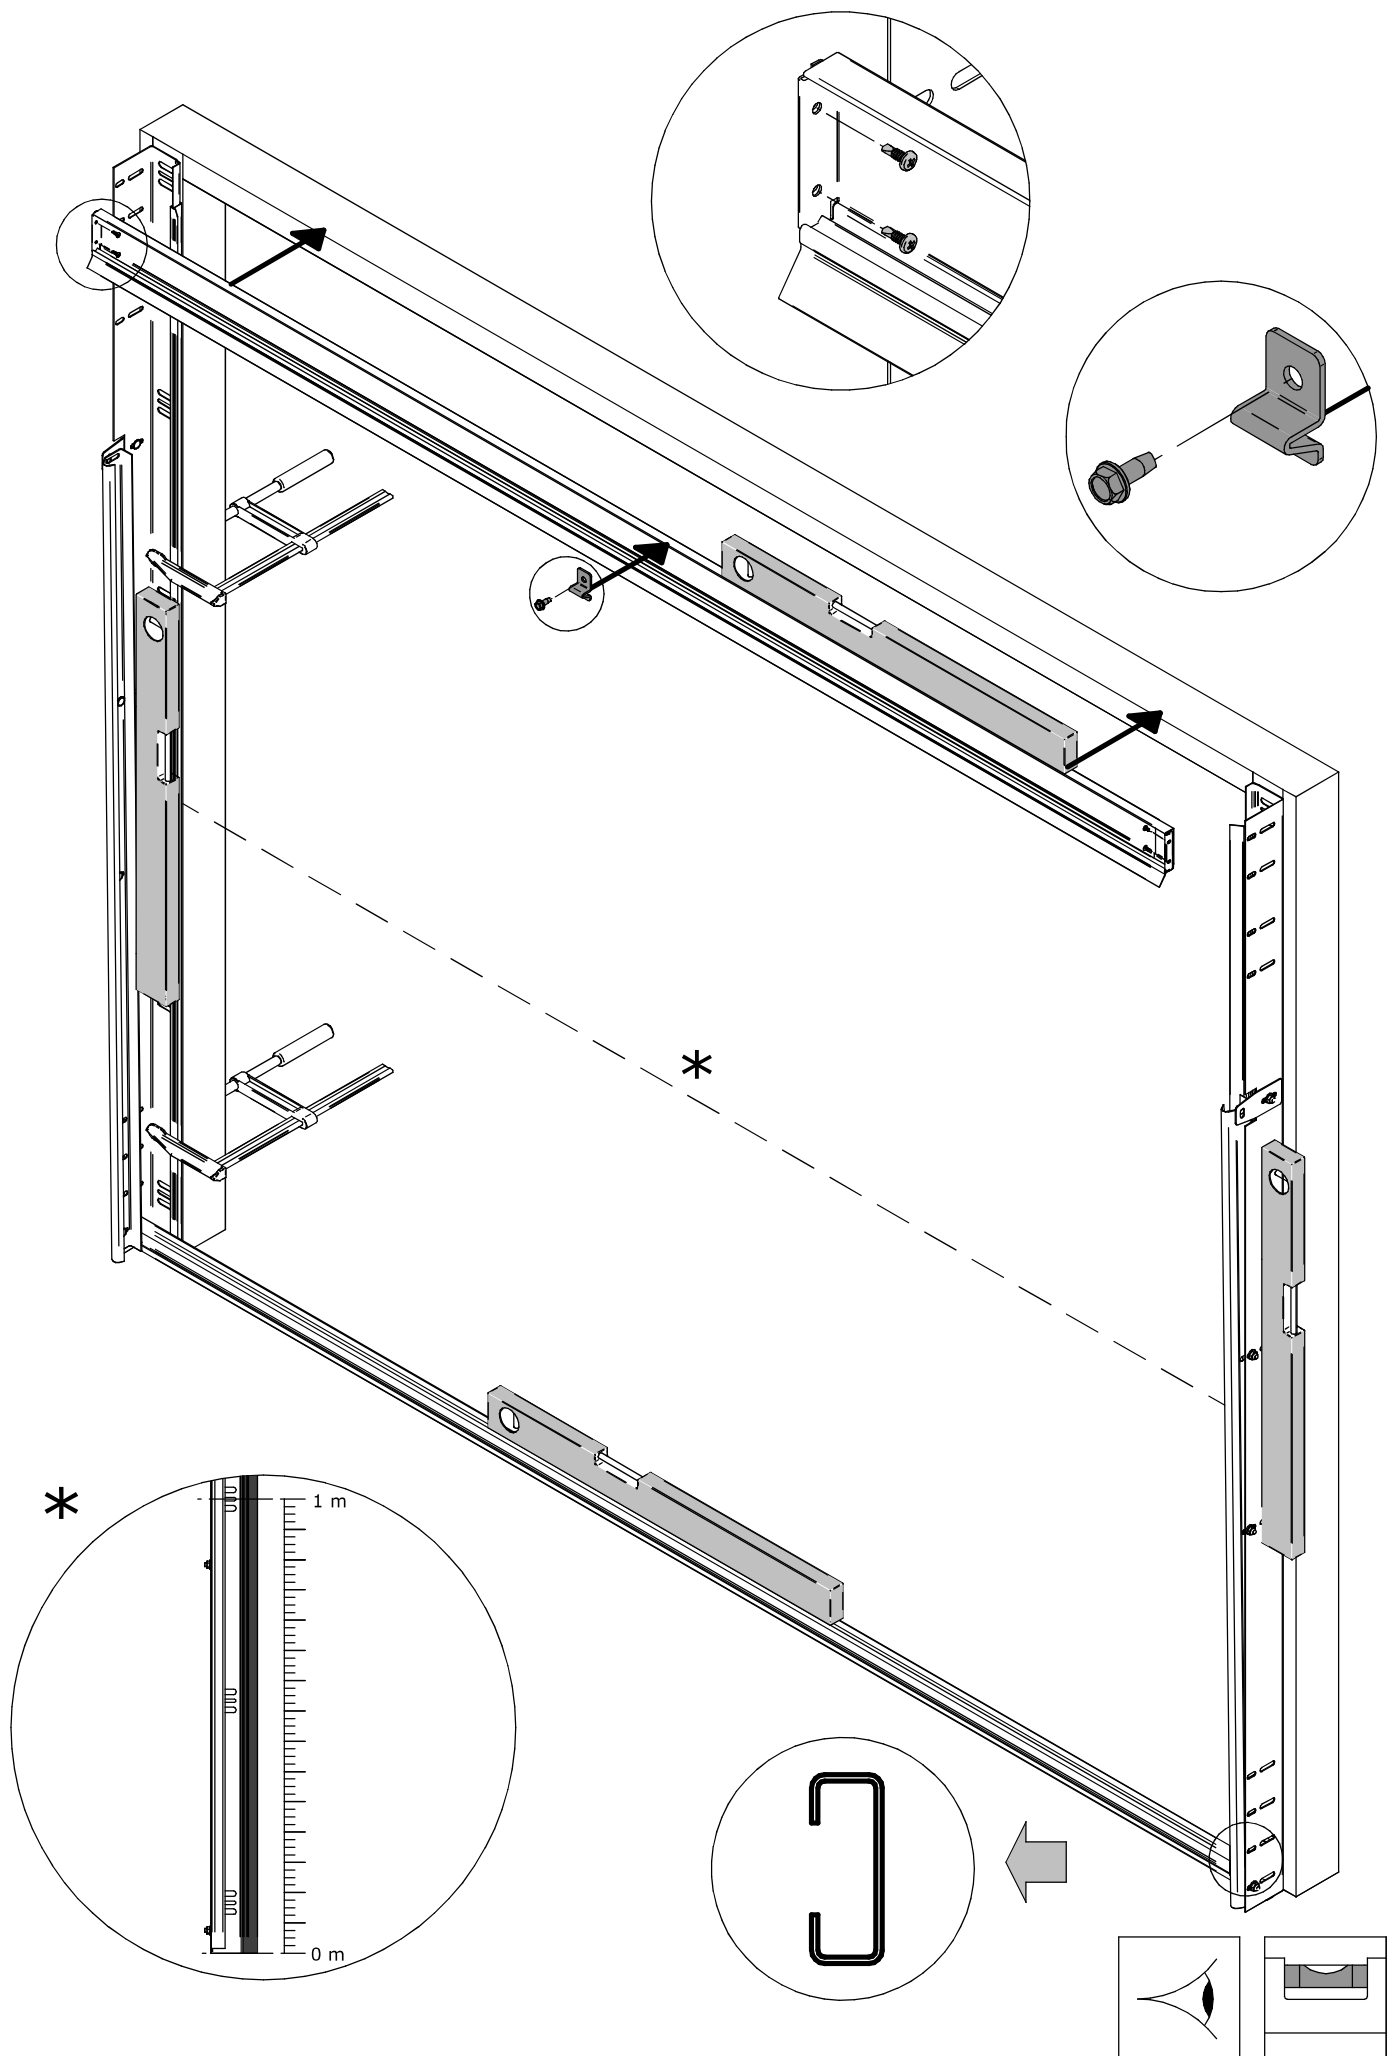


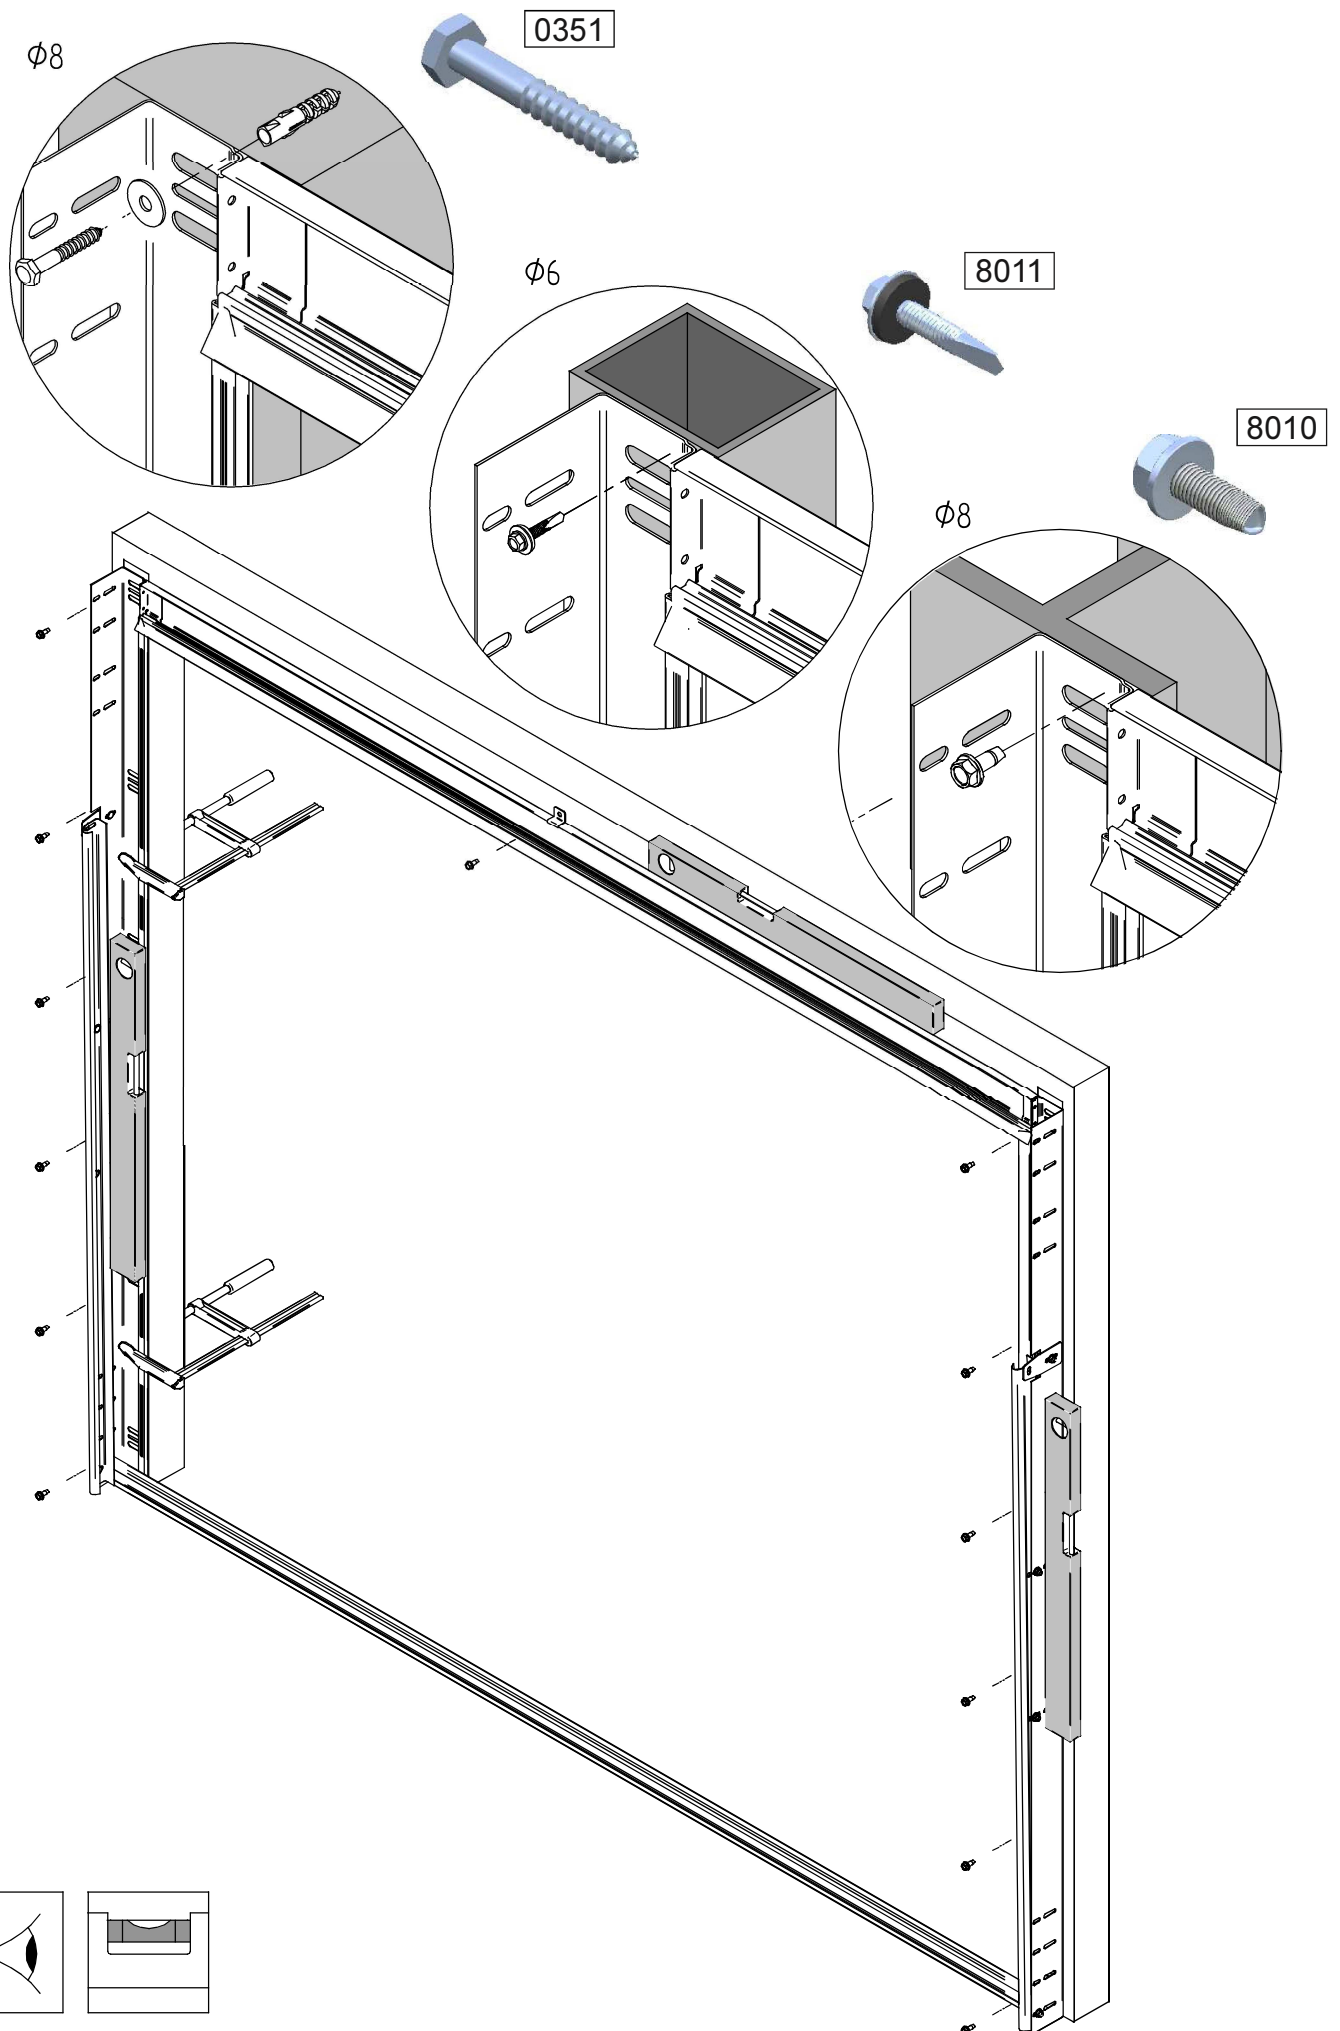



G100

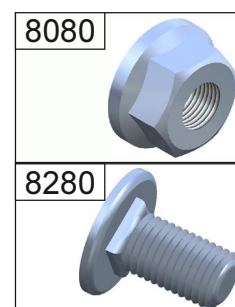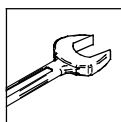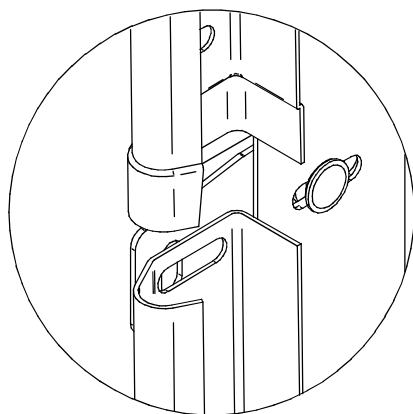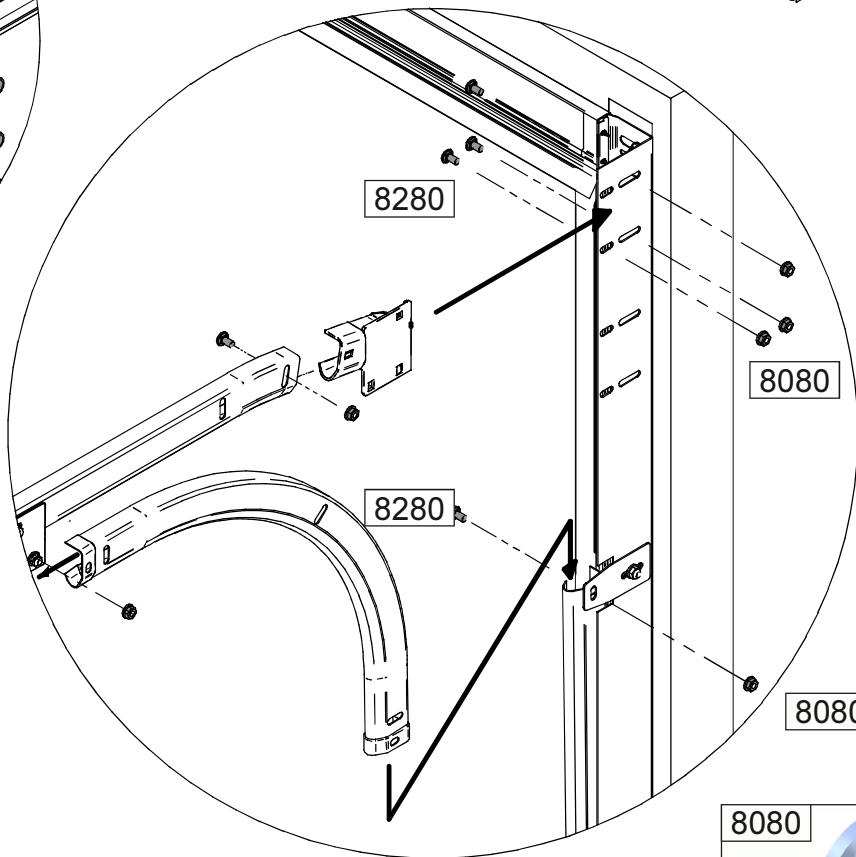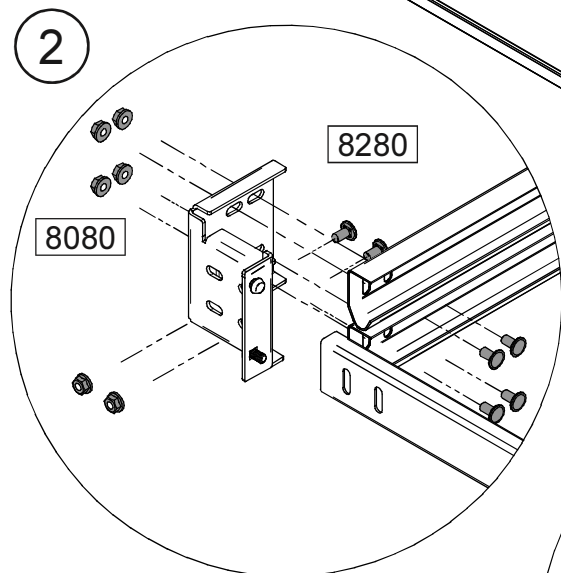
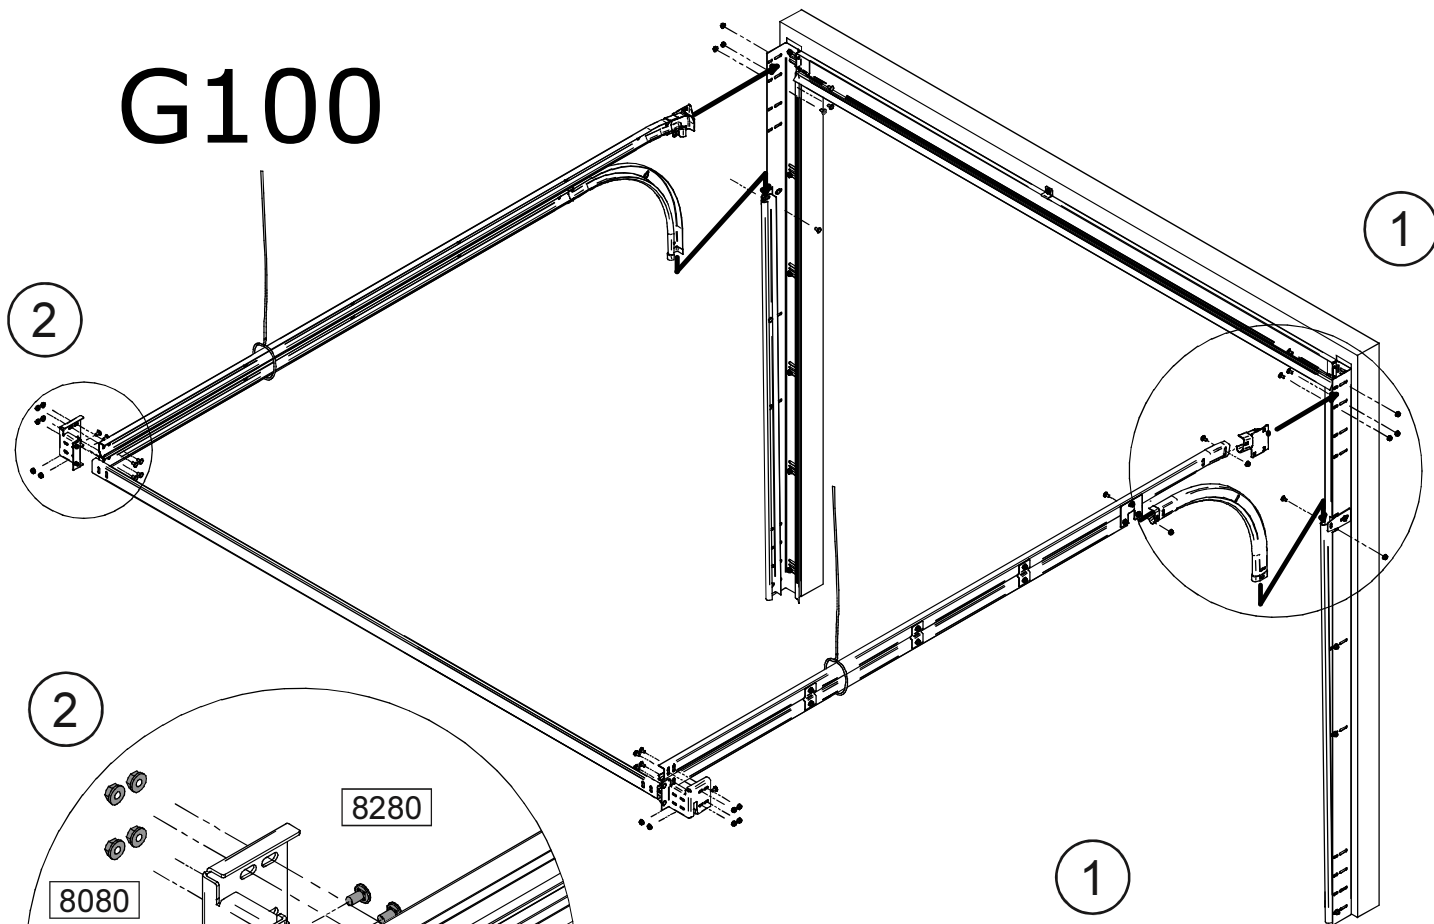



R60

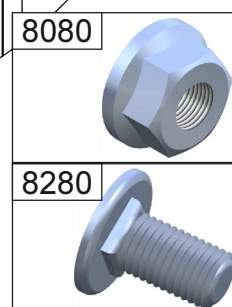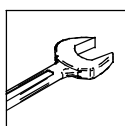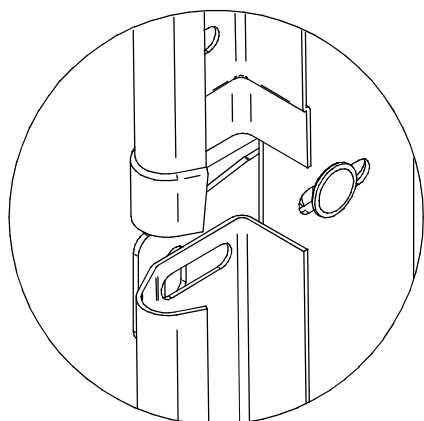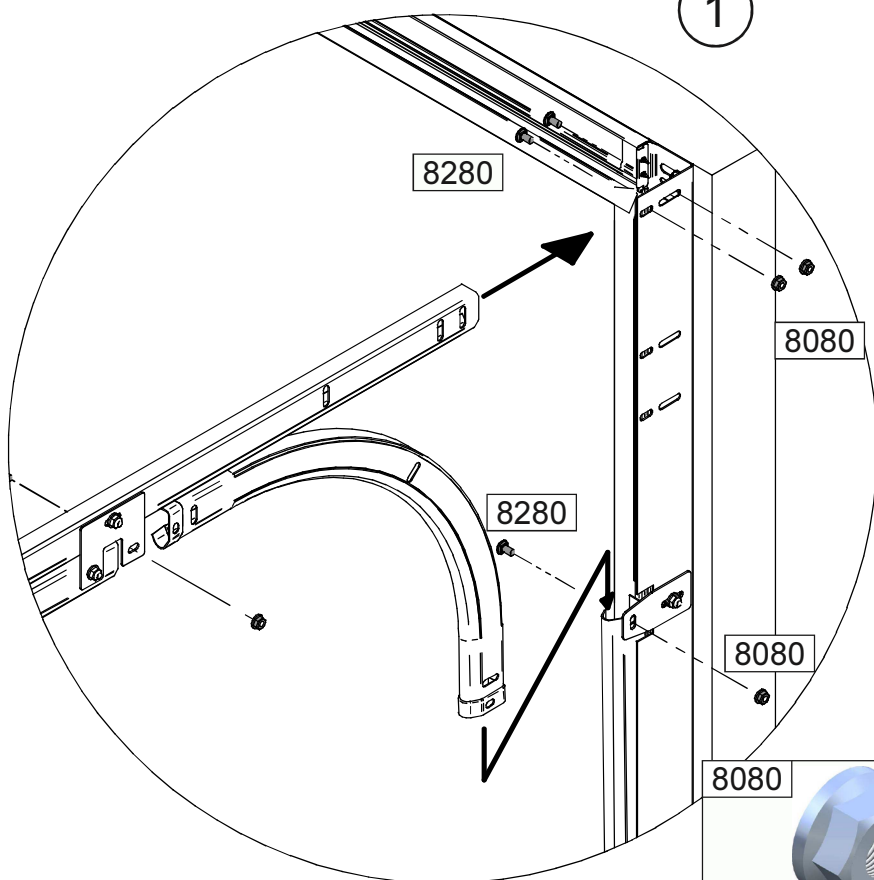
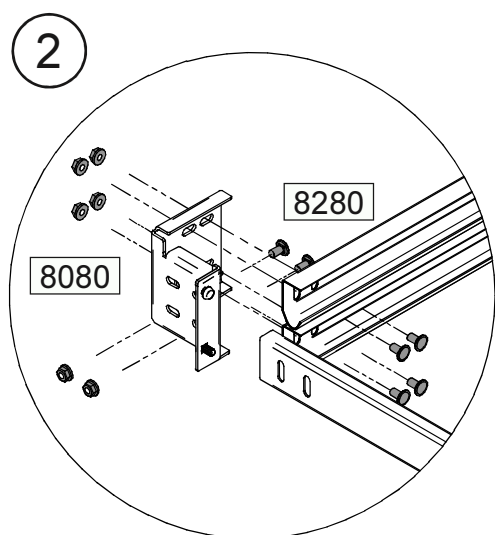
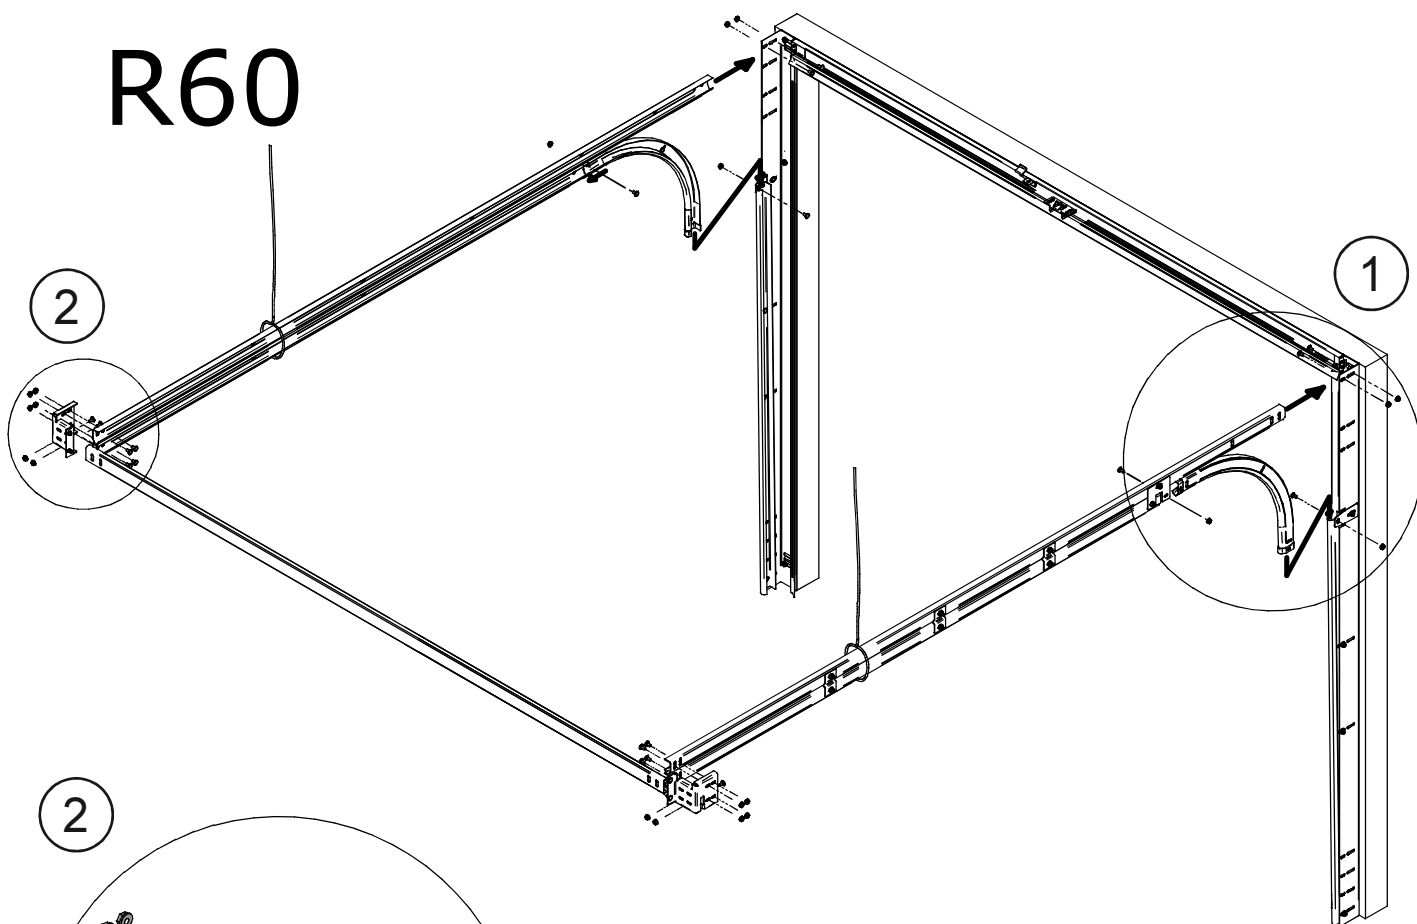


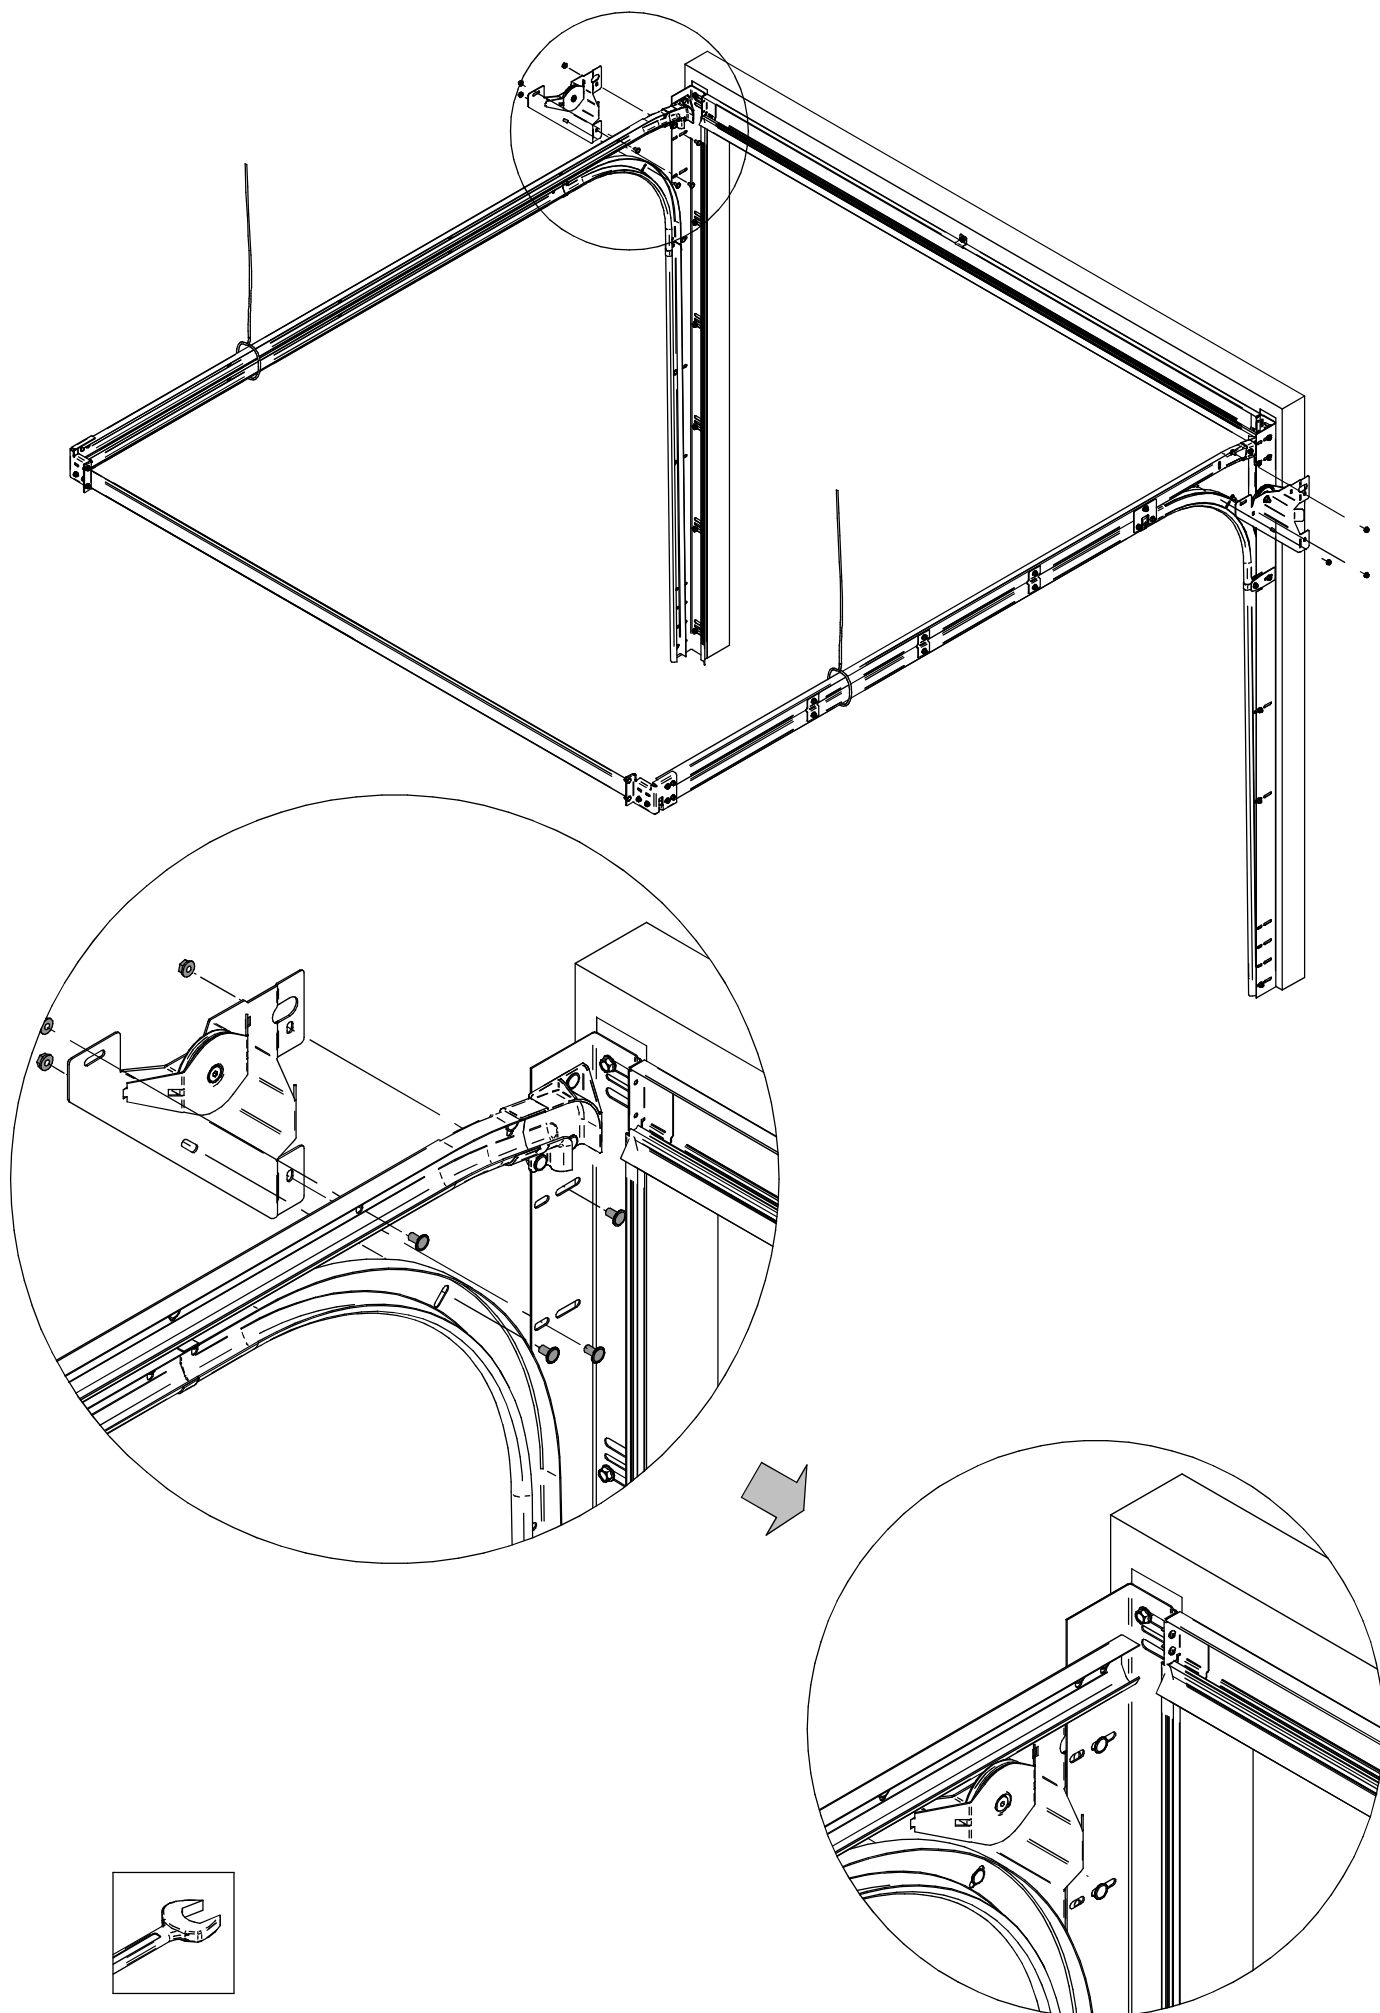


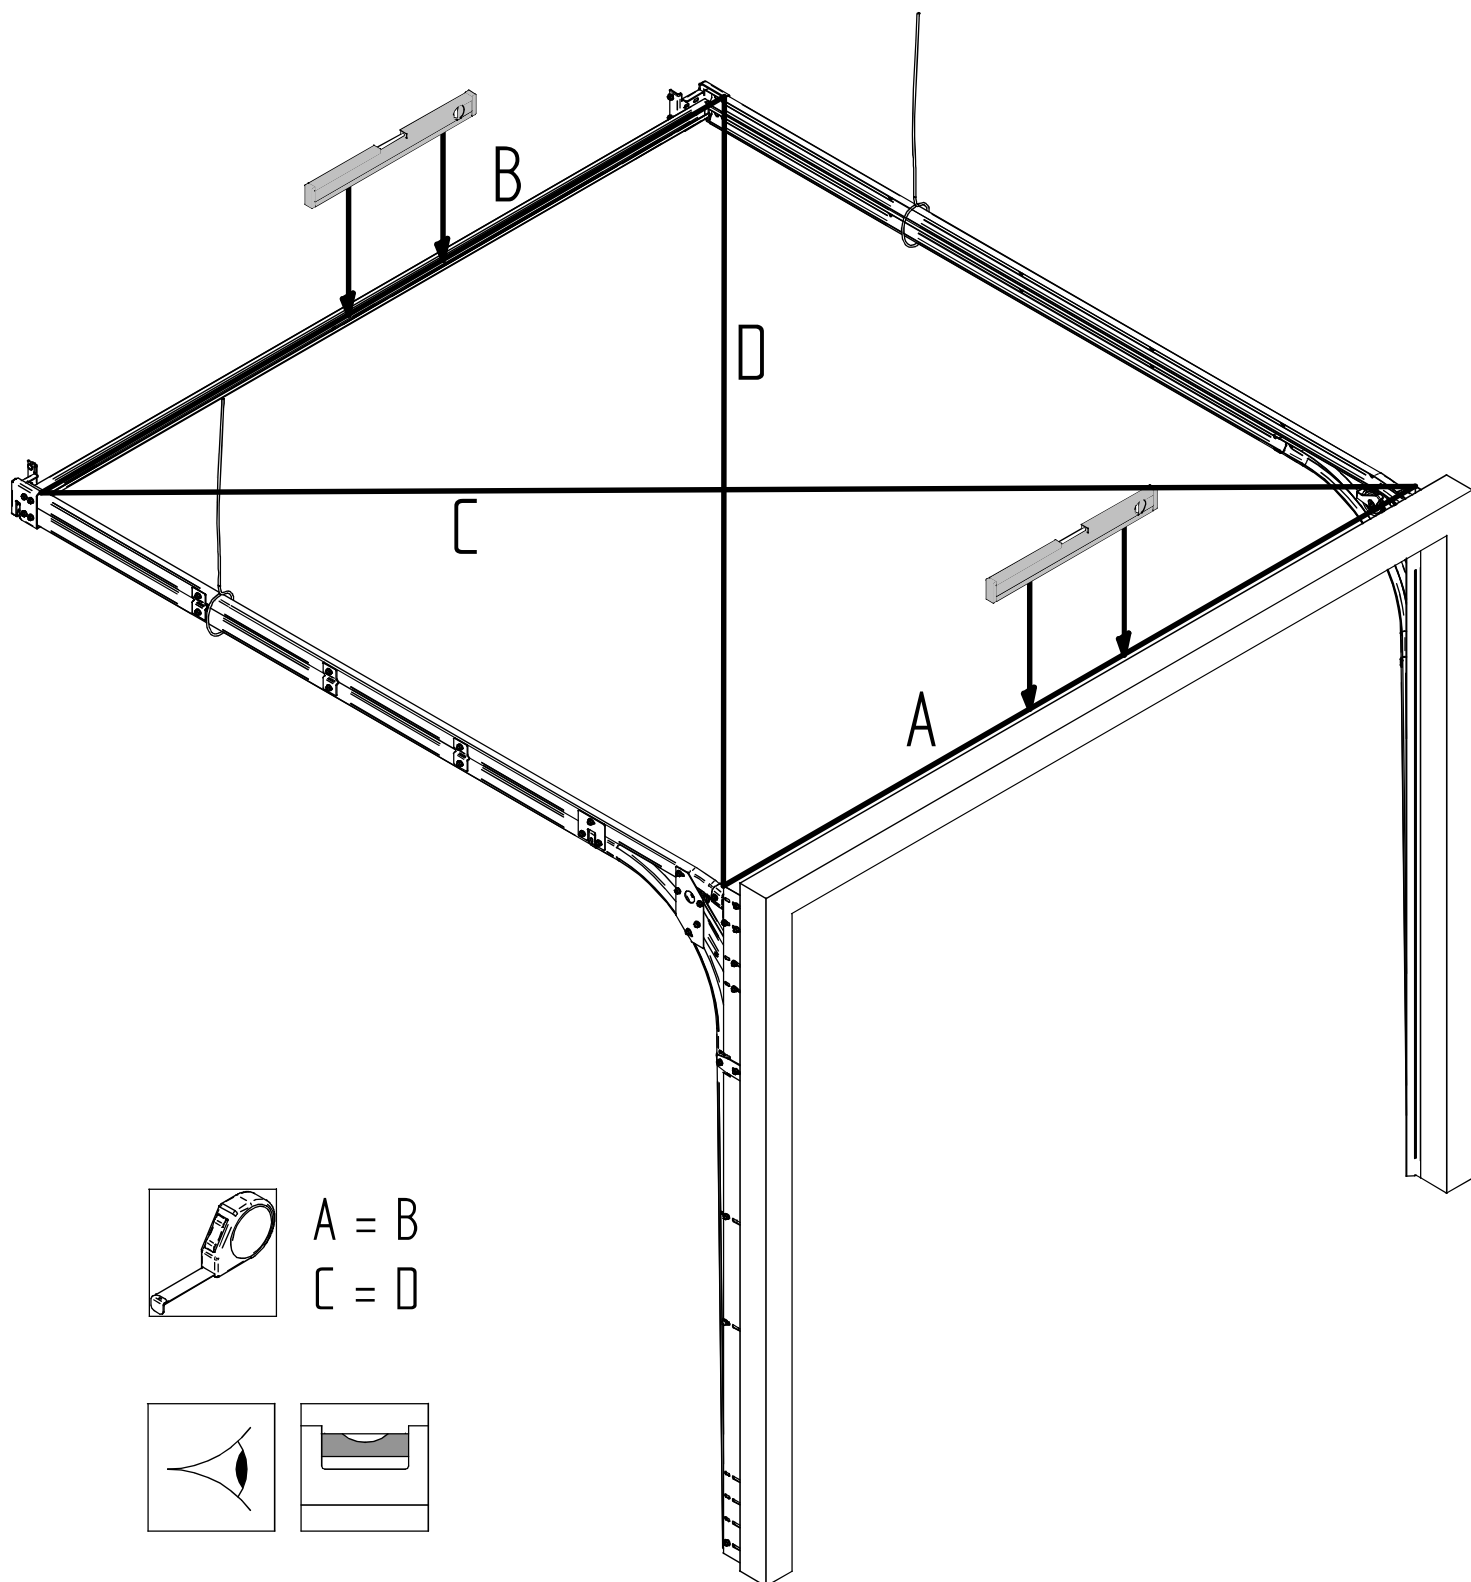

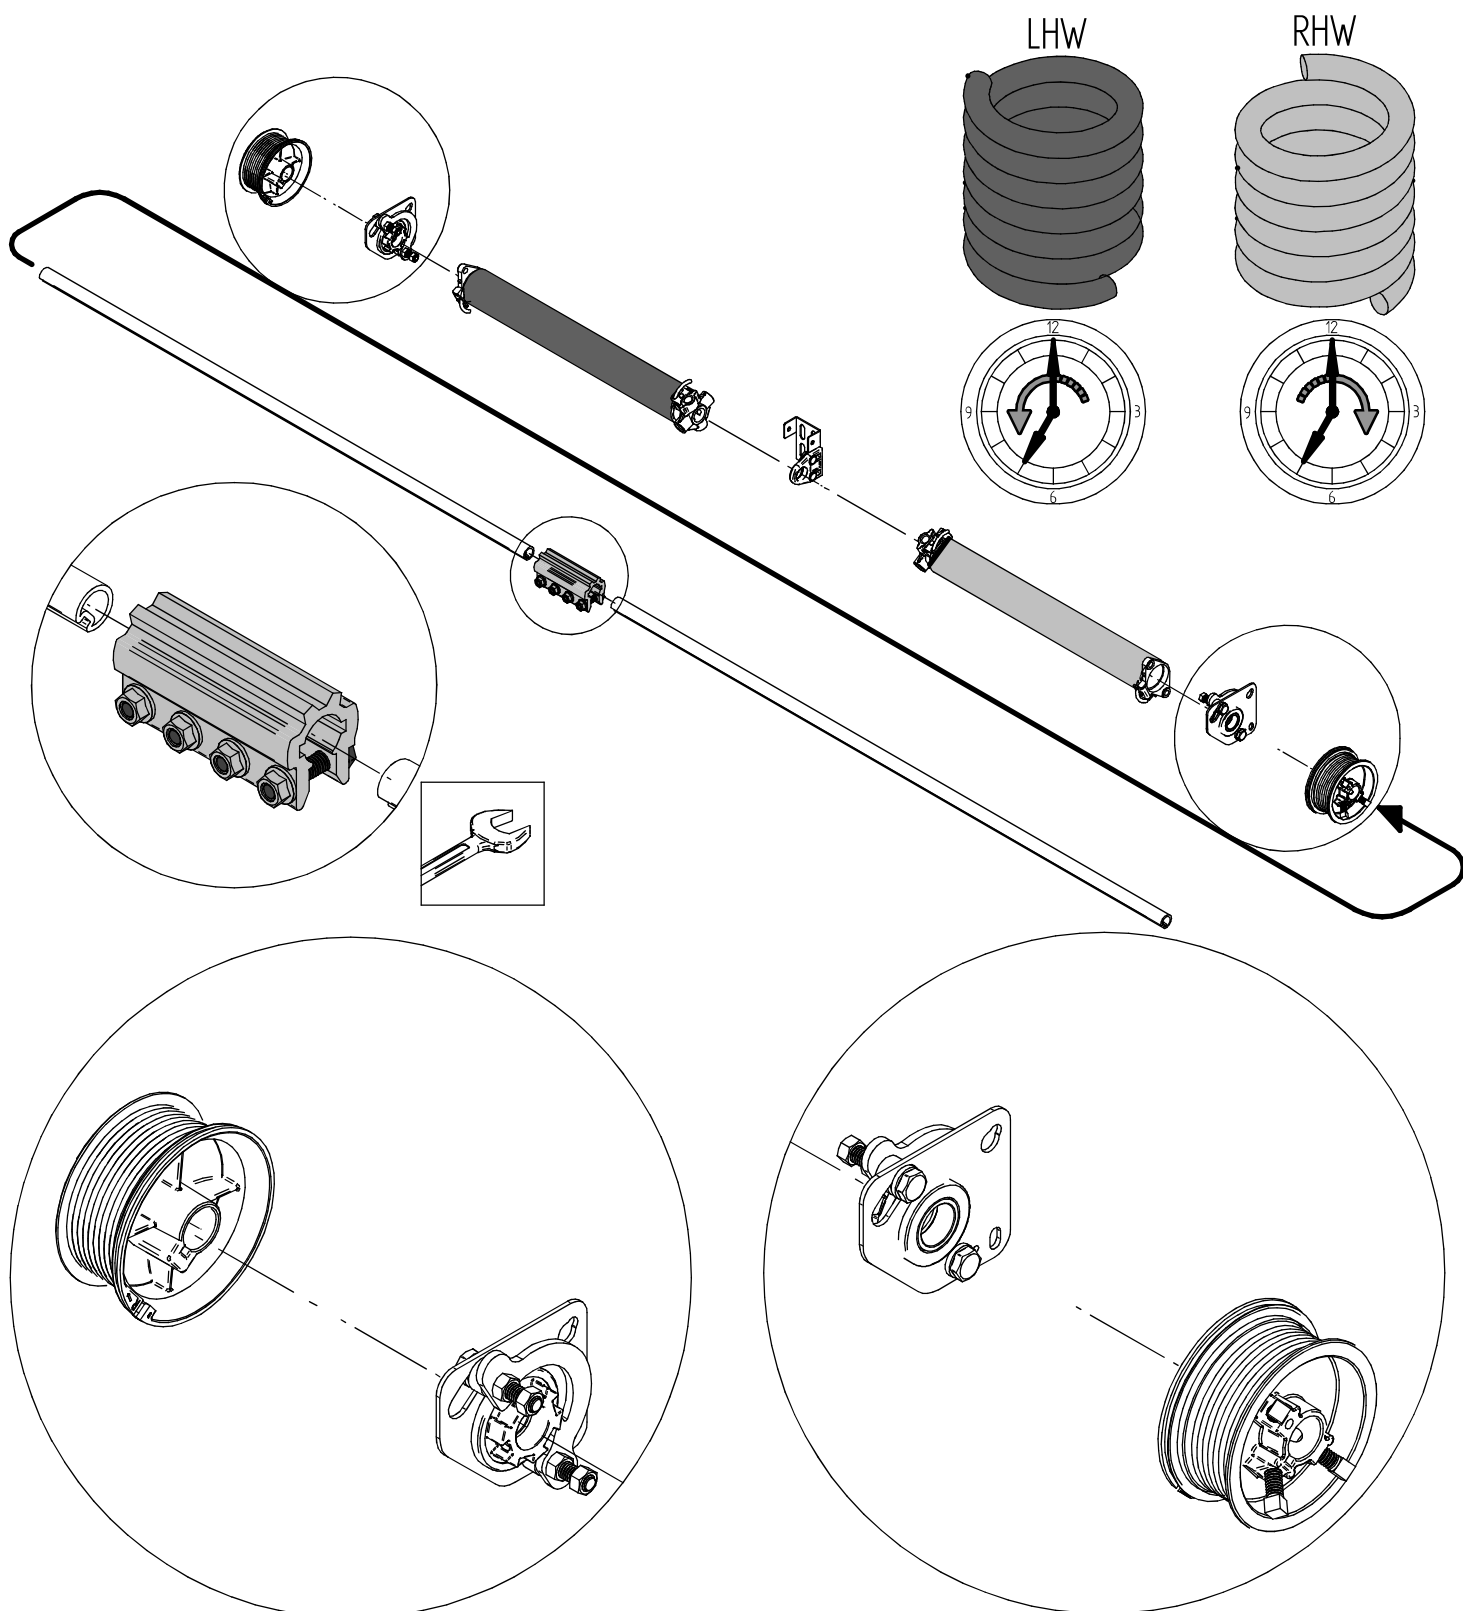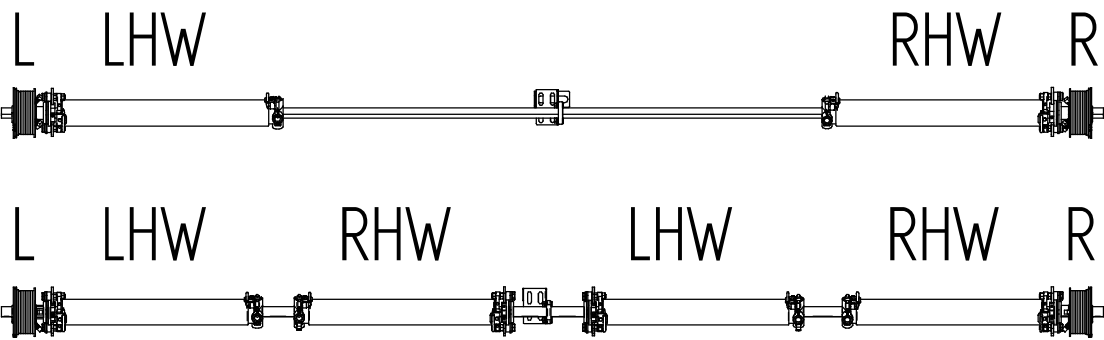


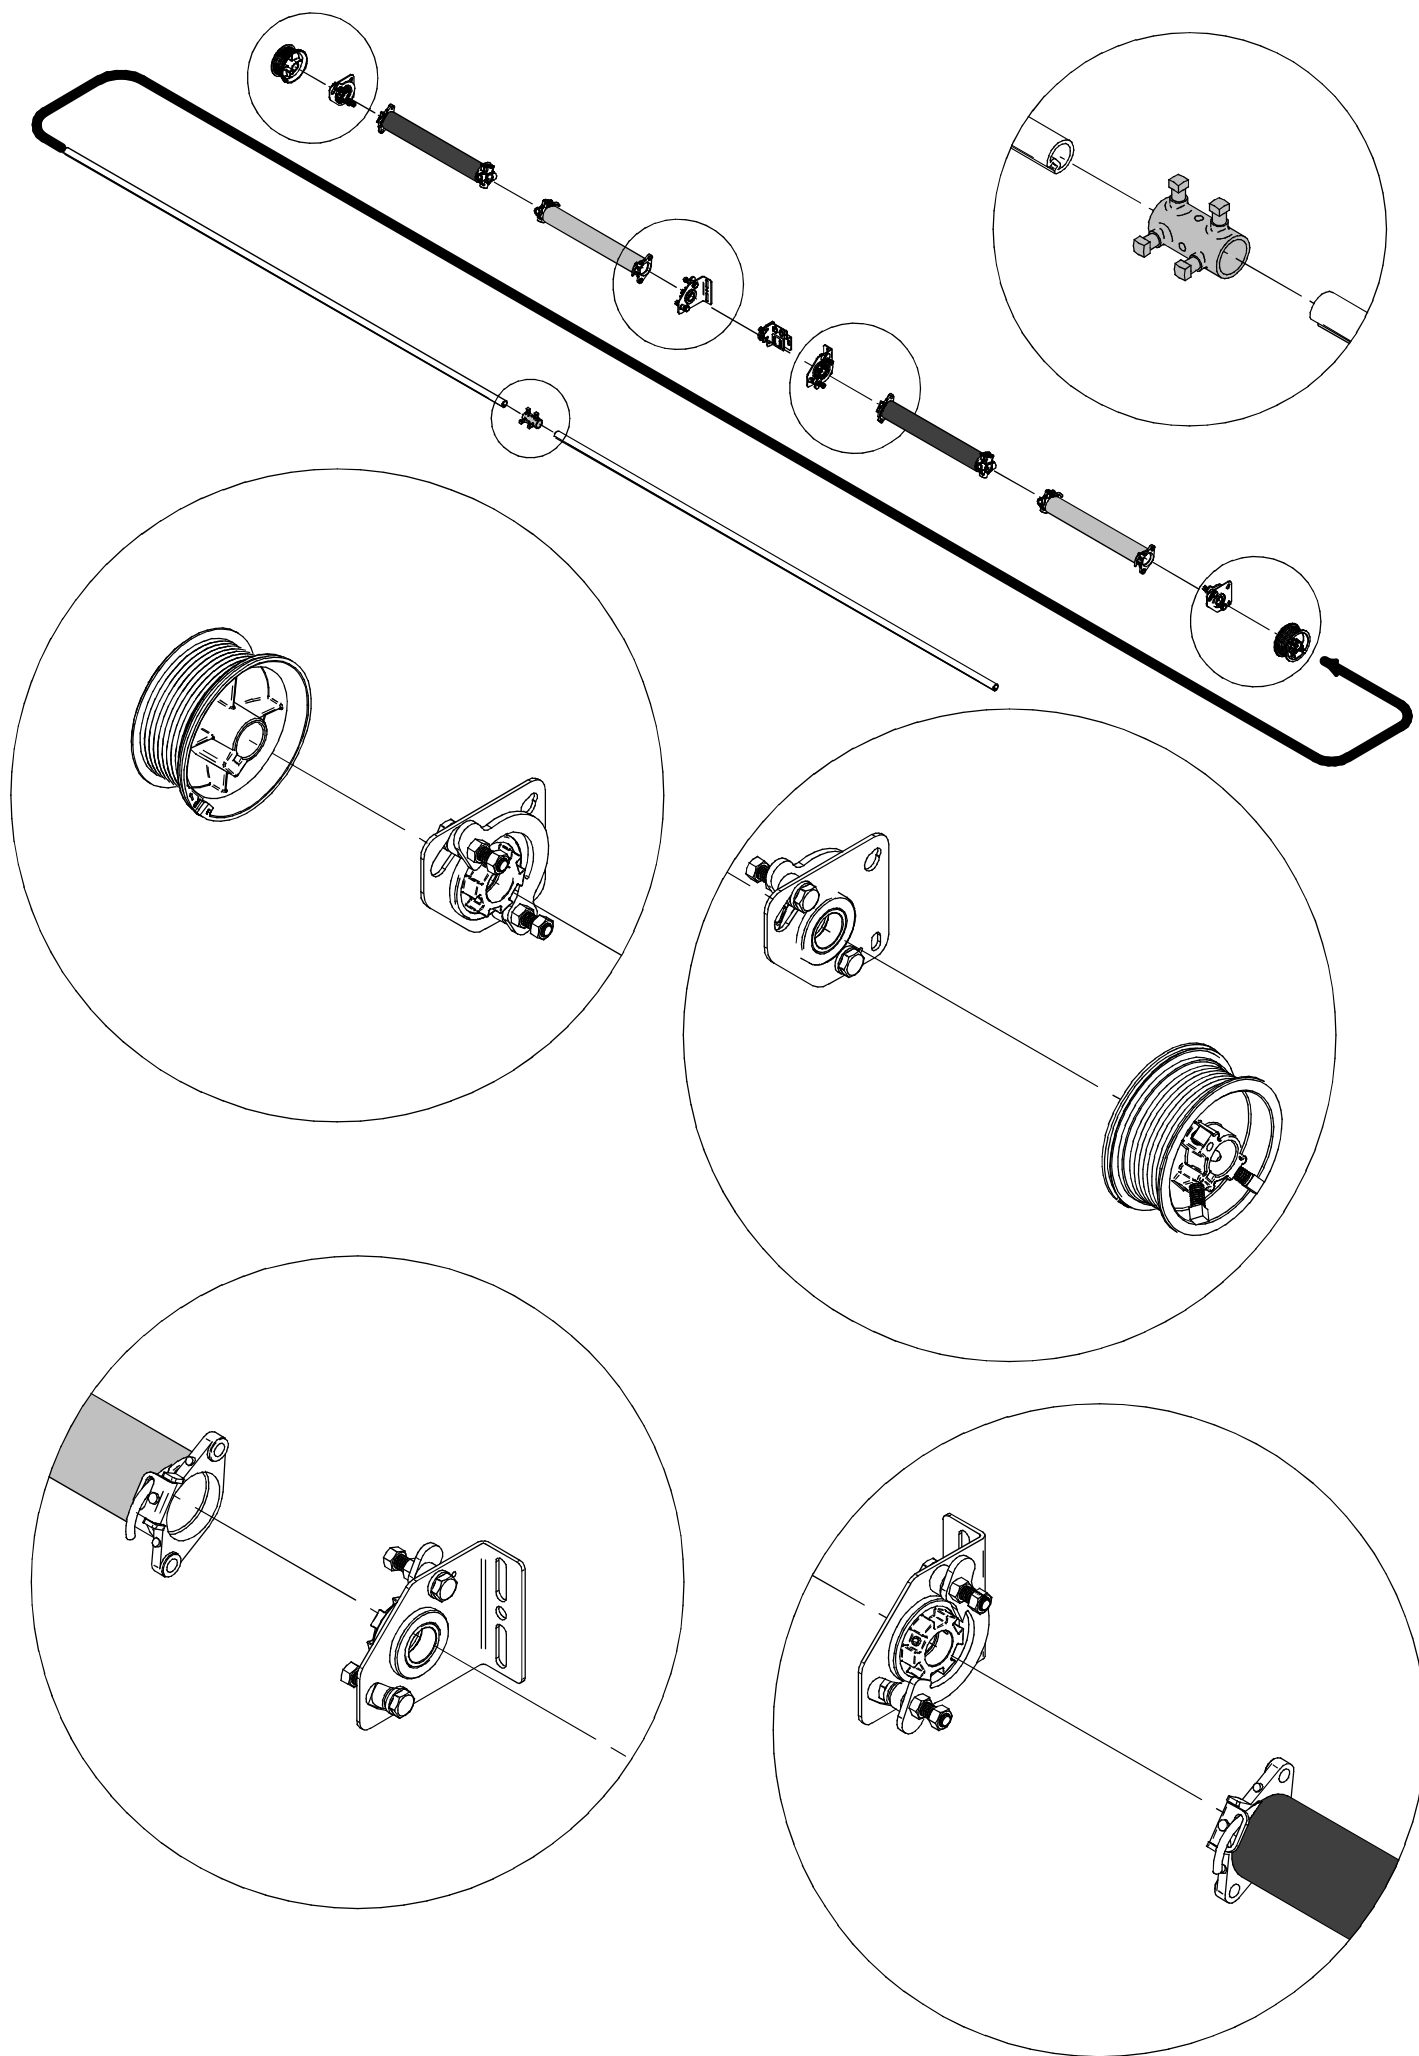

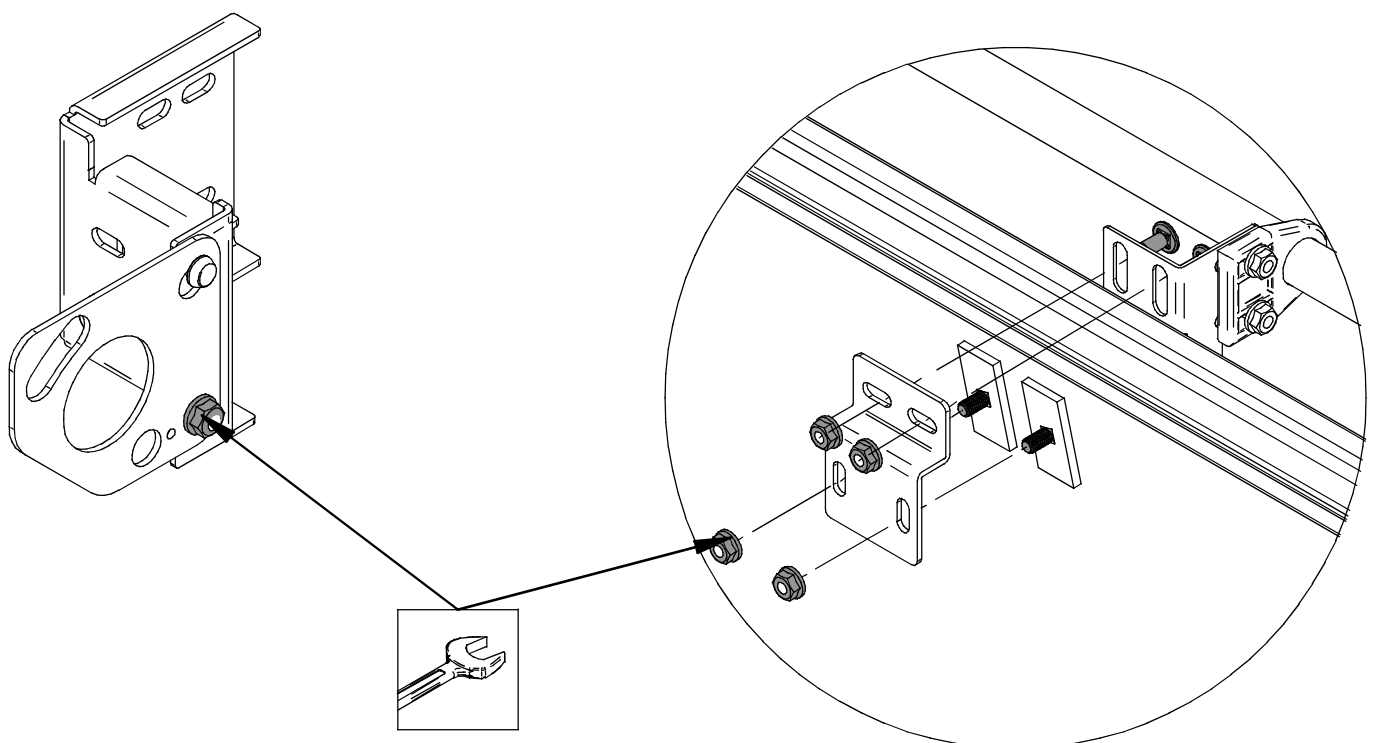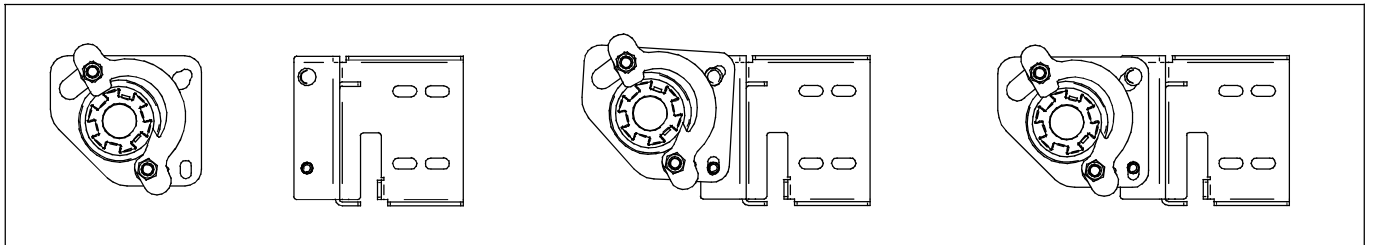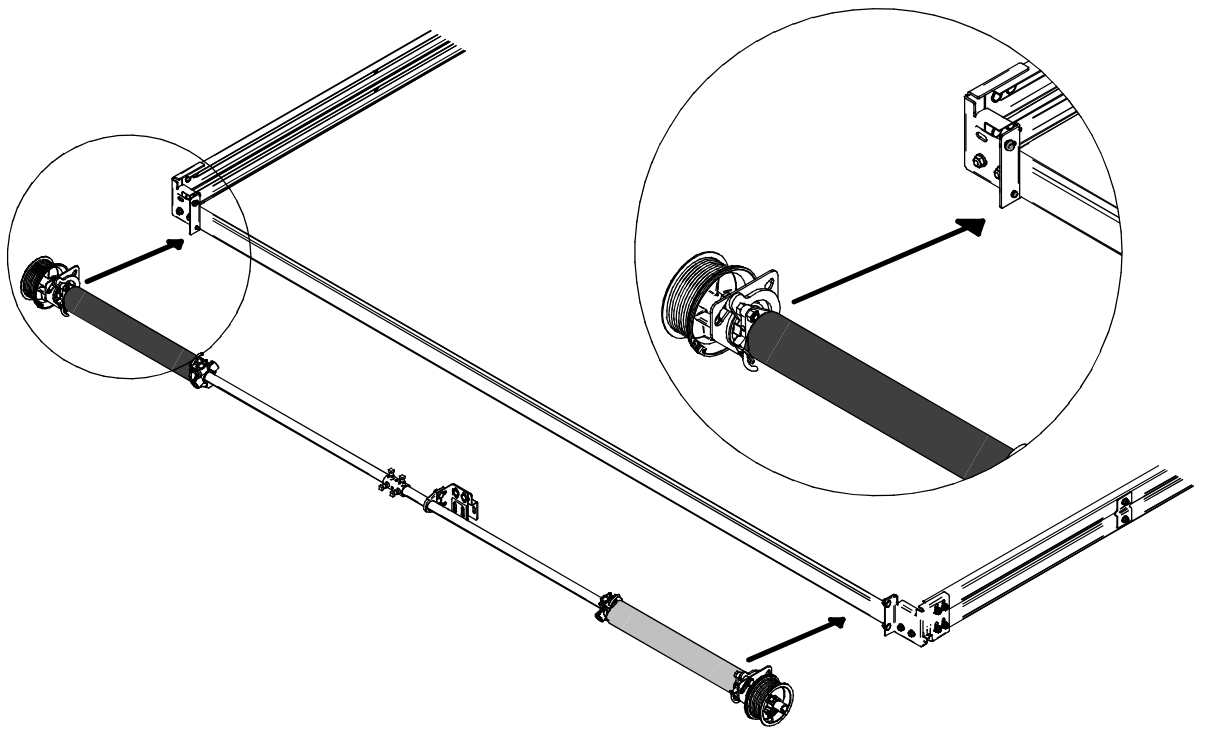


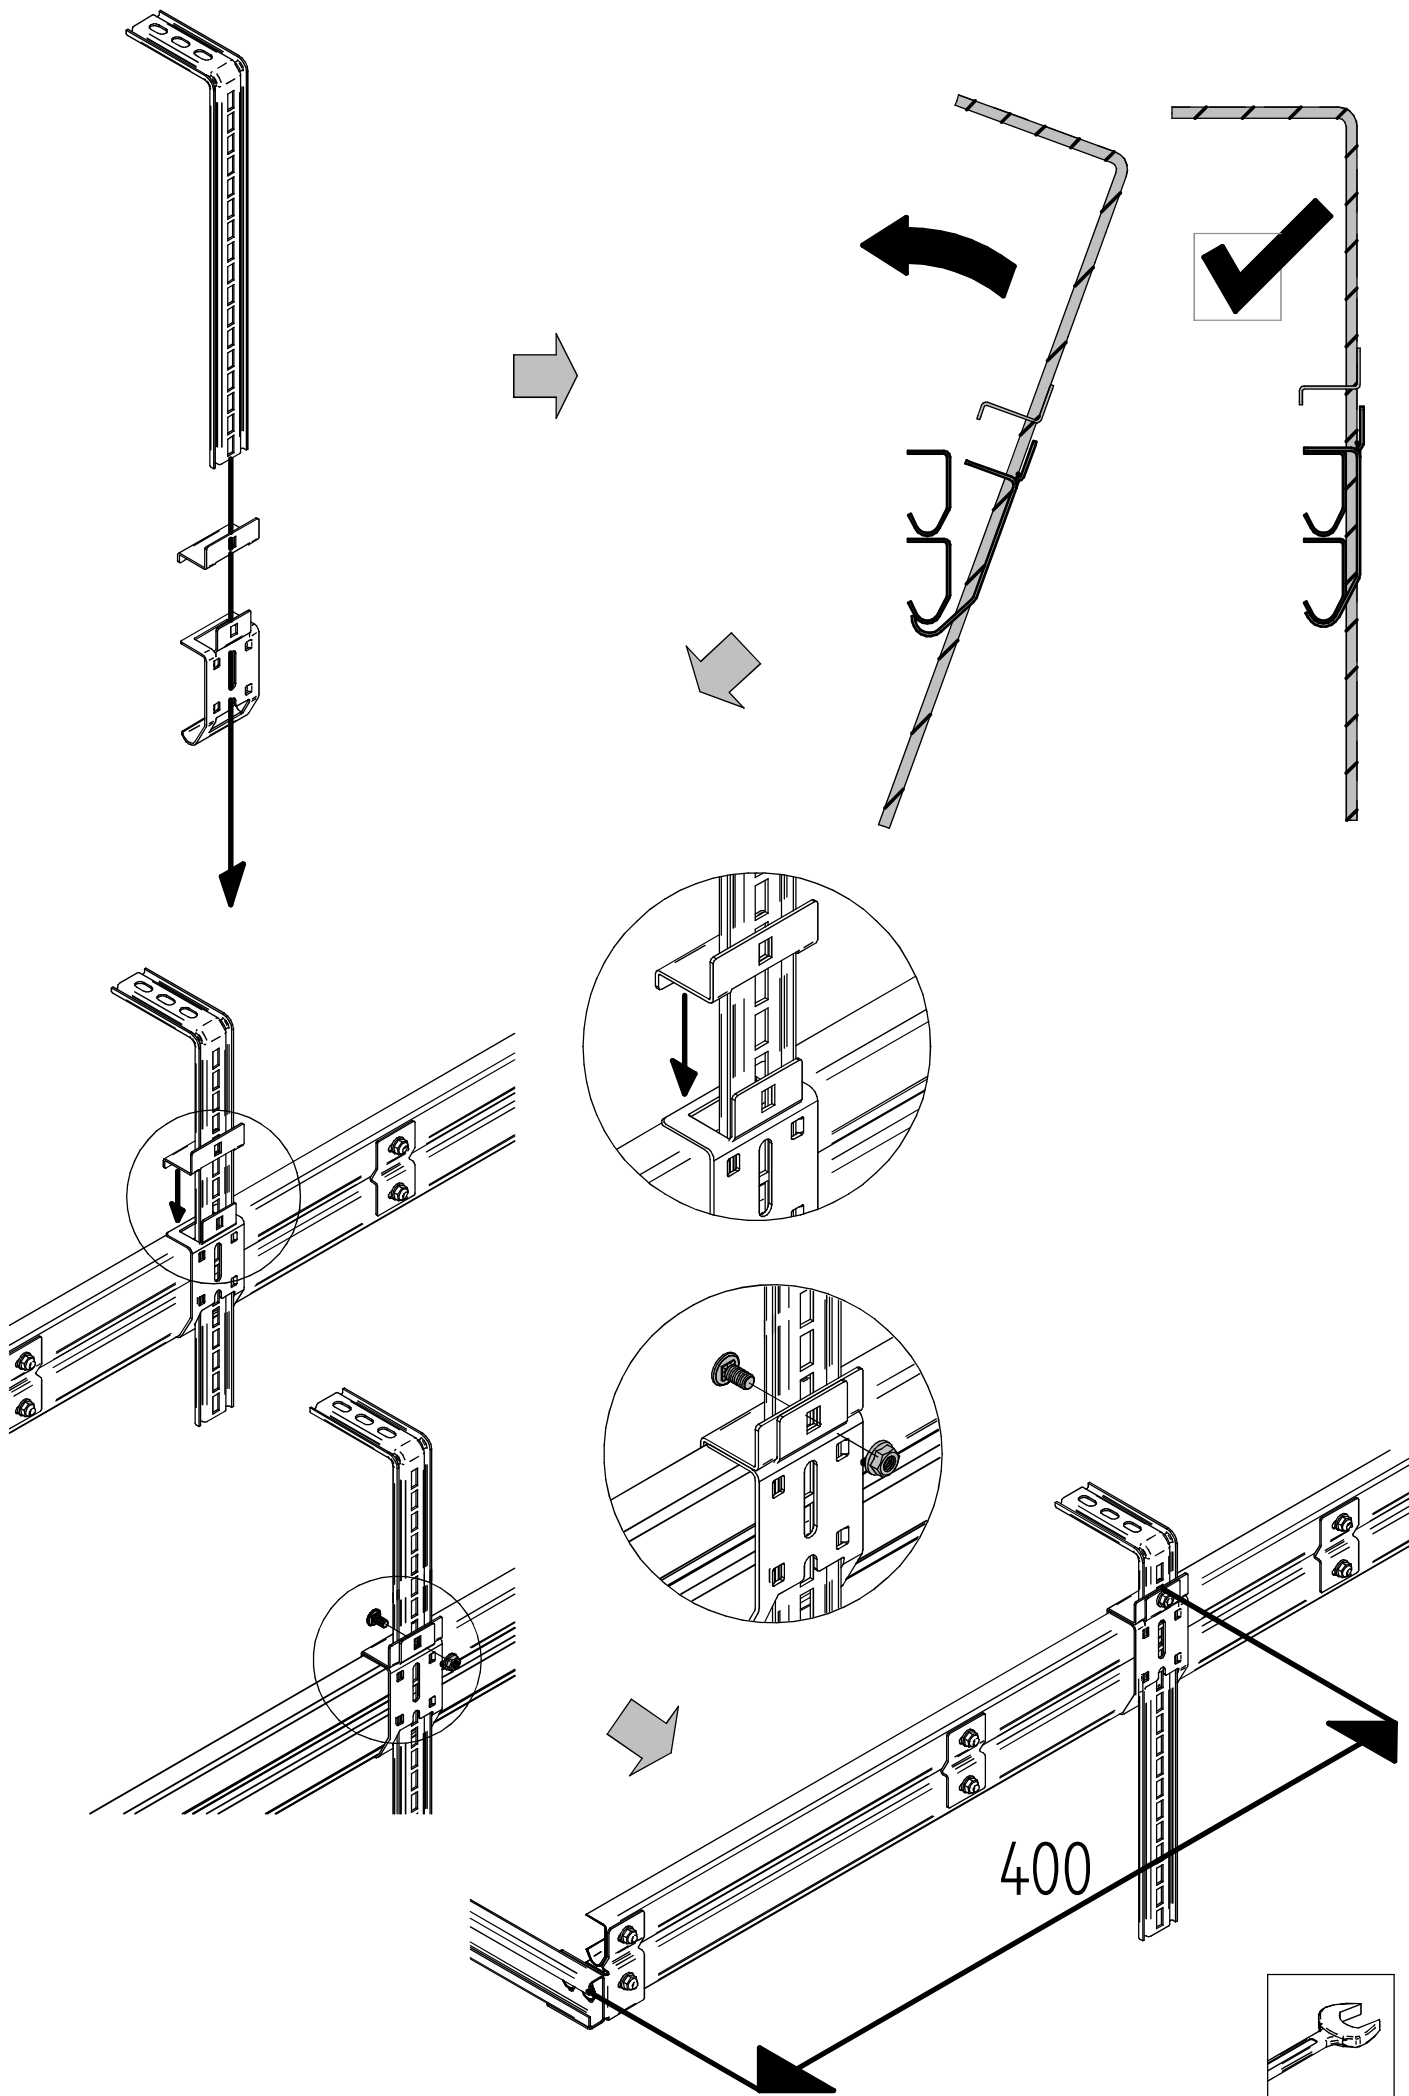



1




2

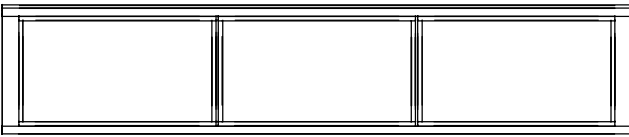


3

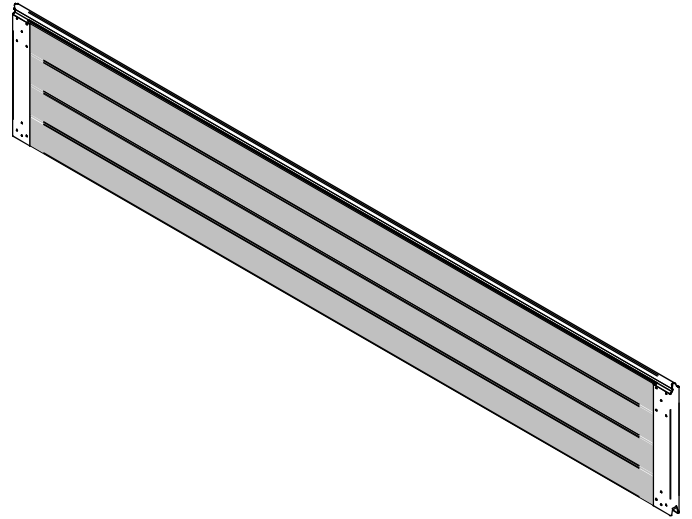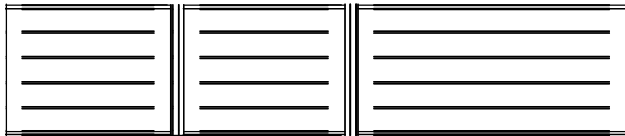



1








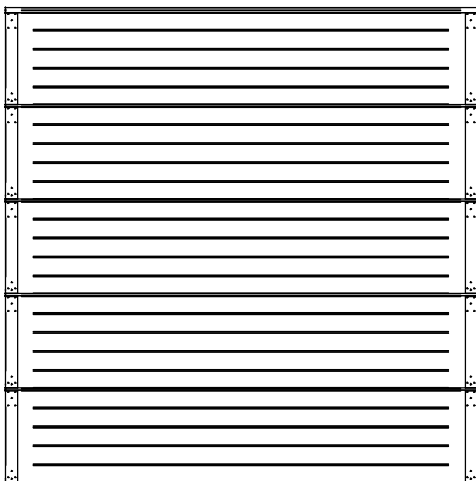



3

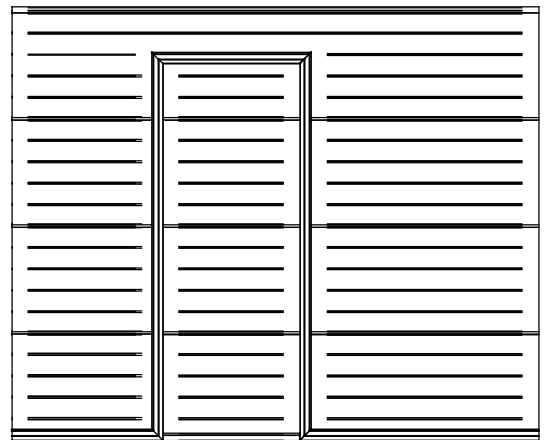



2

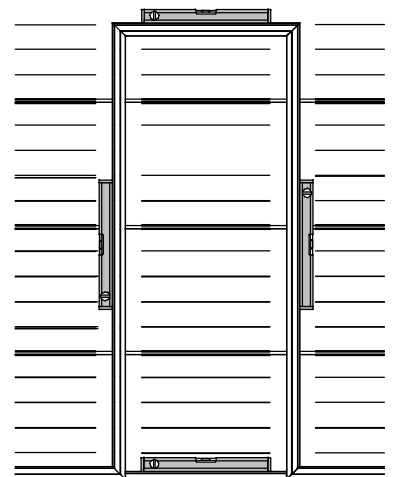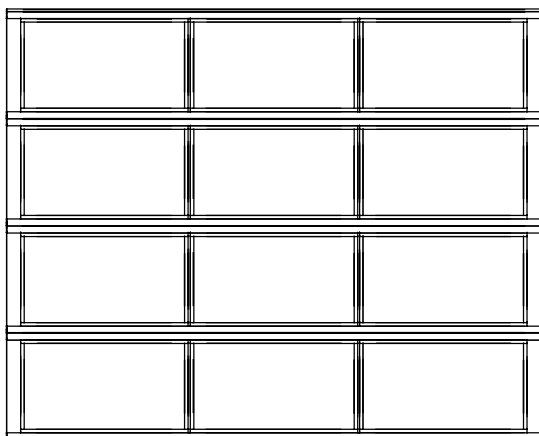

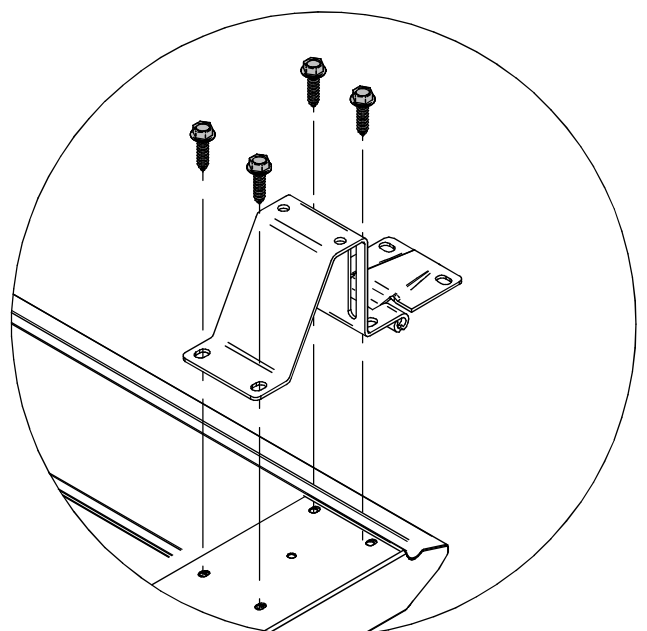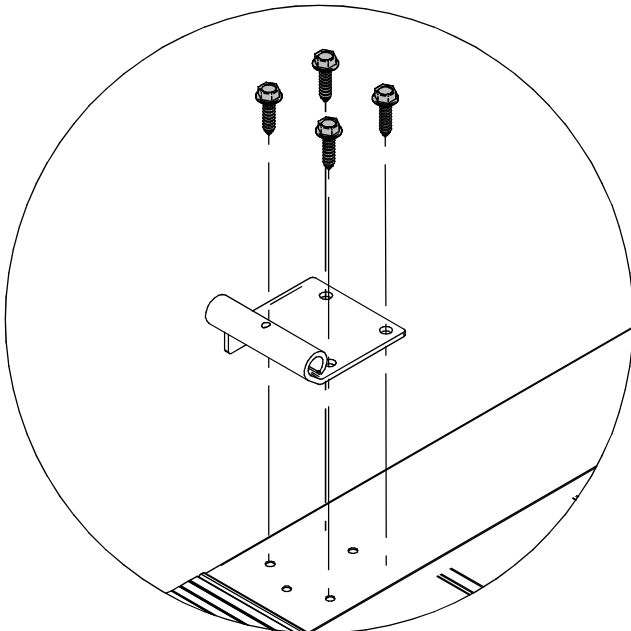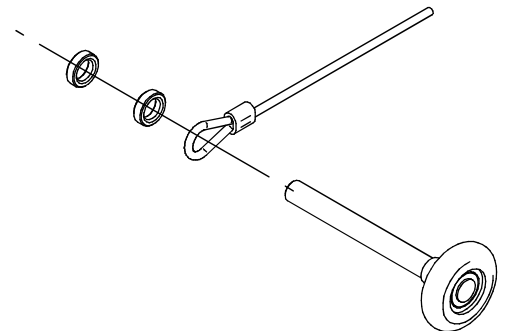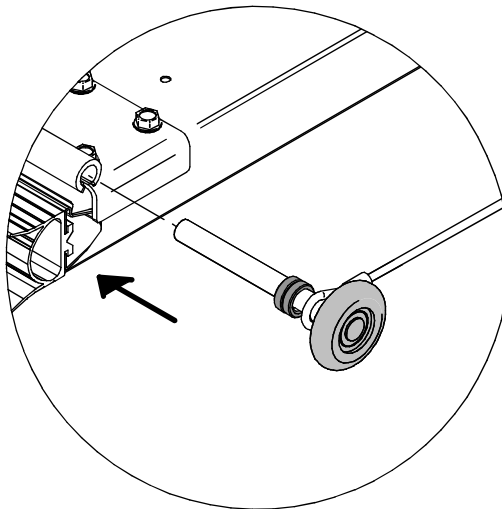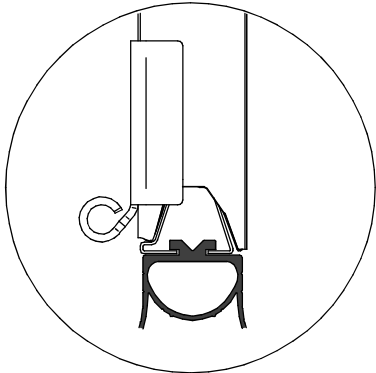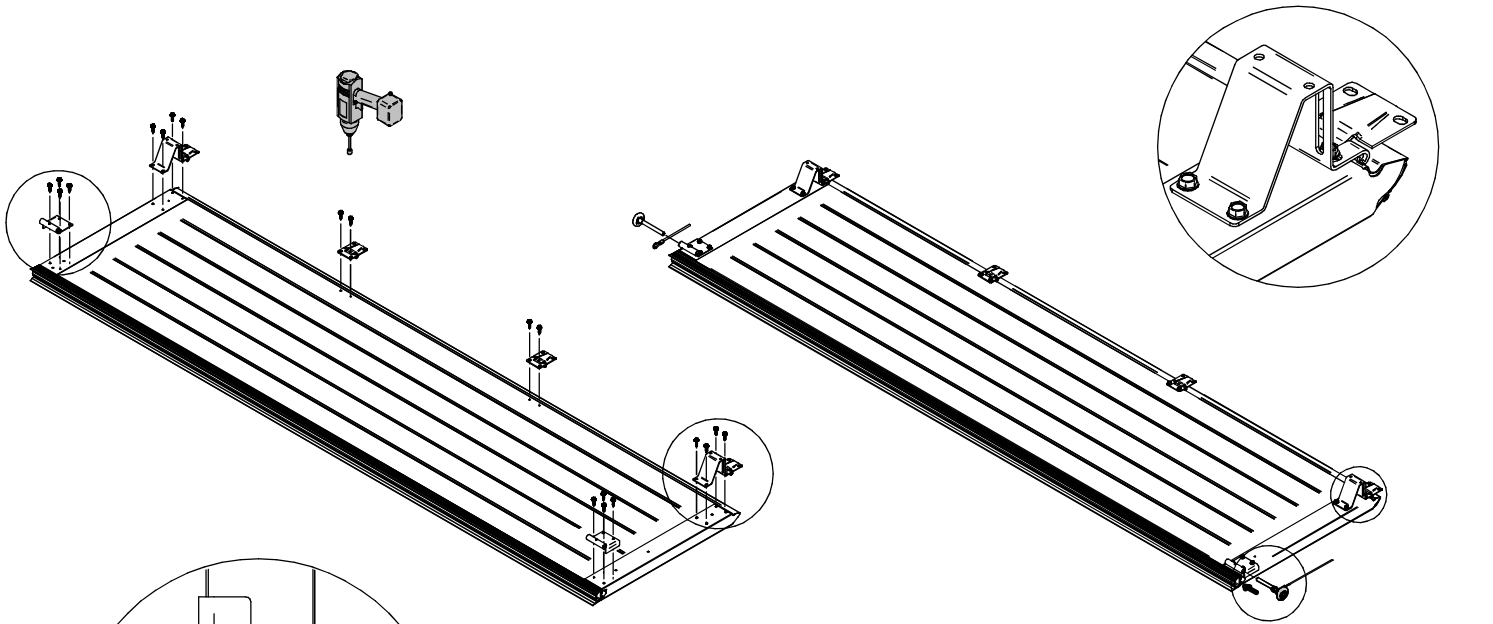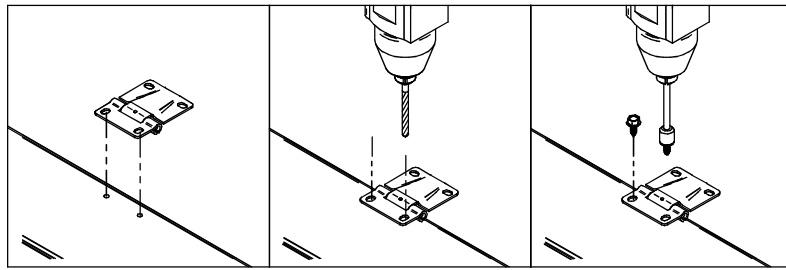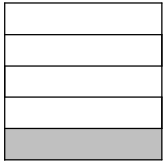





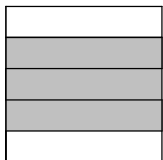


ST

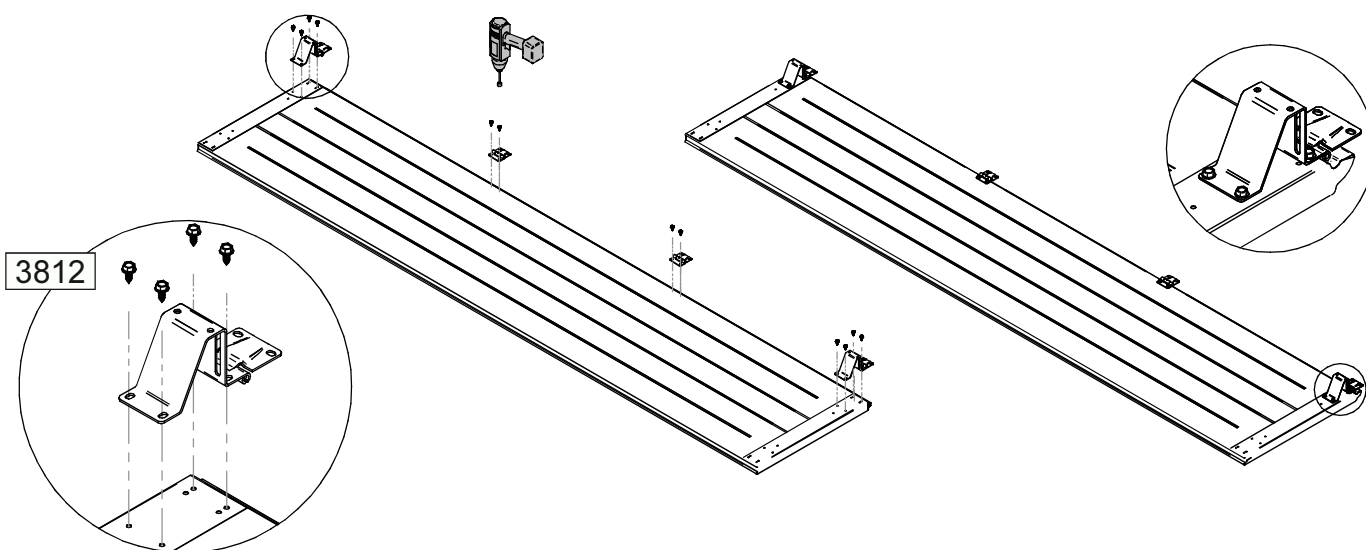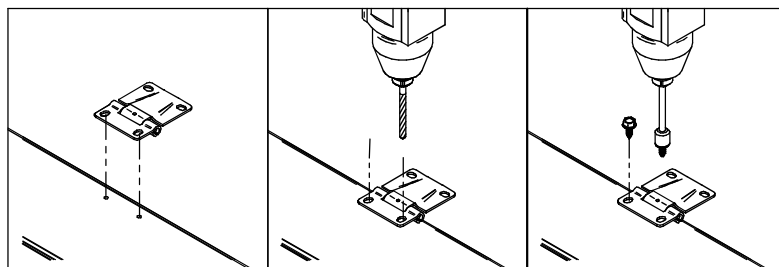


AR

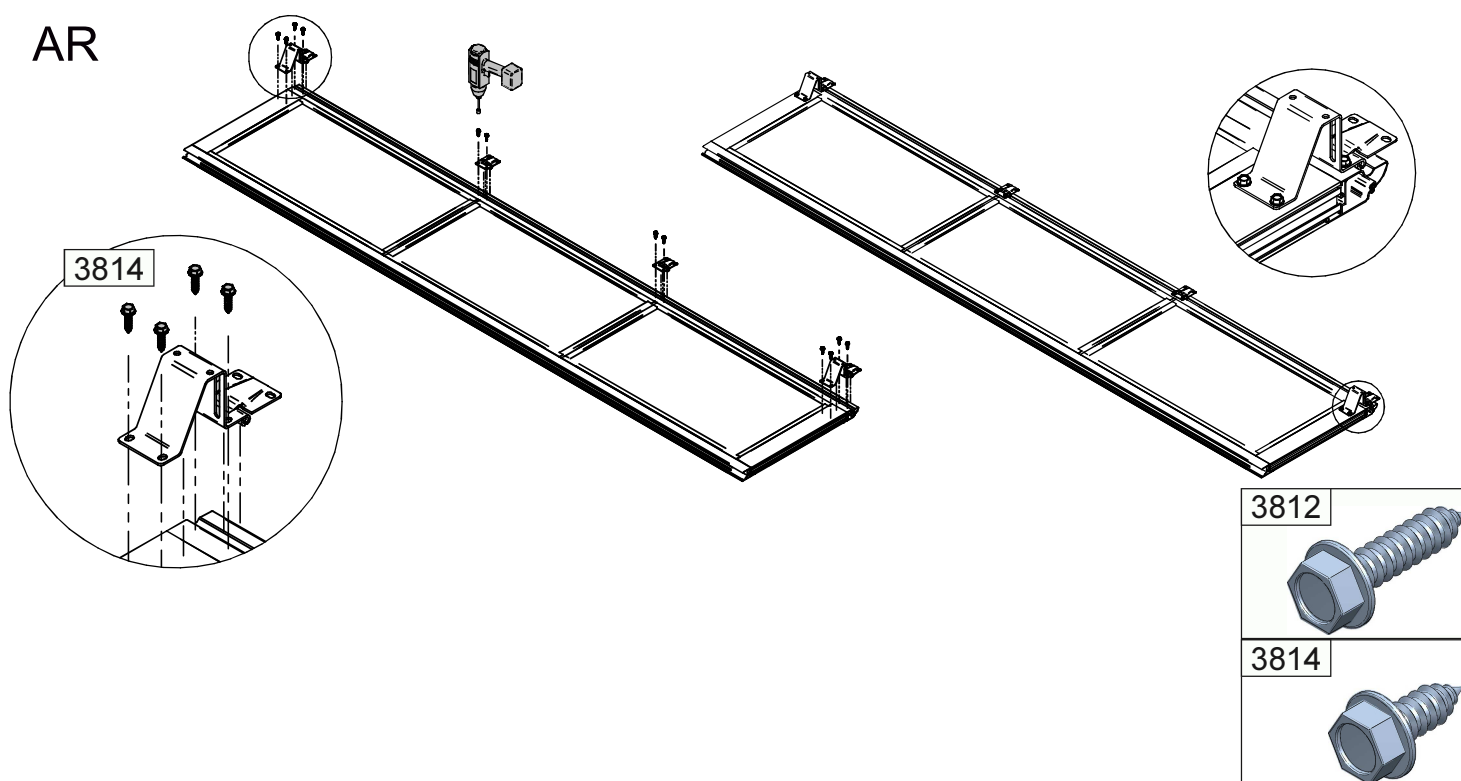


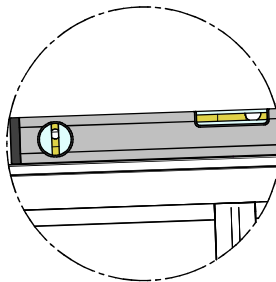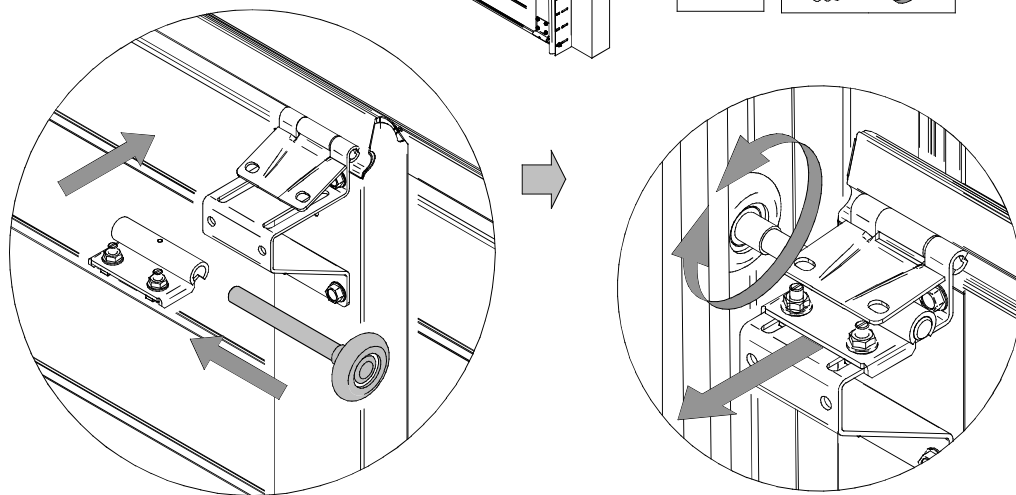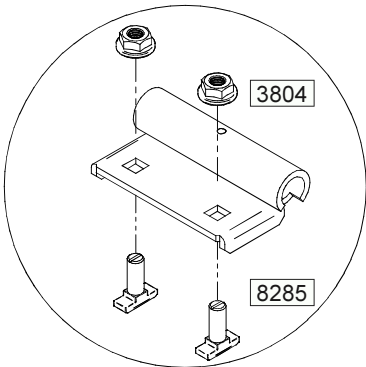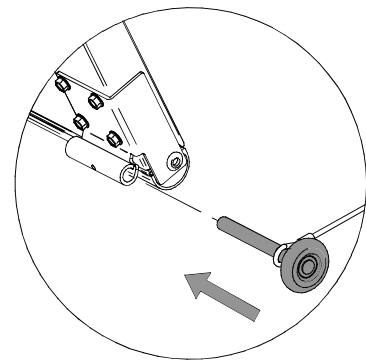



DETAIL A

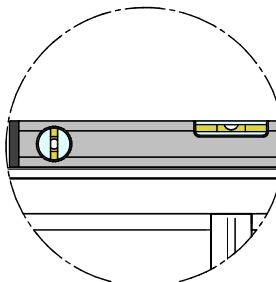


DETAIL B

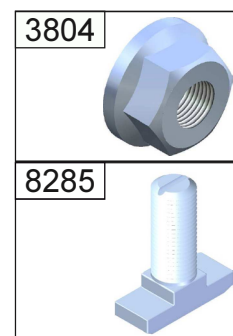


1

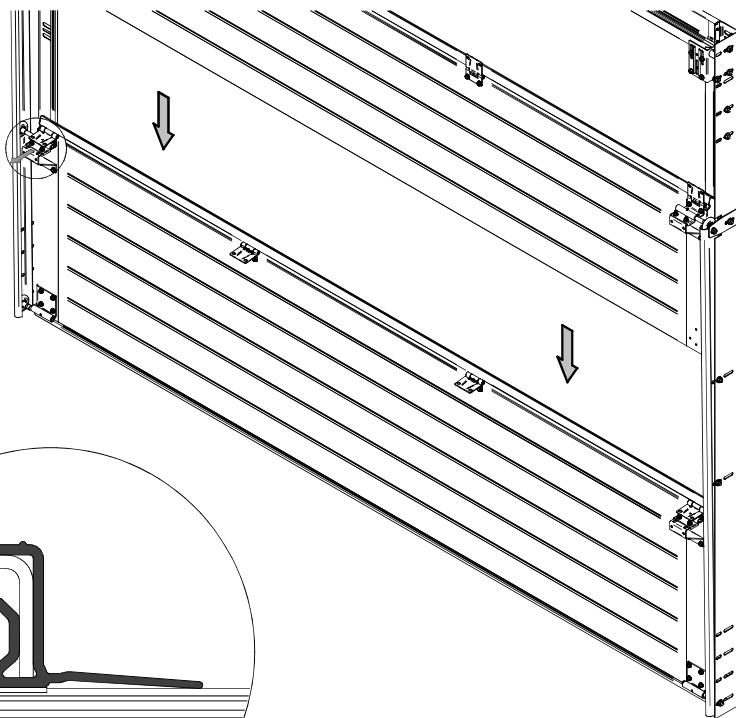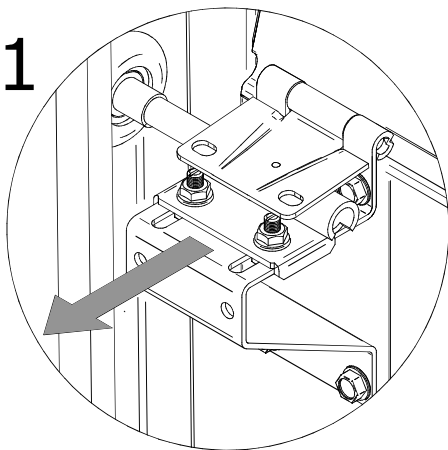




2






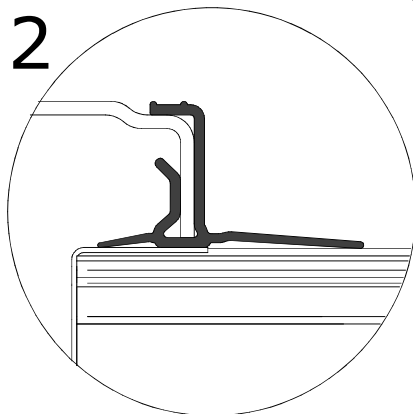





3



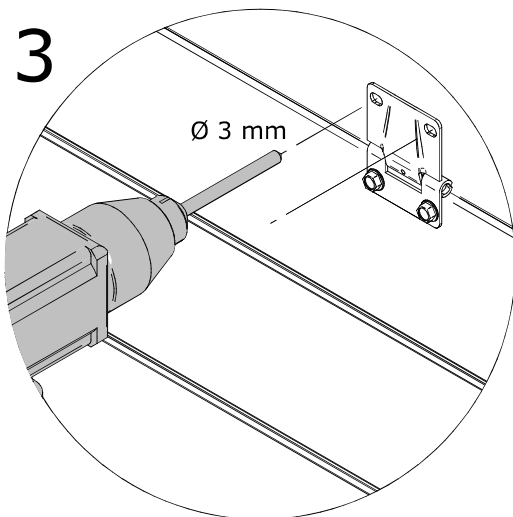







4

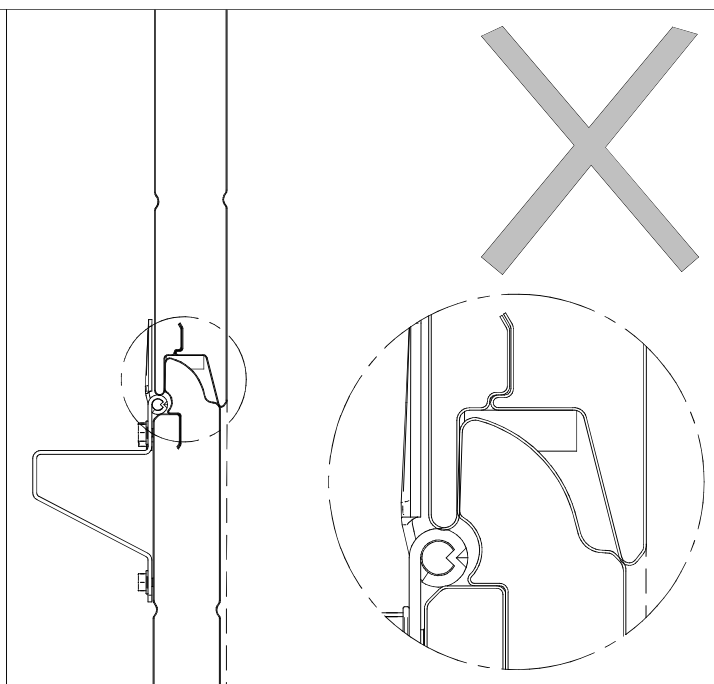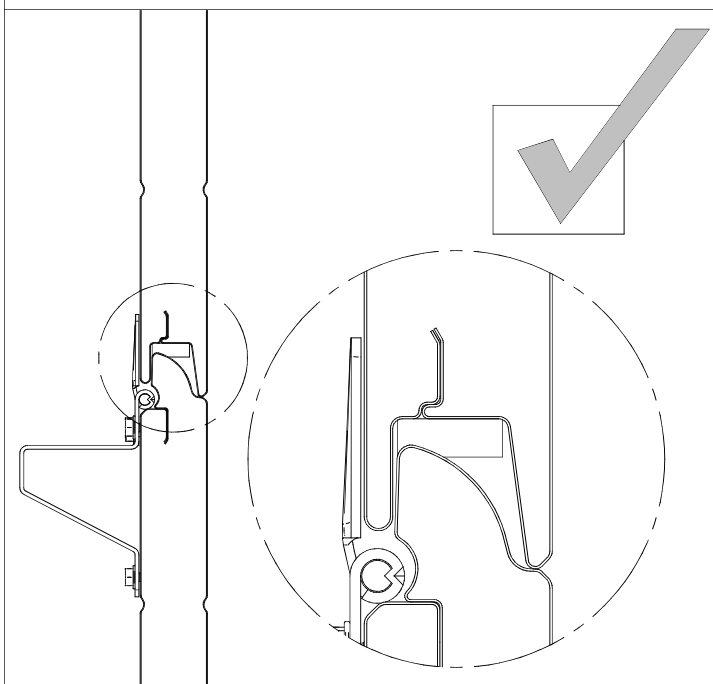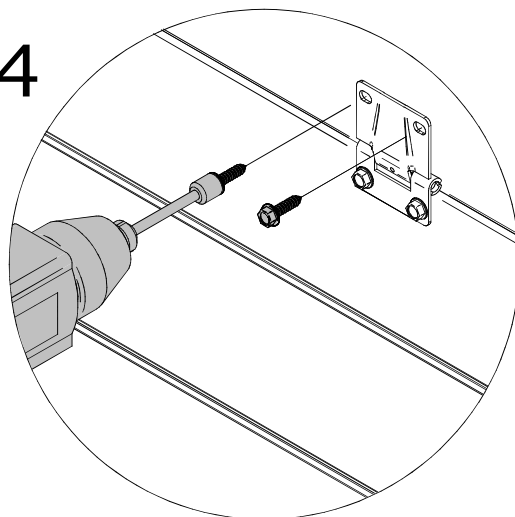

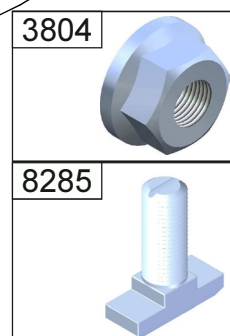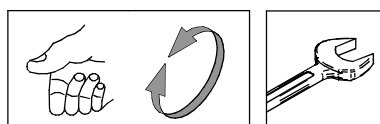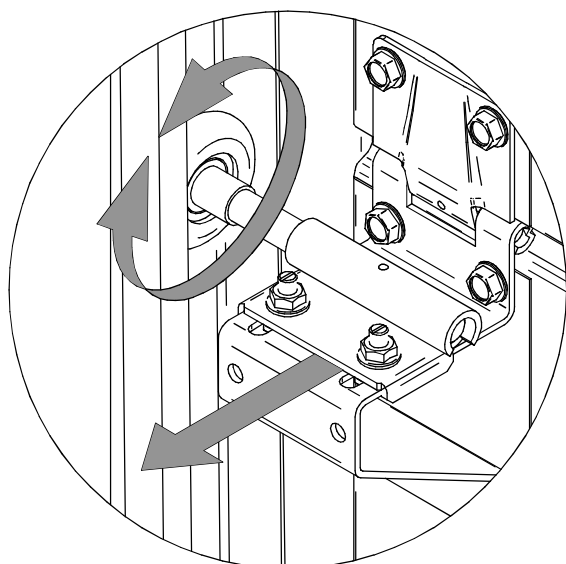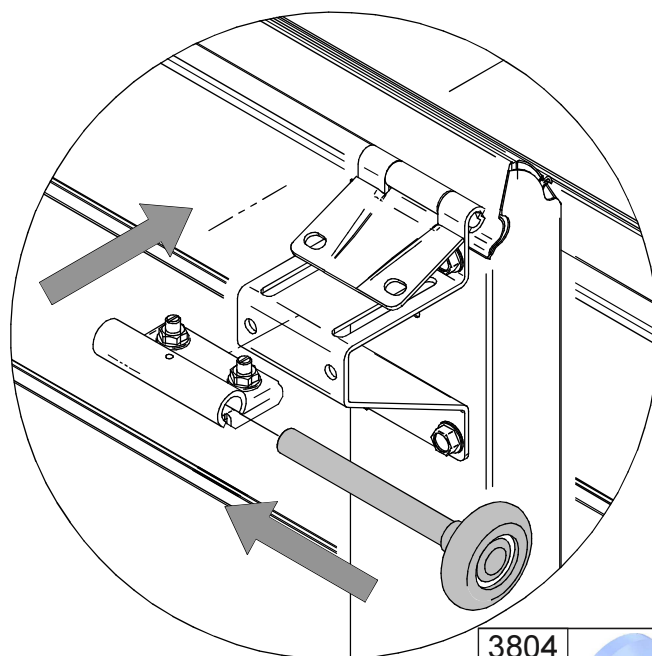
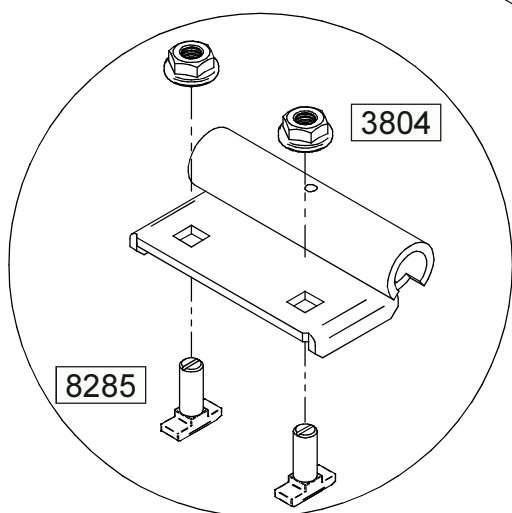
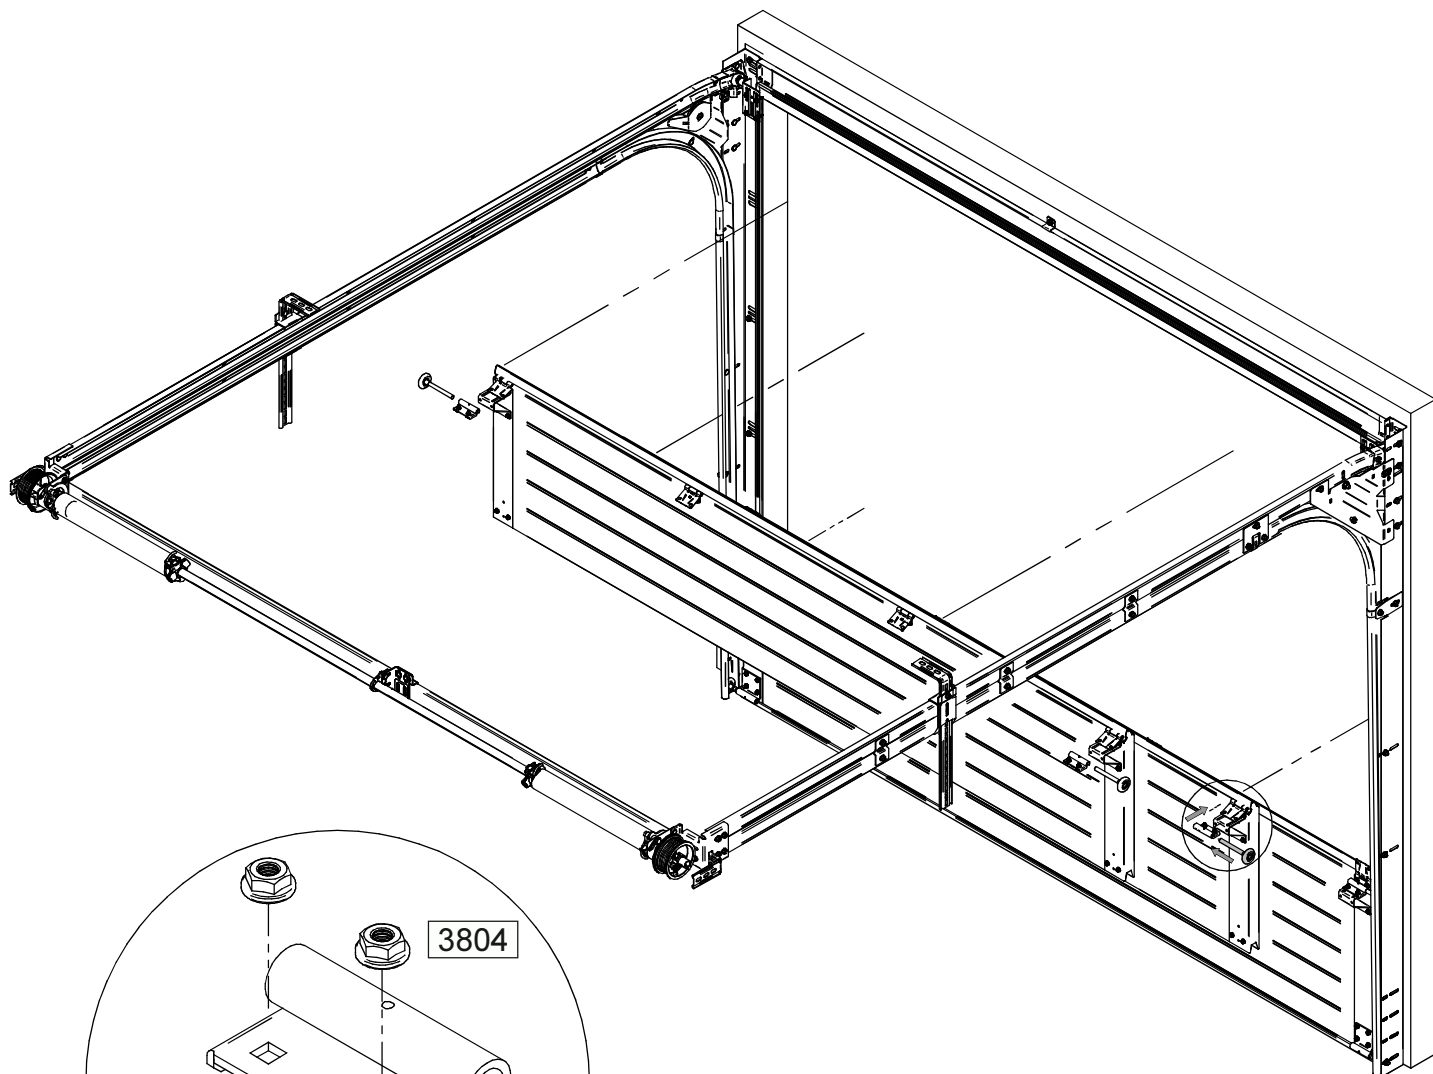







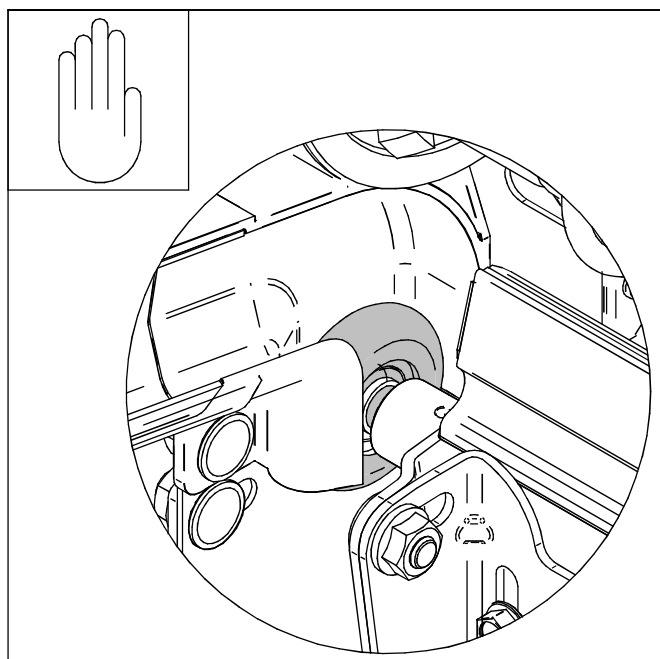
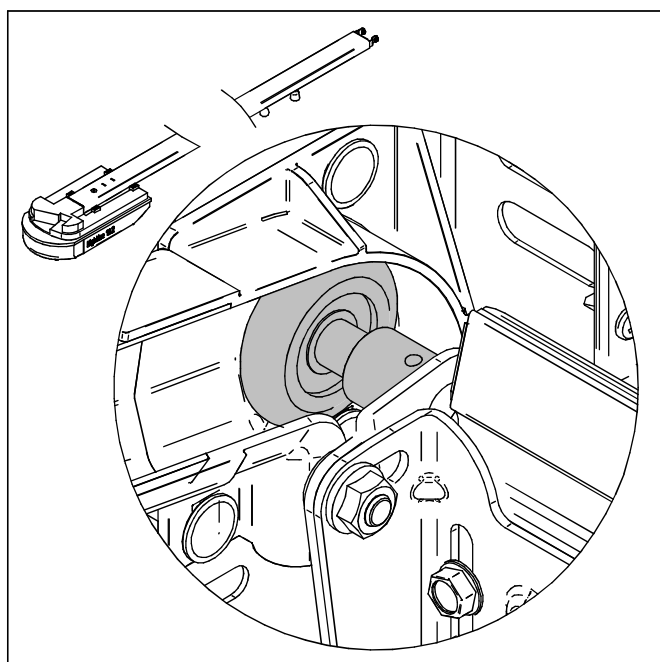
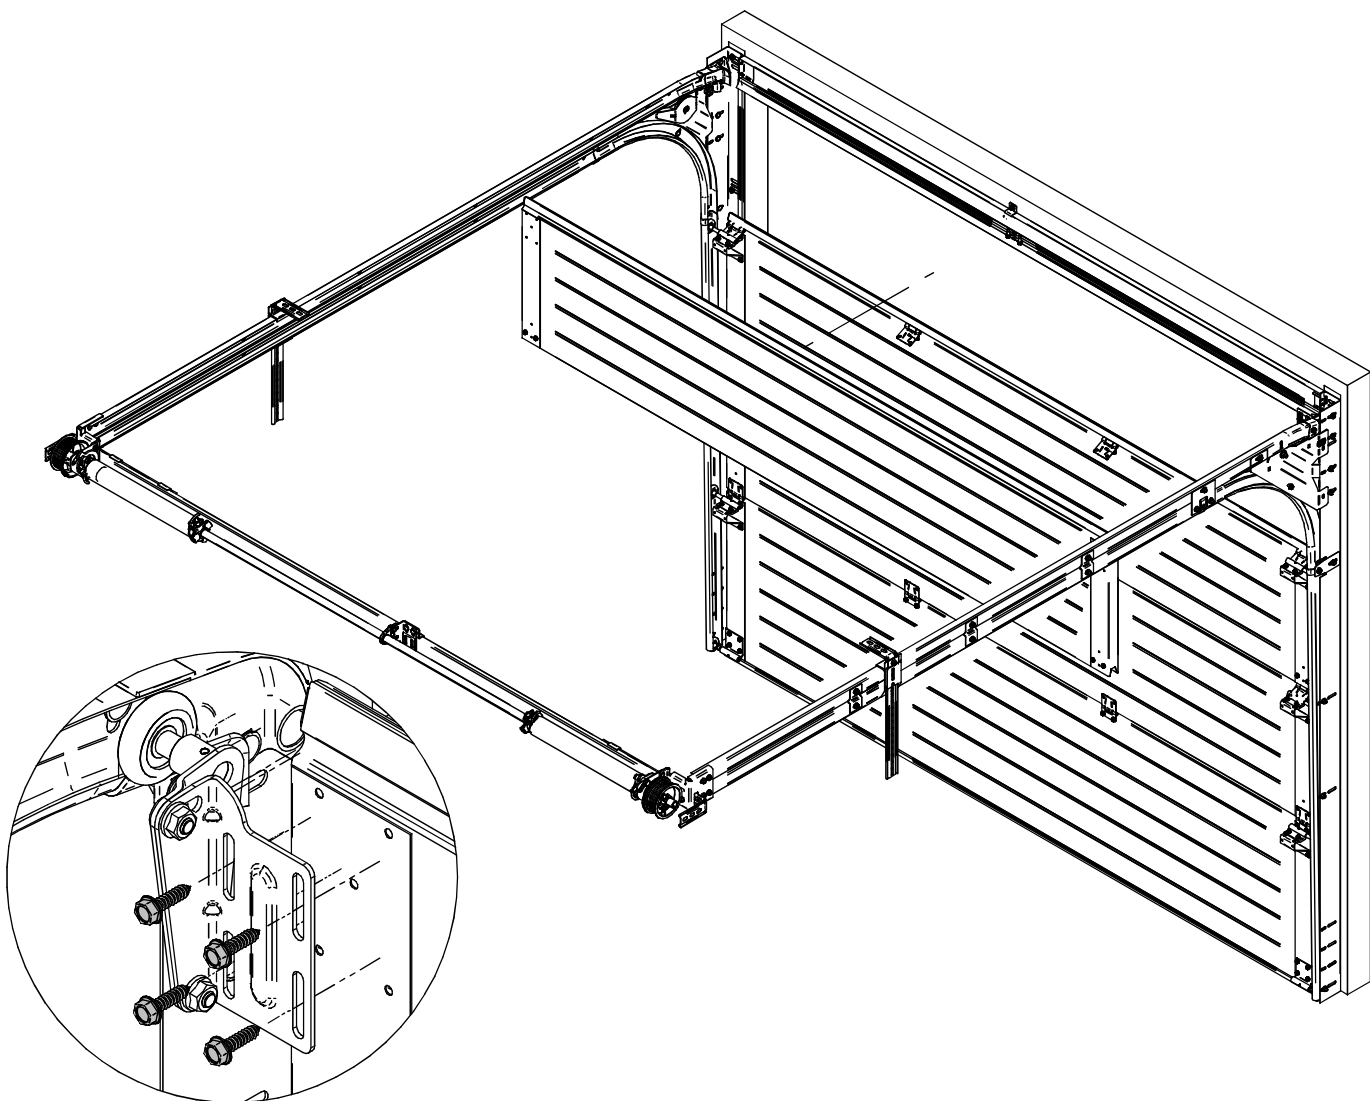






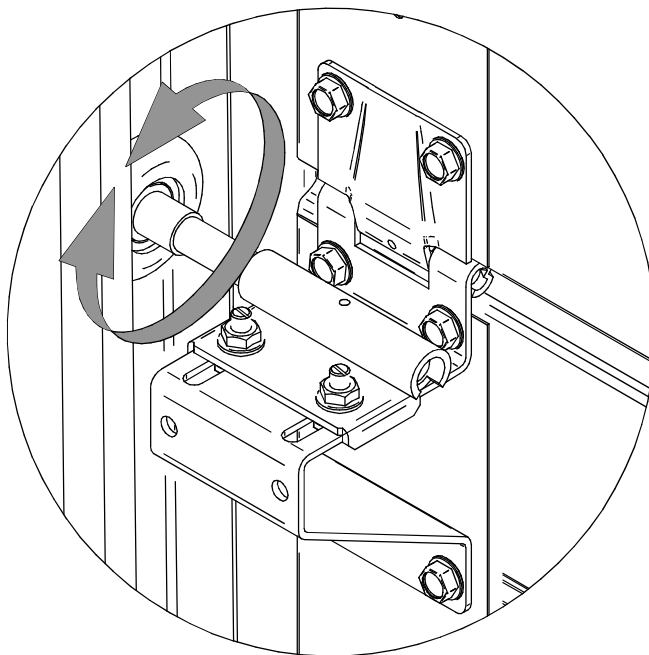
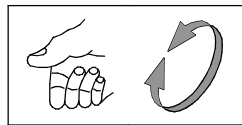
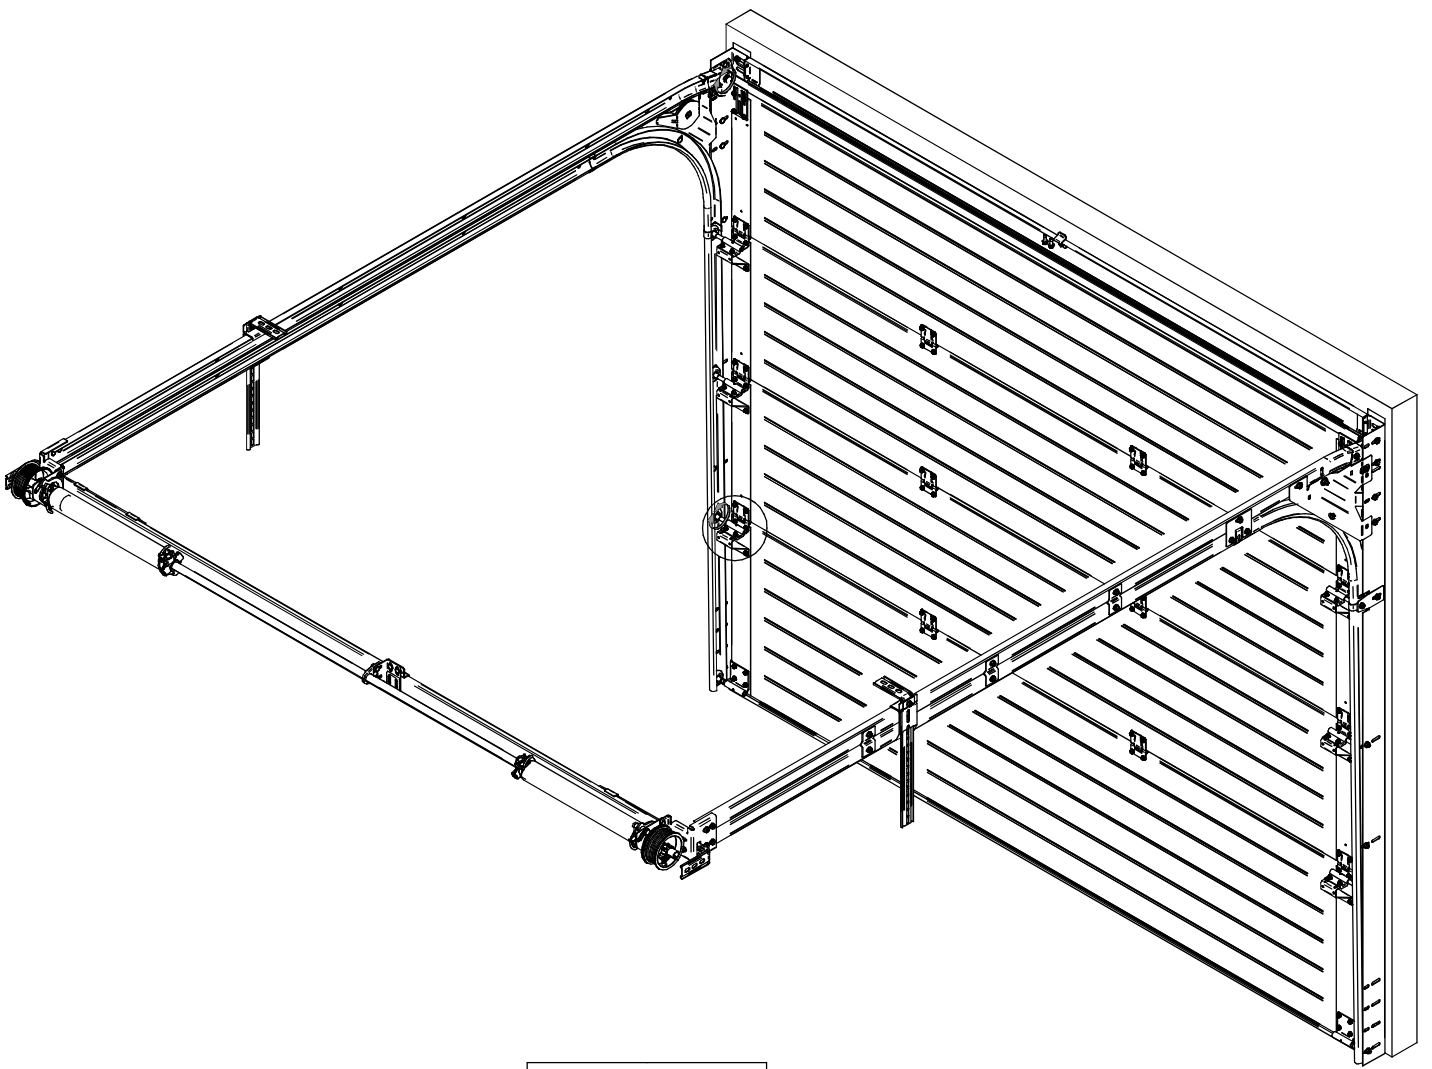


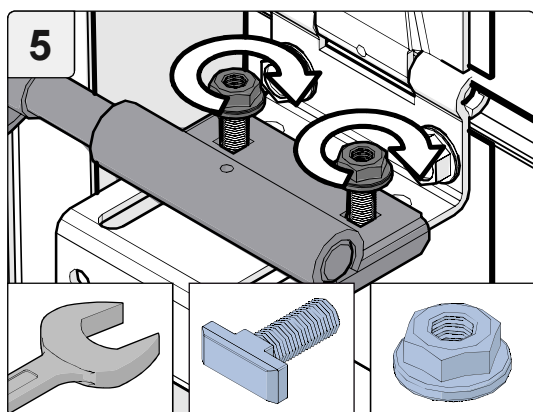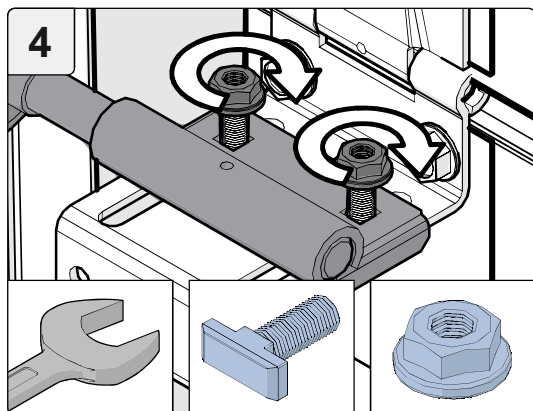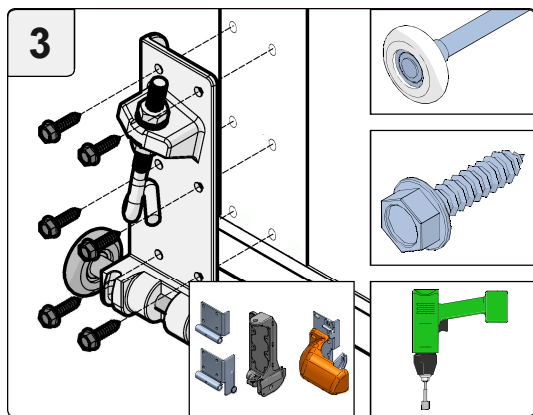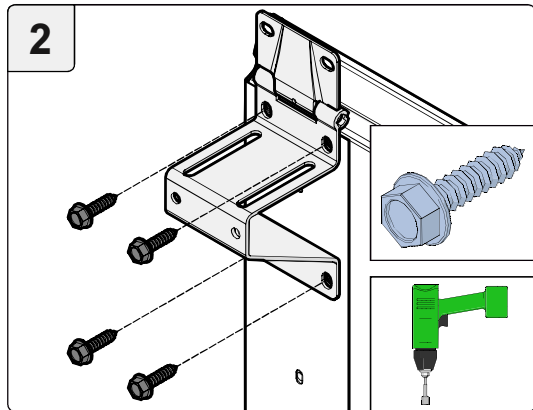
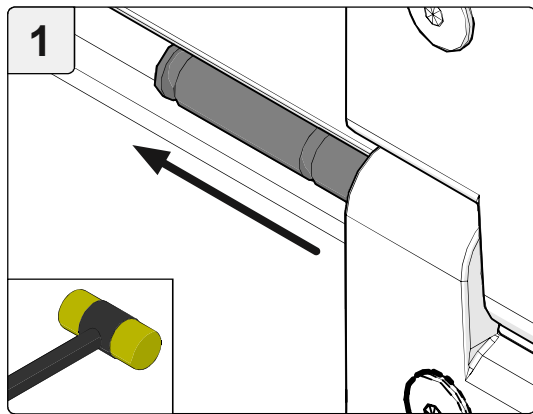




OPTION


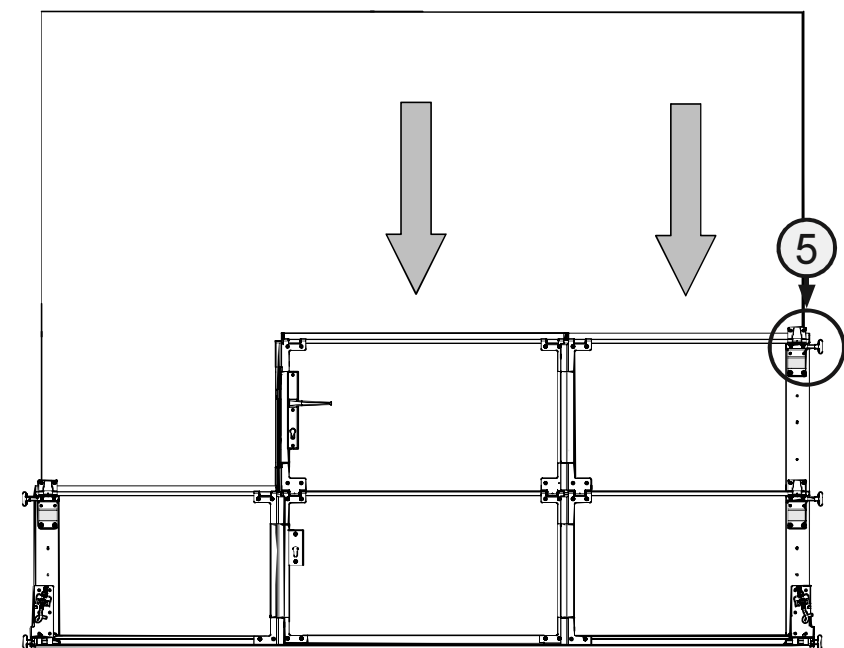
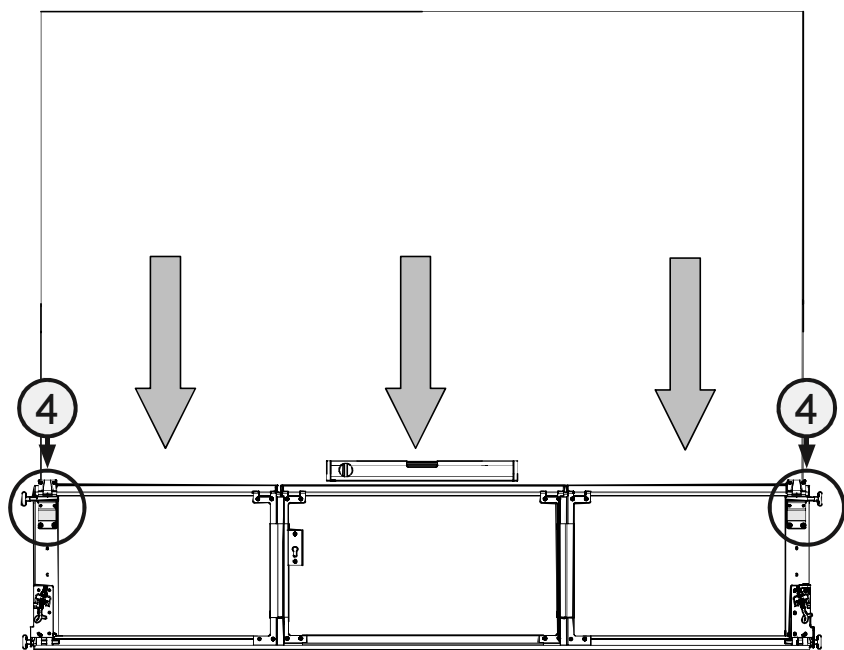
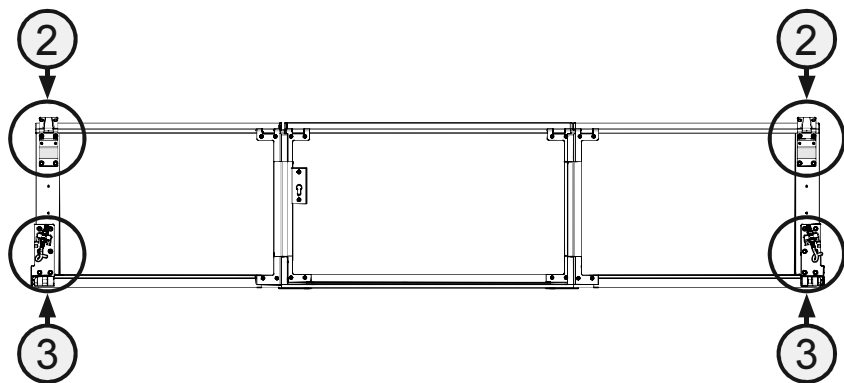


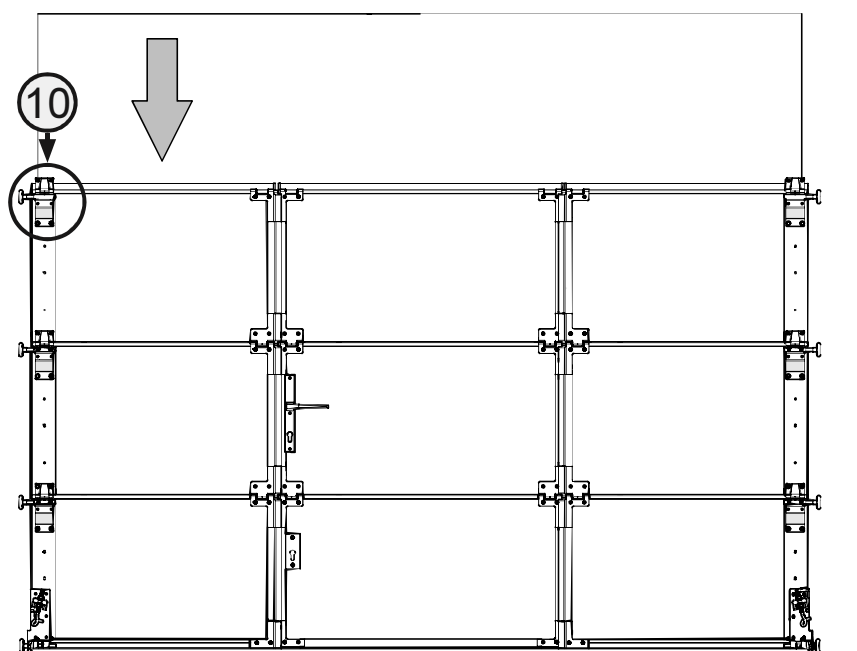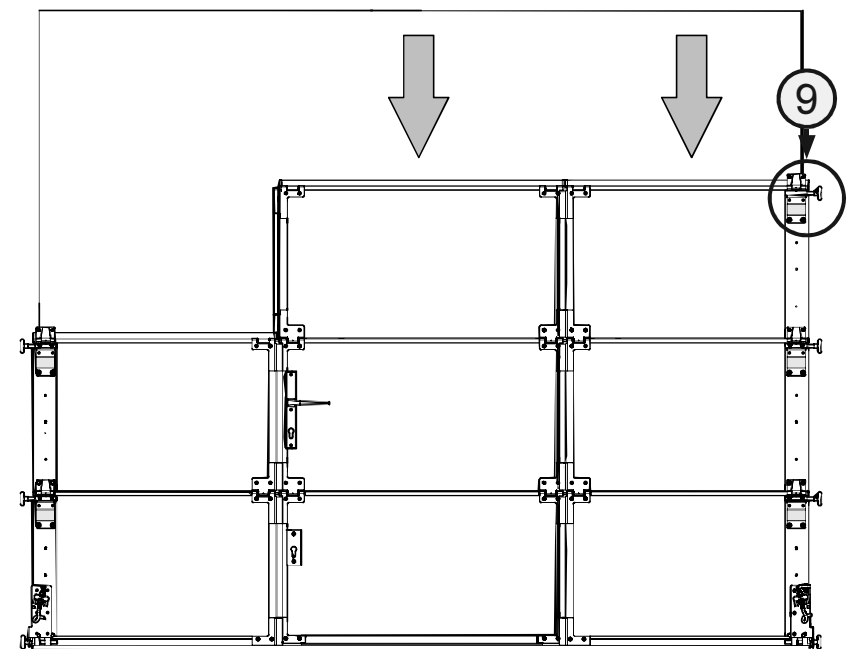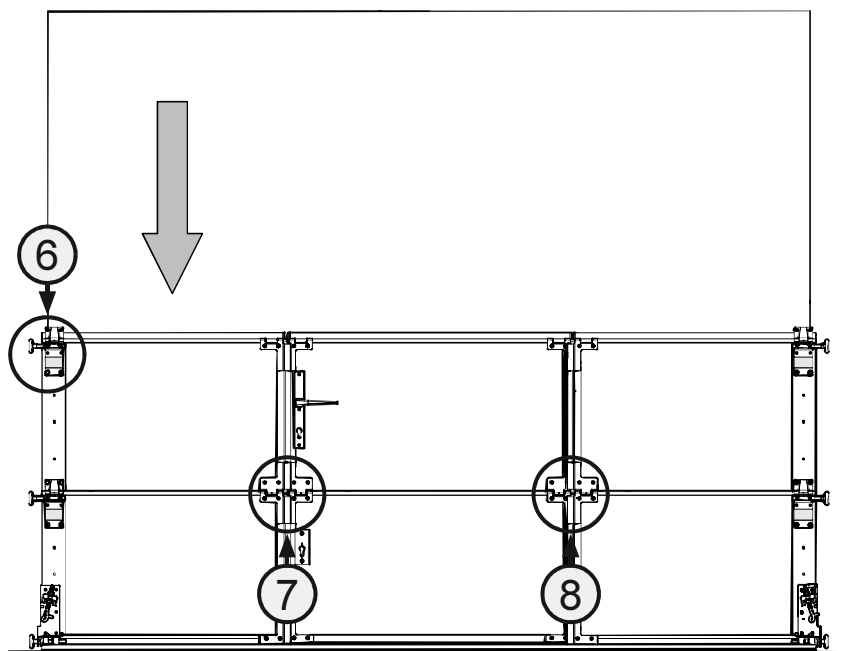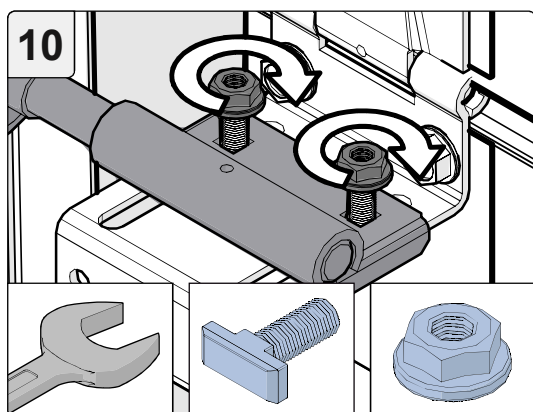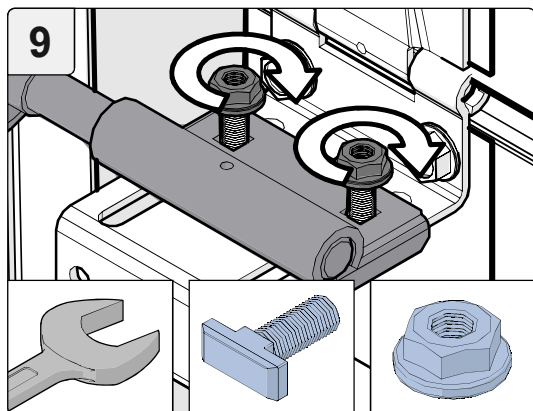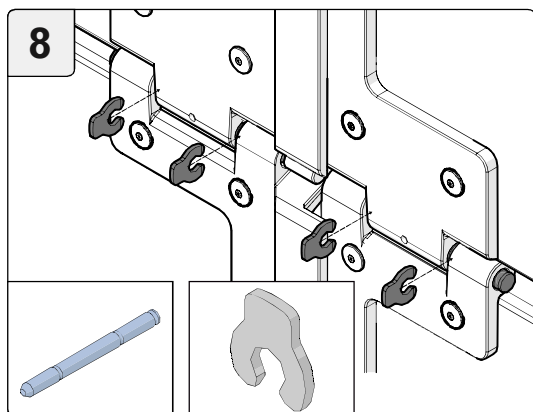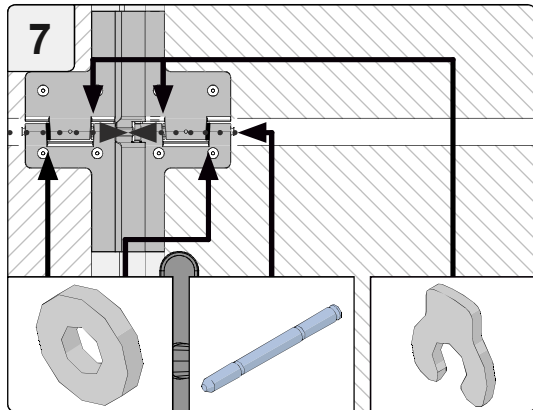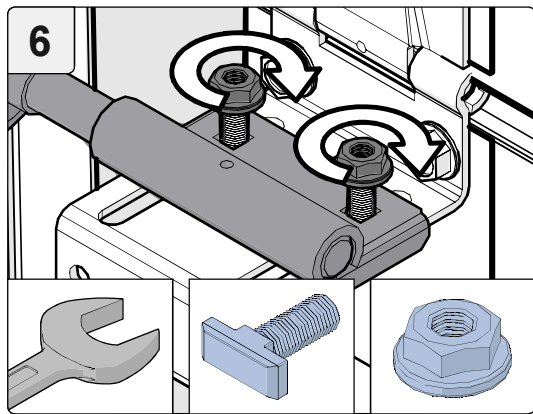

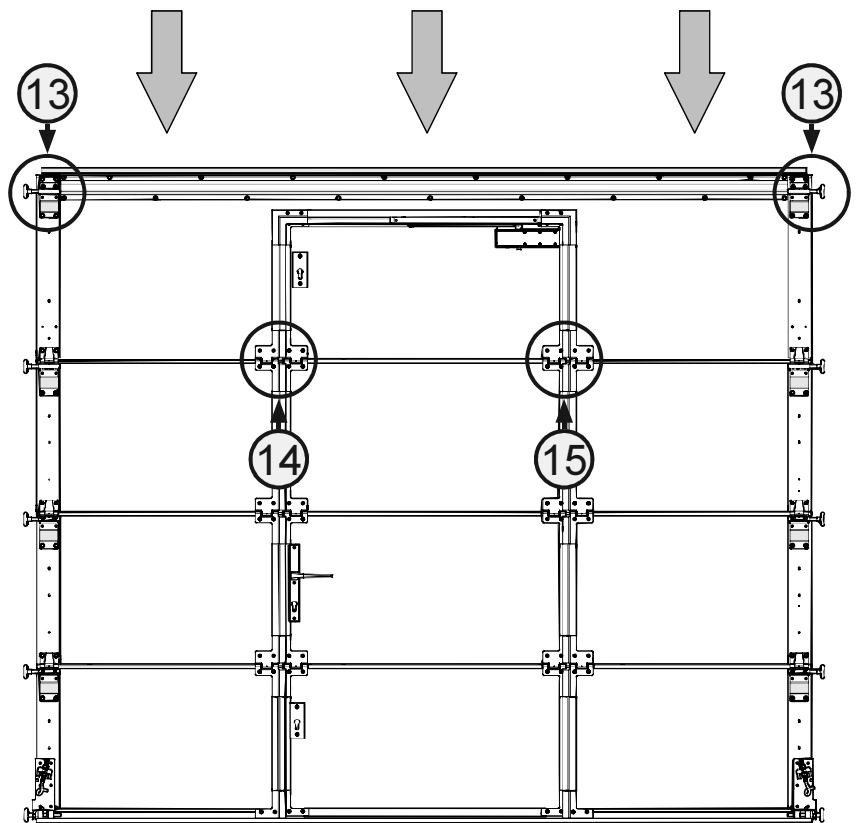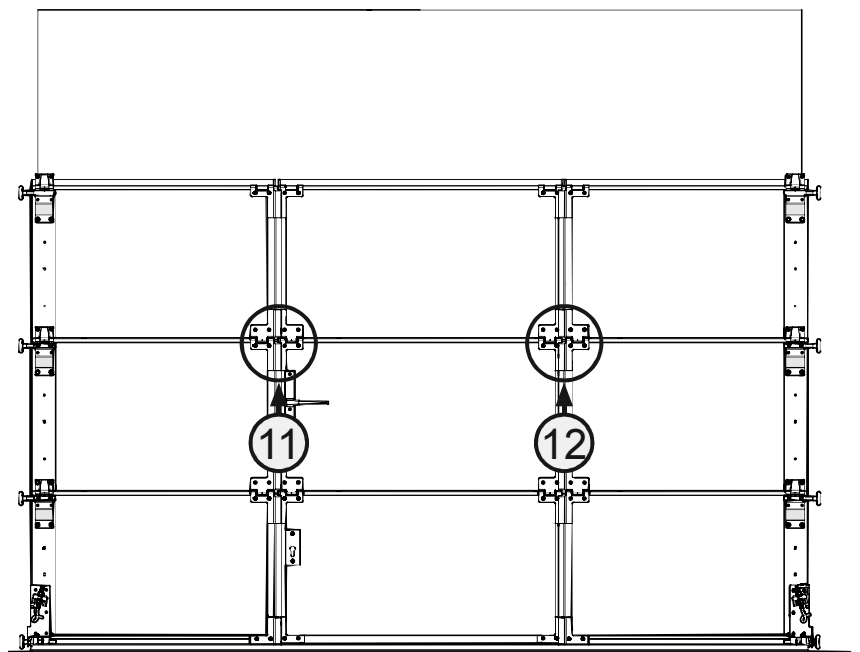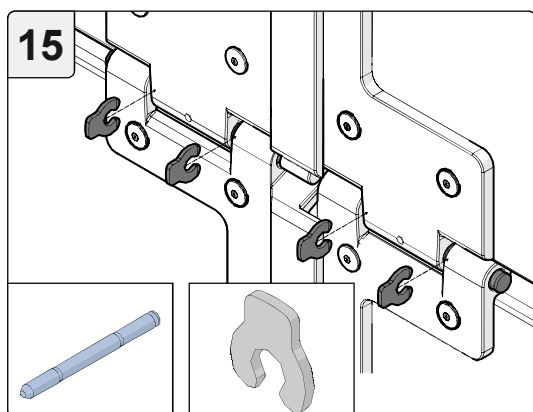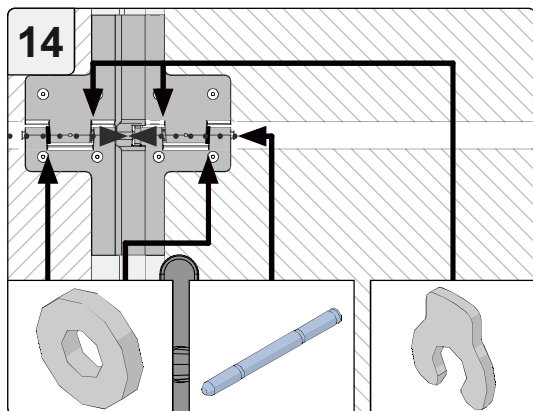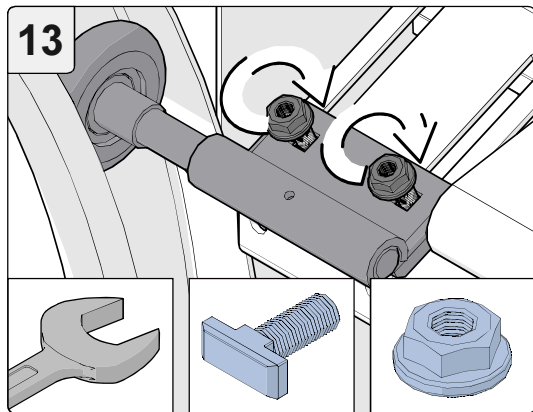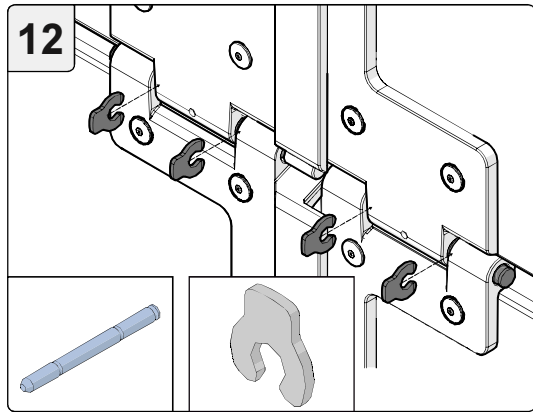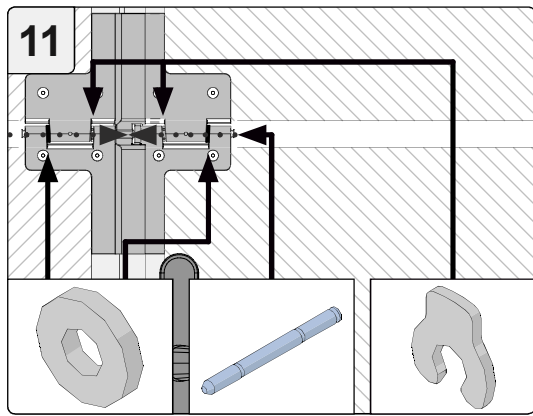

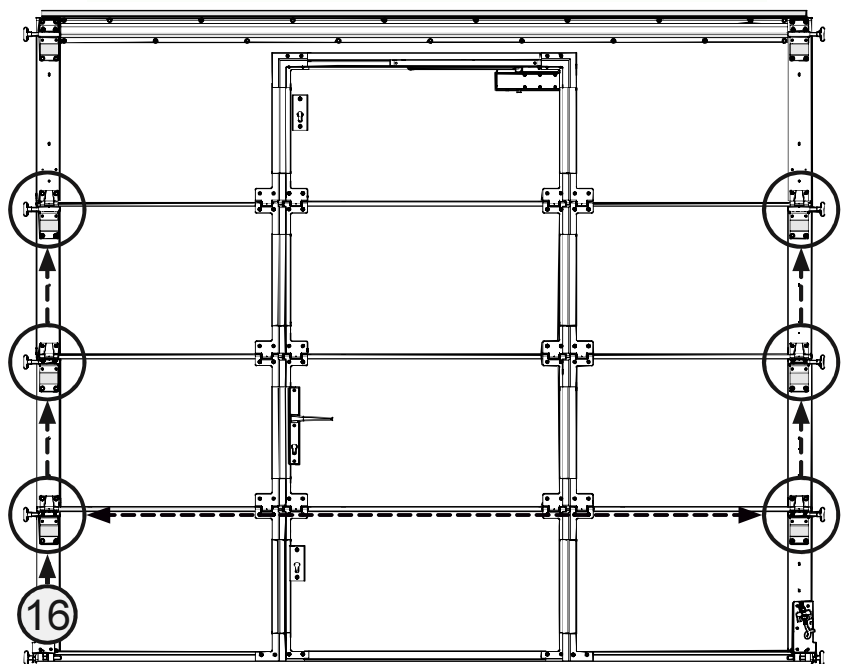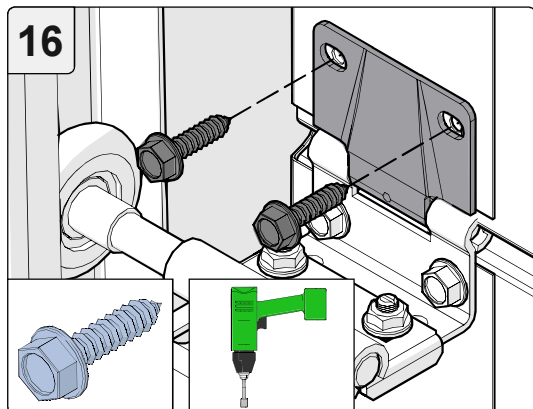

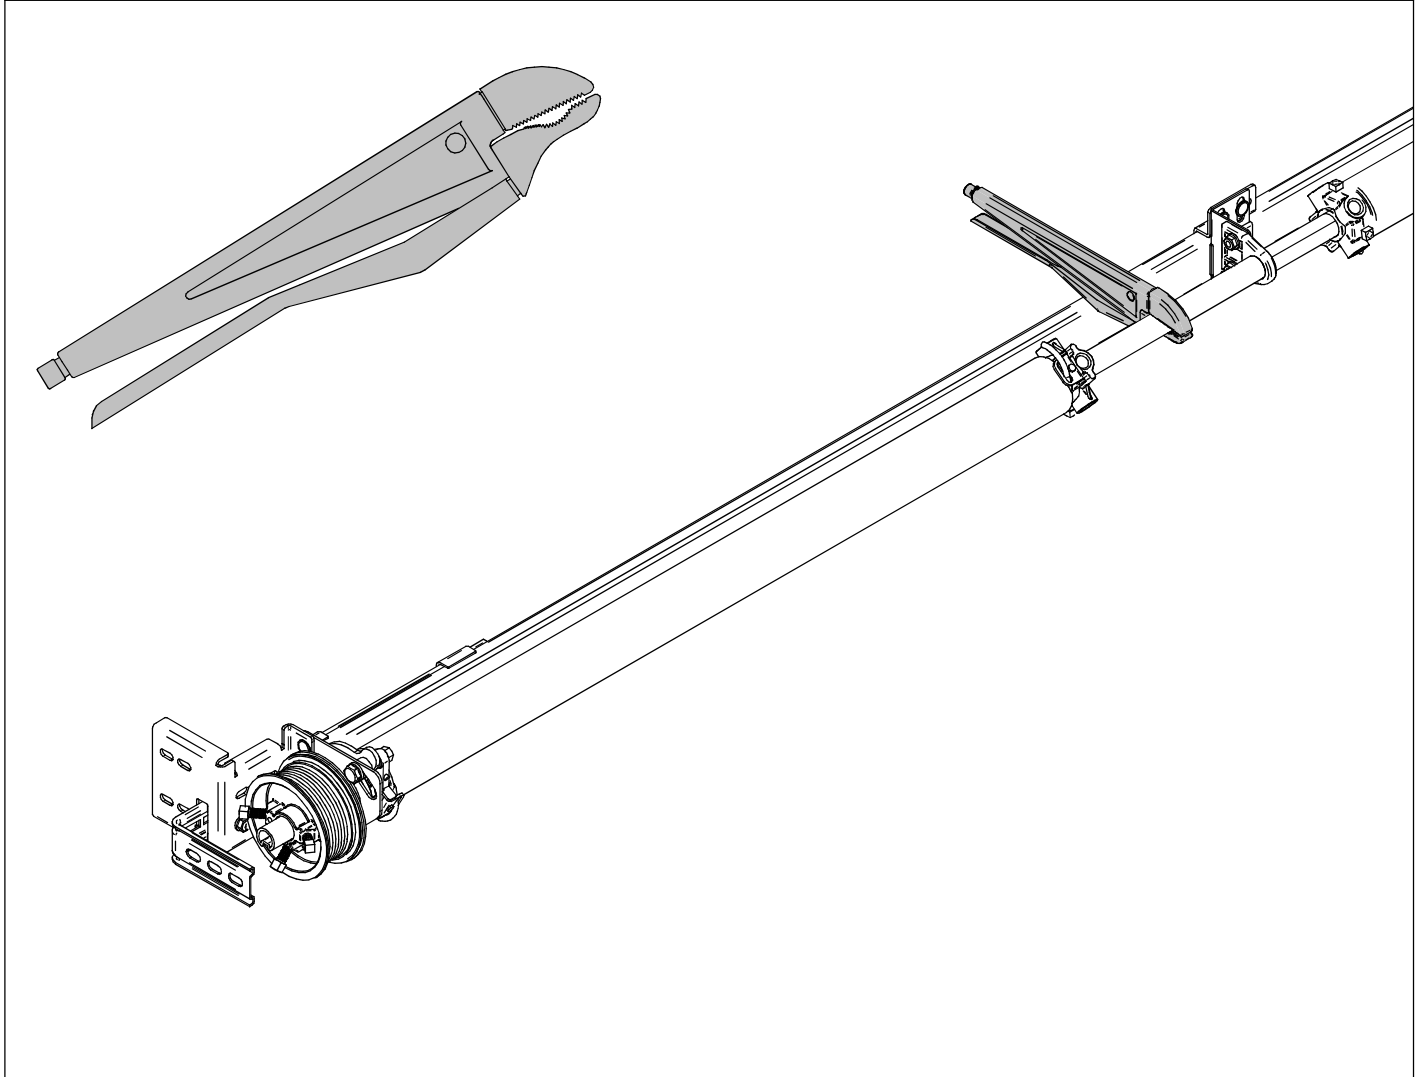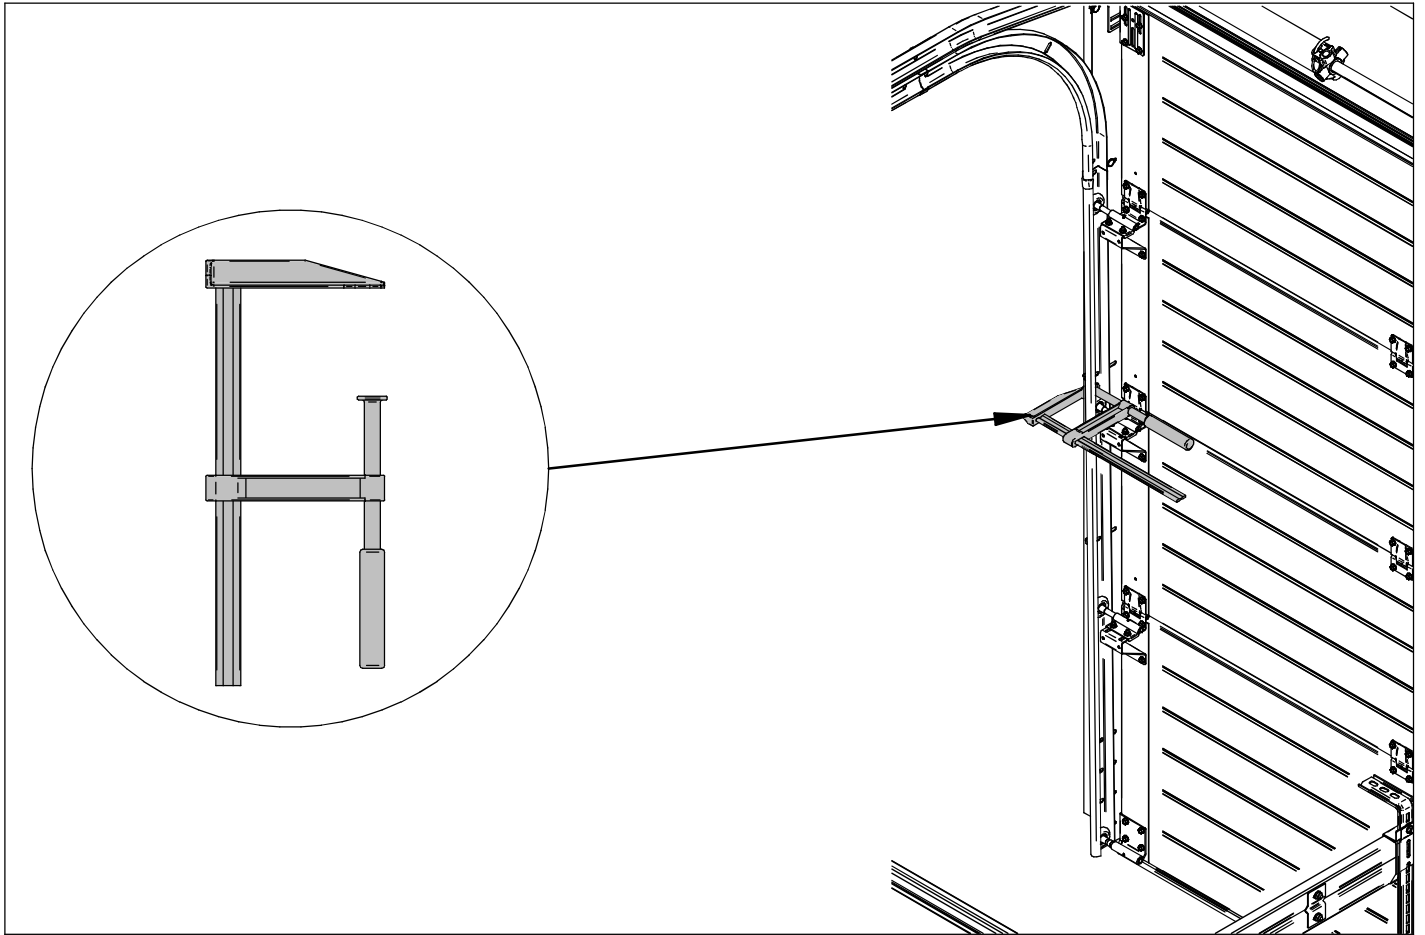

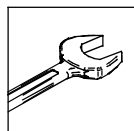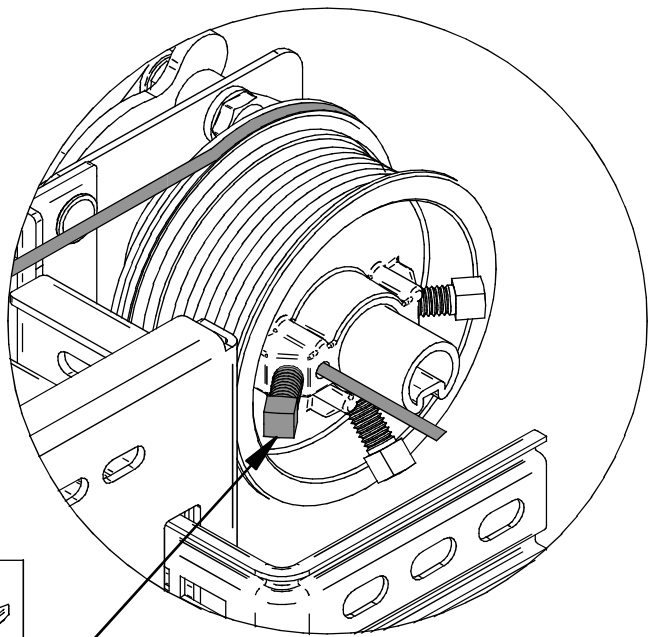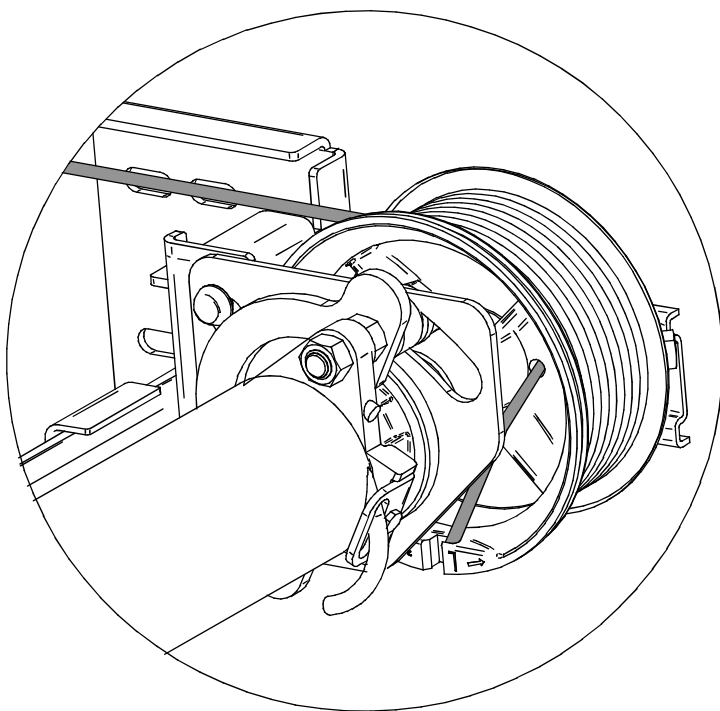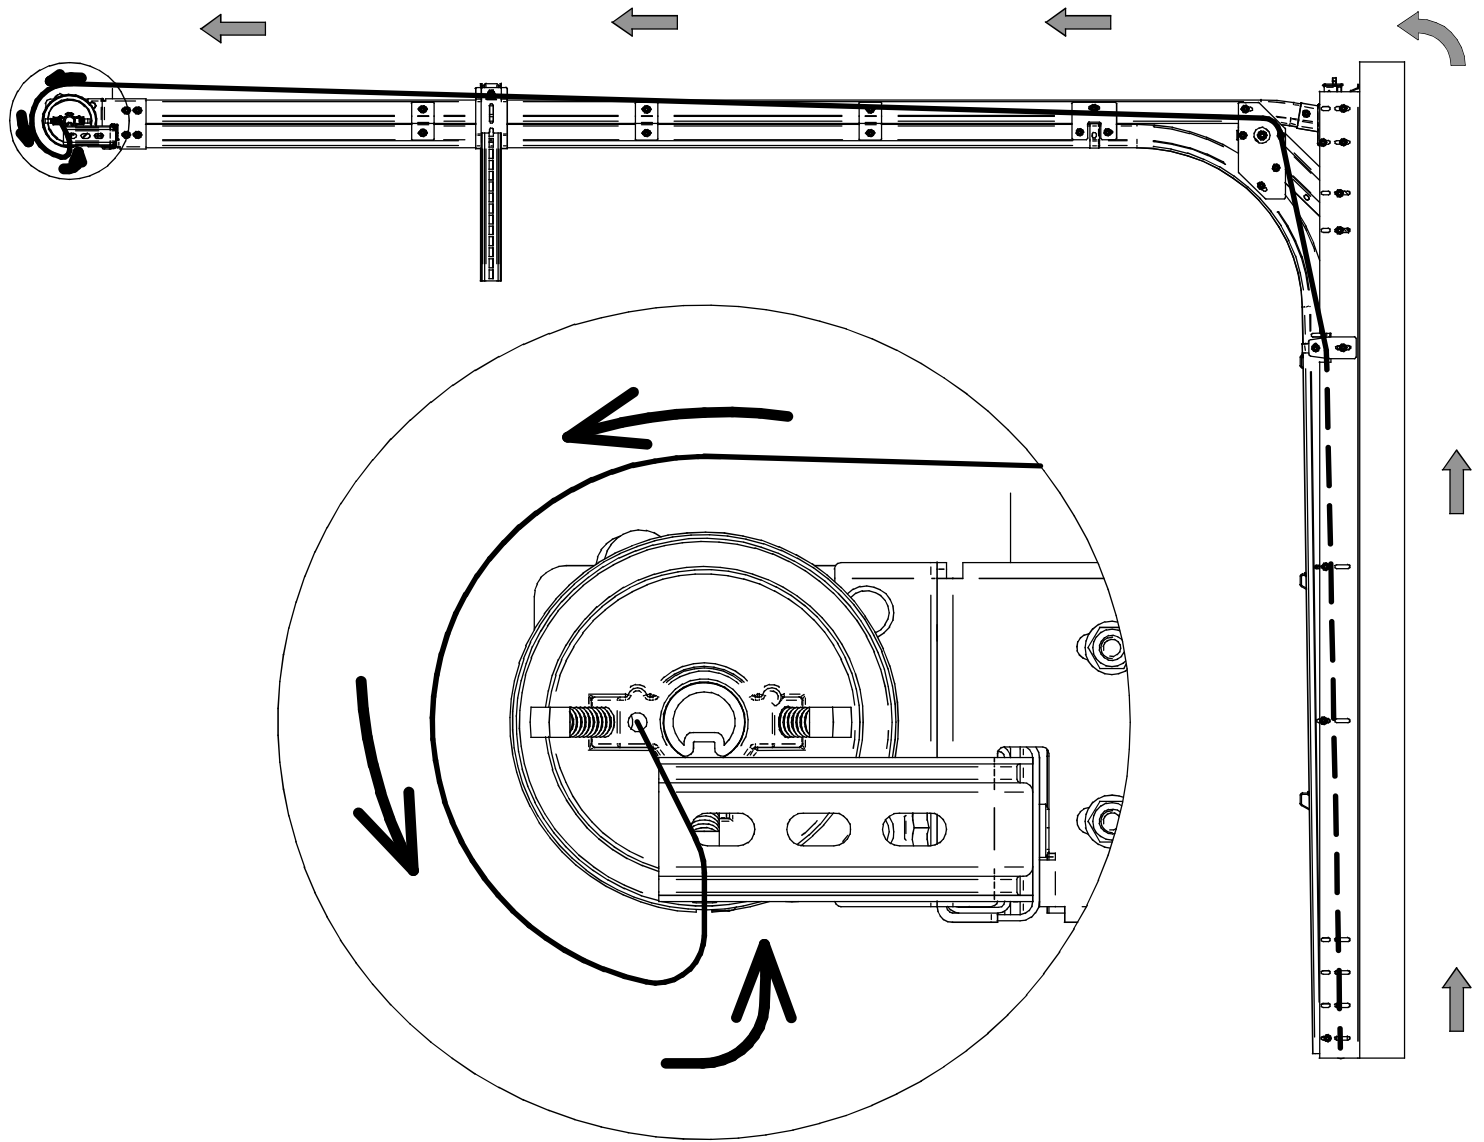


PW Bon Hardware Prive										P A /	
Aant	Deurtype	DMB	DMH	Secies	Velden	Beslag	Gewicht	Turns	Klant	Klant referentie:	Transport
			x					8.2			
Aant	Eenheid	Art. nr.	Artikel omschrijving				Zakje	Lengte	Verpakt / Controle		
4	per stuk	0300	Boorparker 4.2x13 DIN7504N RAL9010 EV						☐	☐	
2	per stuk	0459	Afstandbus PVC 26 x 17 mm / tbv 1"as						☐	☐	


Turns x 360°







VEER / FEDER / SPRING / RESSORT < 152 mm






VEER / FEDER / SPRING / RESSORT < 67 mm









STAAL / STAHL / STEEL / ACIER 52

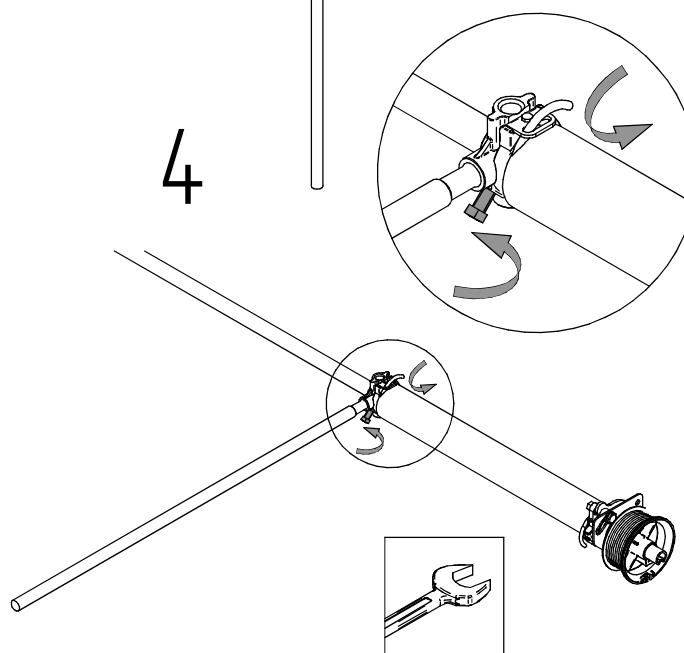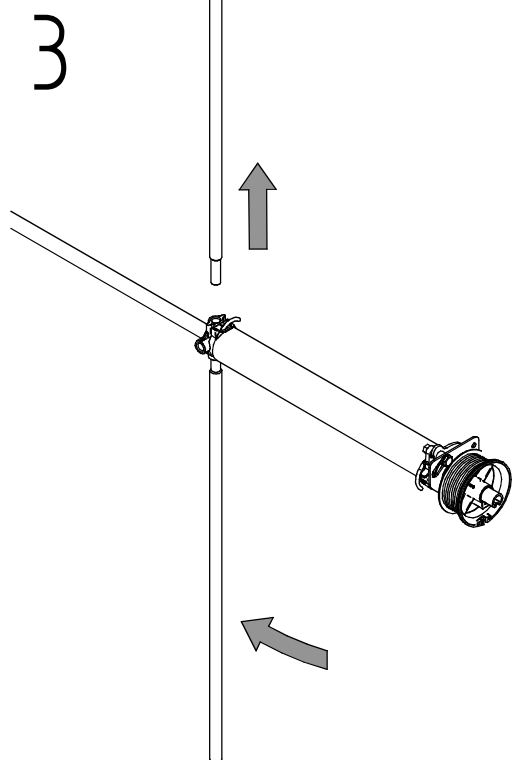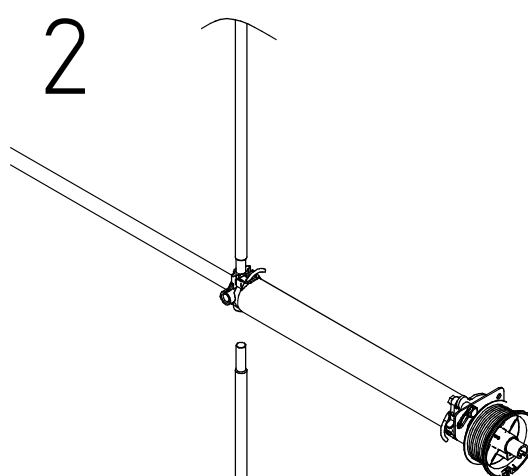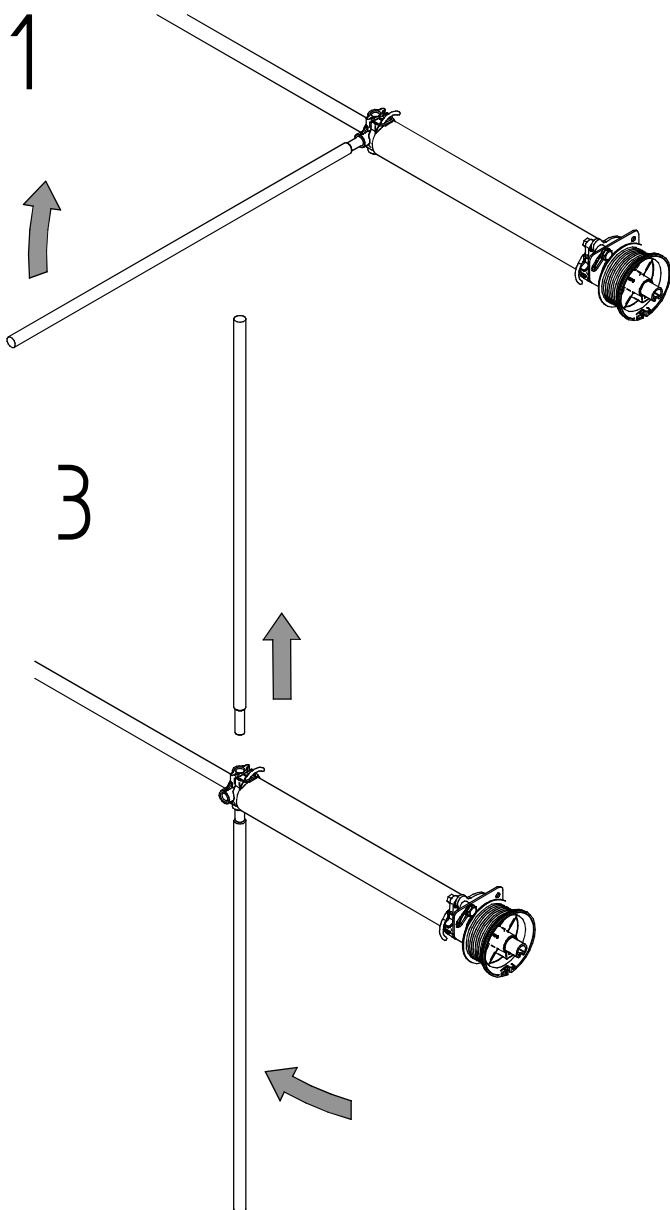


NL: Correcte wijze vastzetten van spankop
EN: Correct fastening of winding plug
DE: Richtige montage Feder spannkopf
FR: Fixation correcte du mandrin de tension


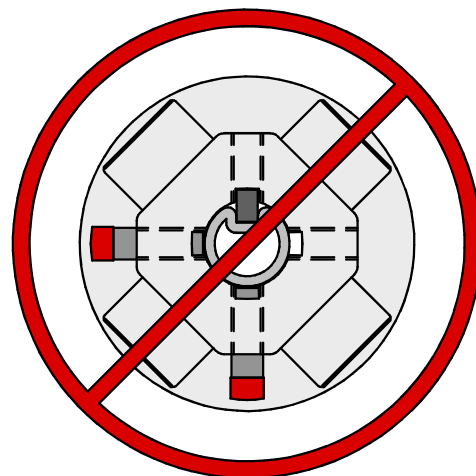
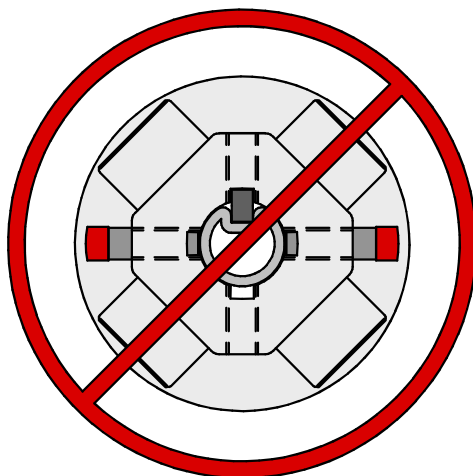
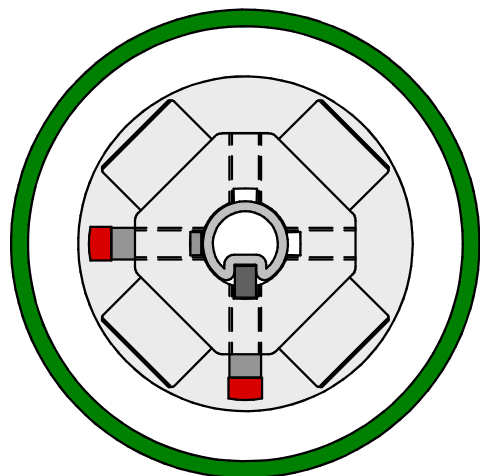


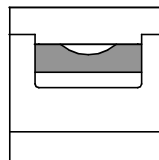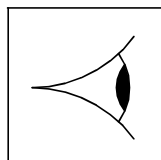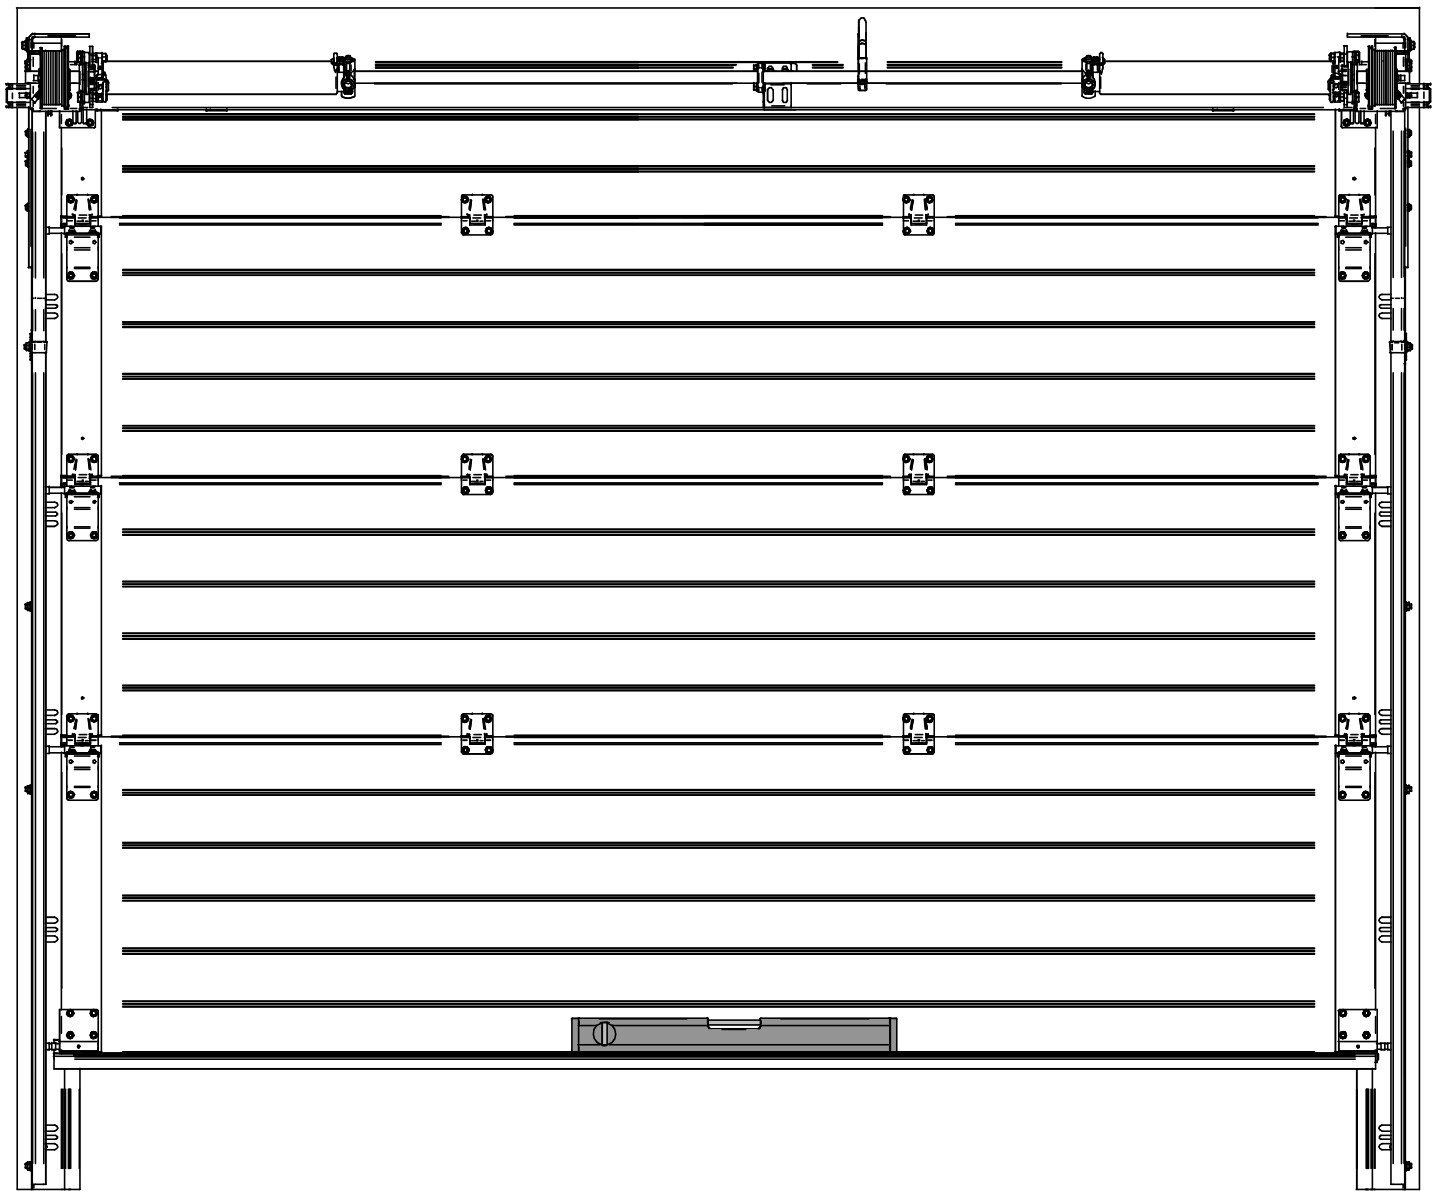

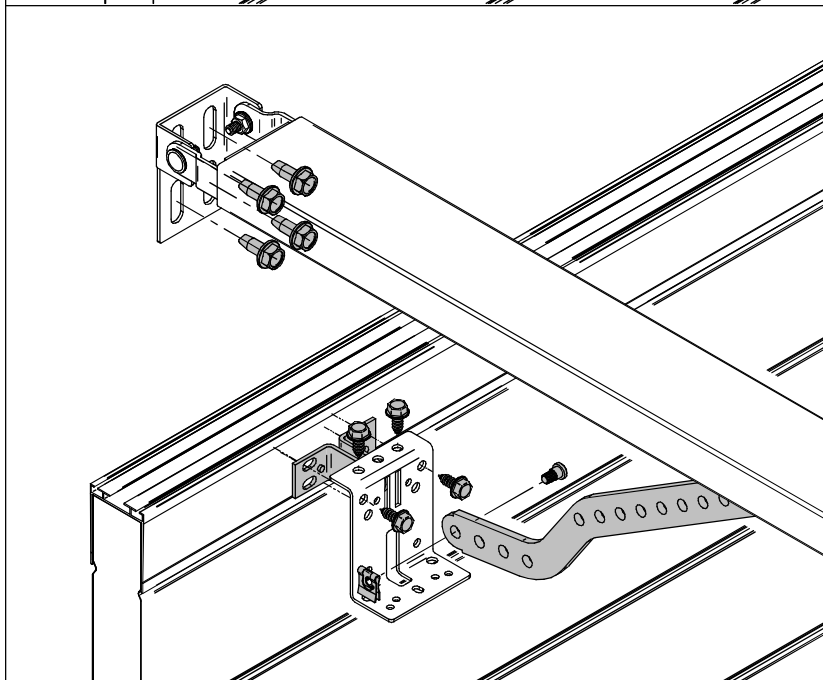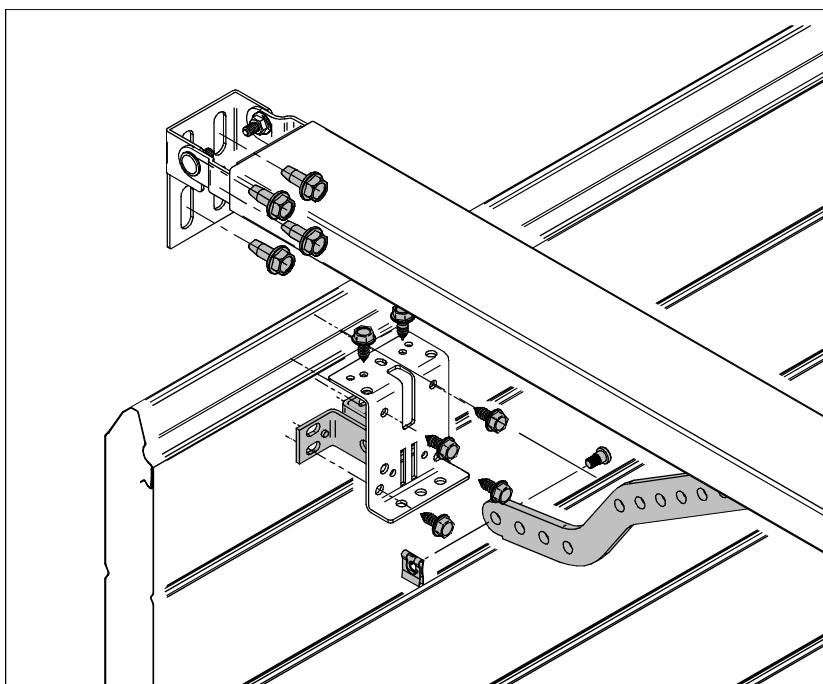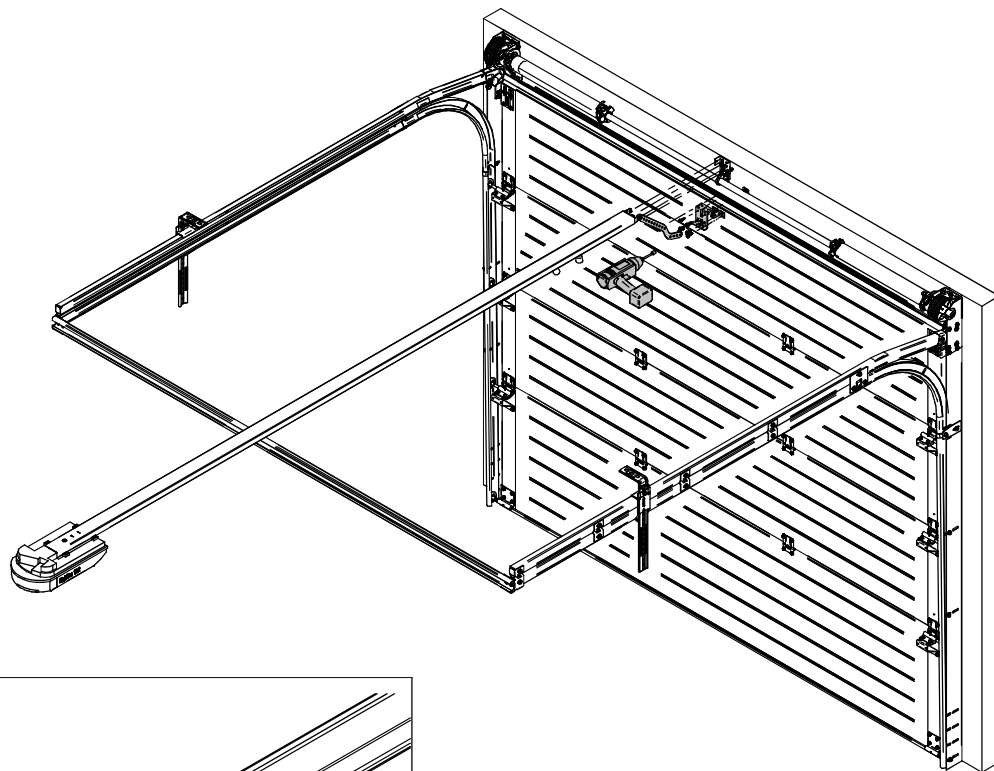


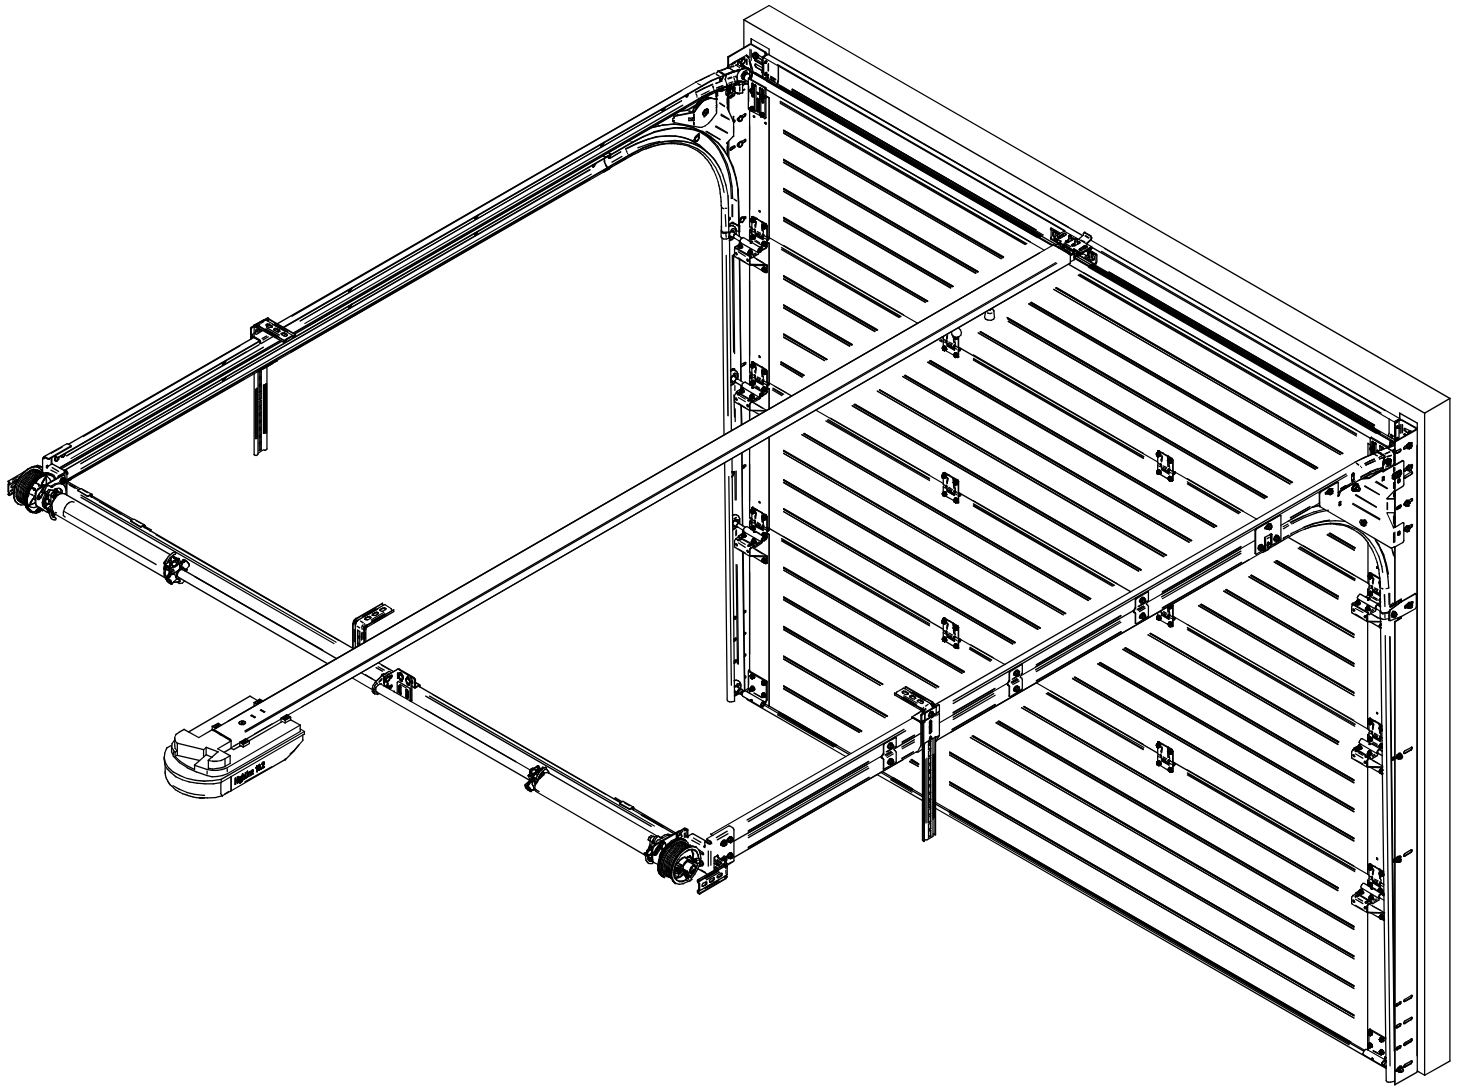


DMB = ≥ 4500

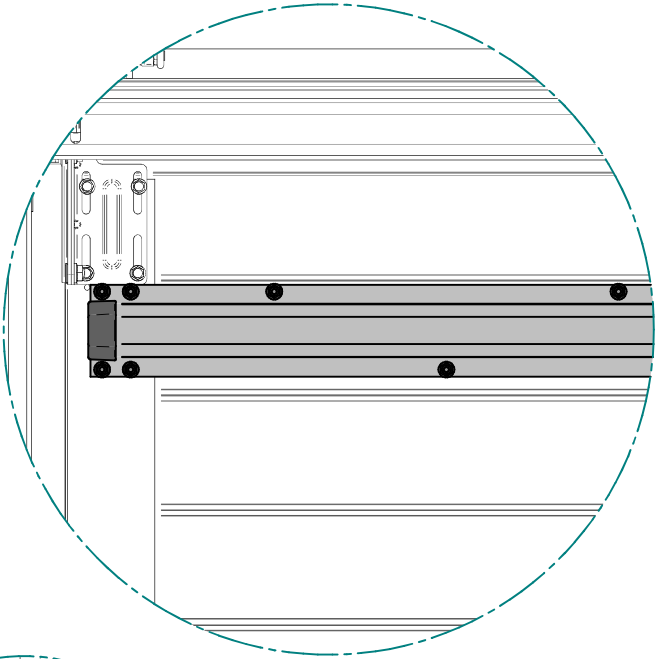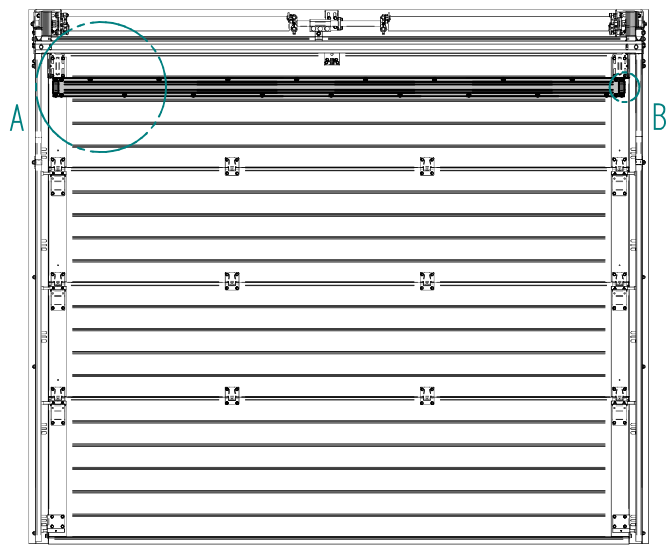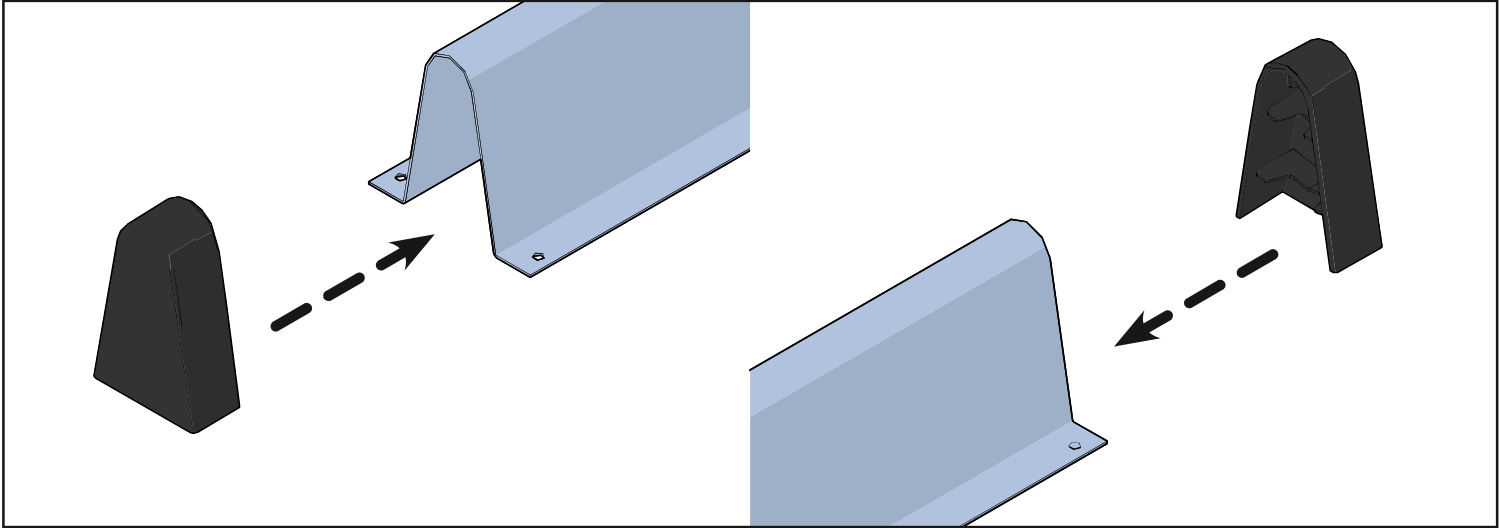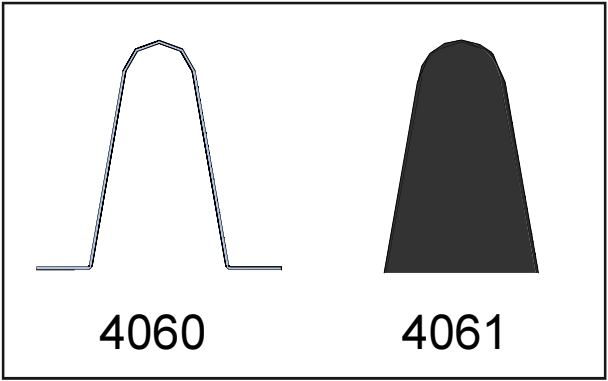


DETAIL A

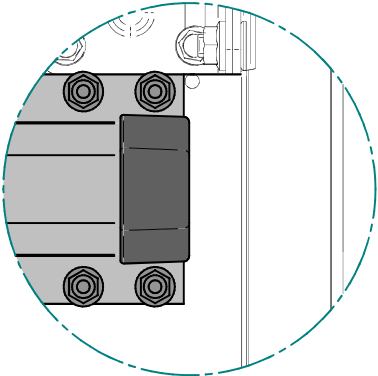

DETAIL B

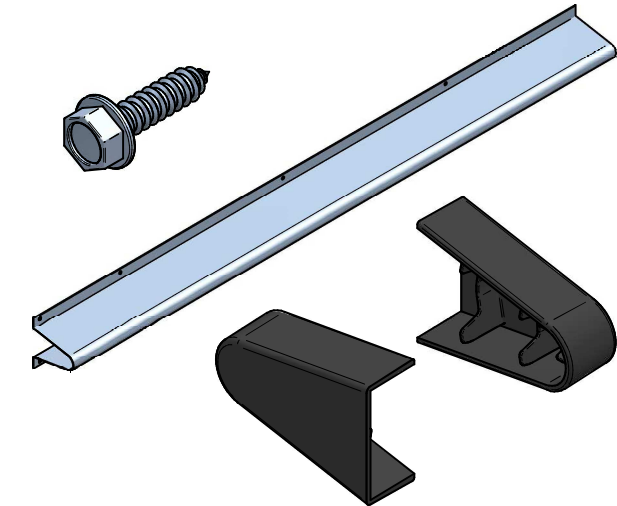

Options

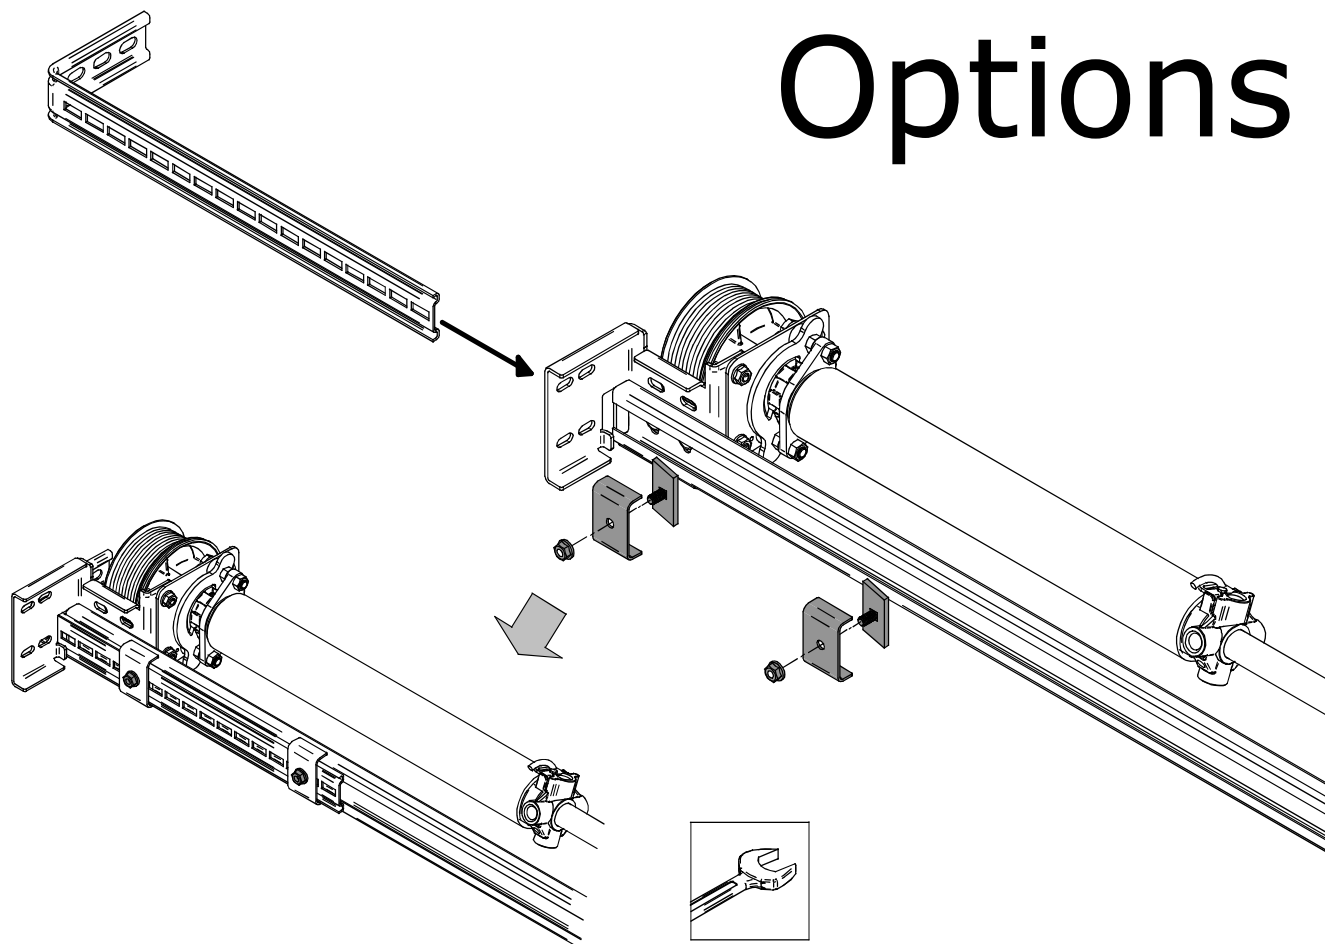

3639

